

AERODROME  
CHART - ICAO

ARP  
61°38'49"N  
050°50'42"E


ELEV  
339 / 103m

SIVKAR START 124.600

SYKTYVKAR, RUSSIA

SYKTYVKAR

PZ - 90.11 coordinates

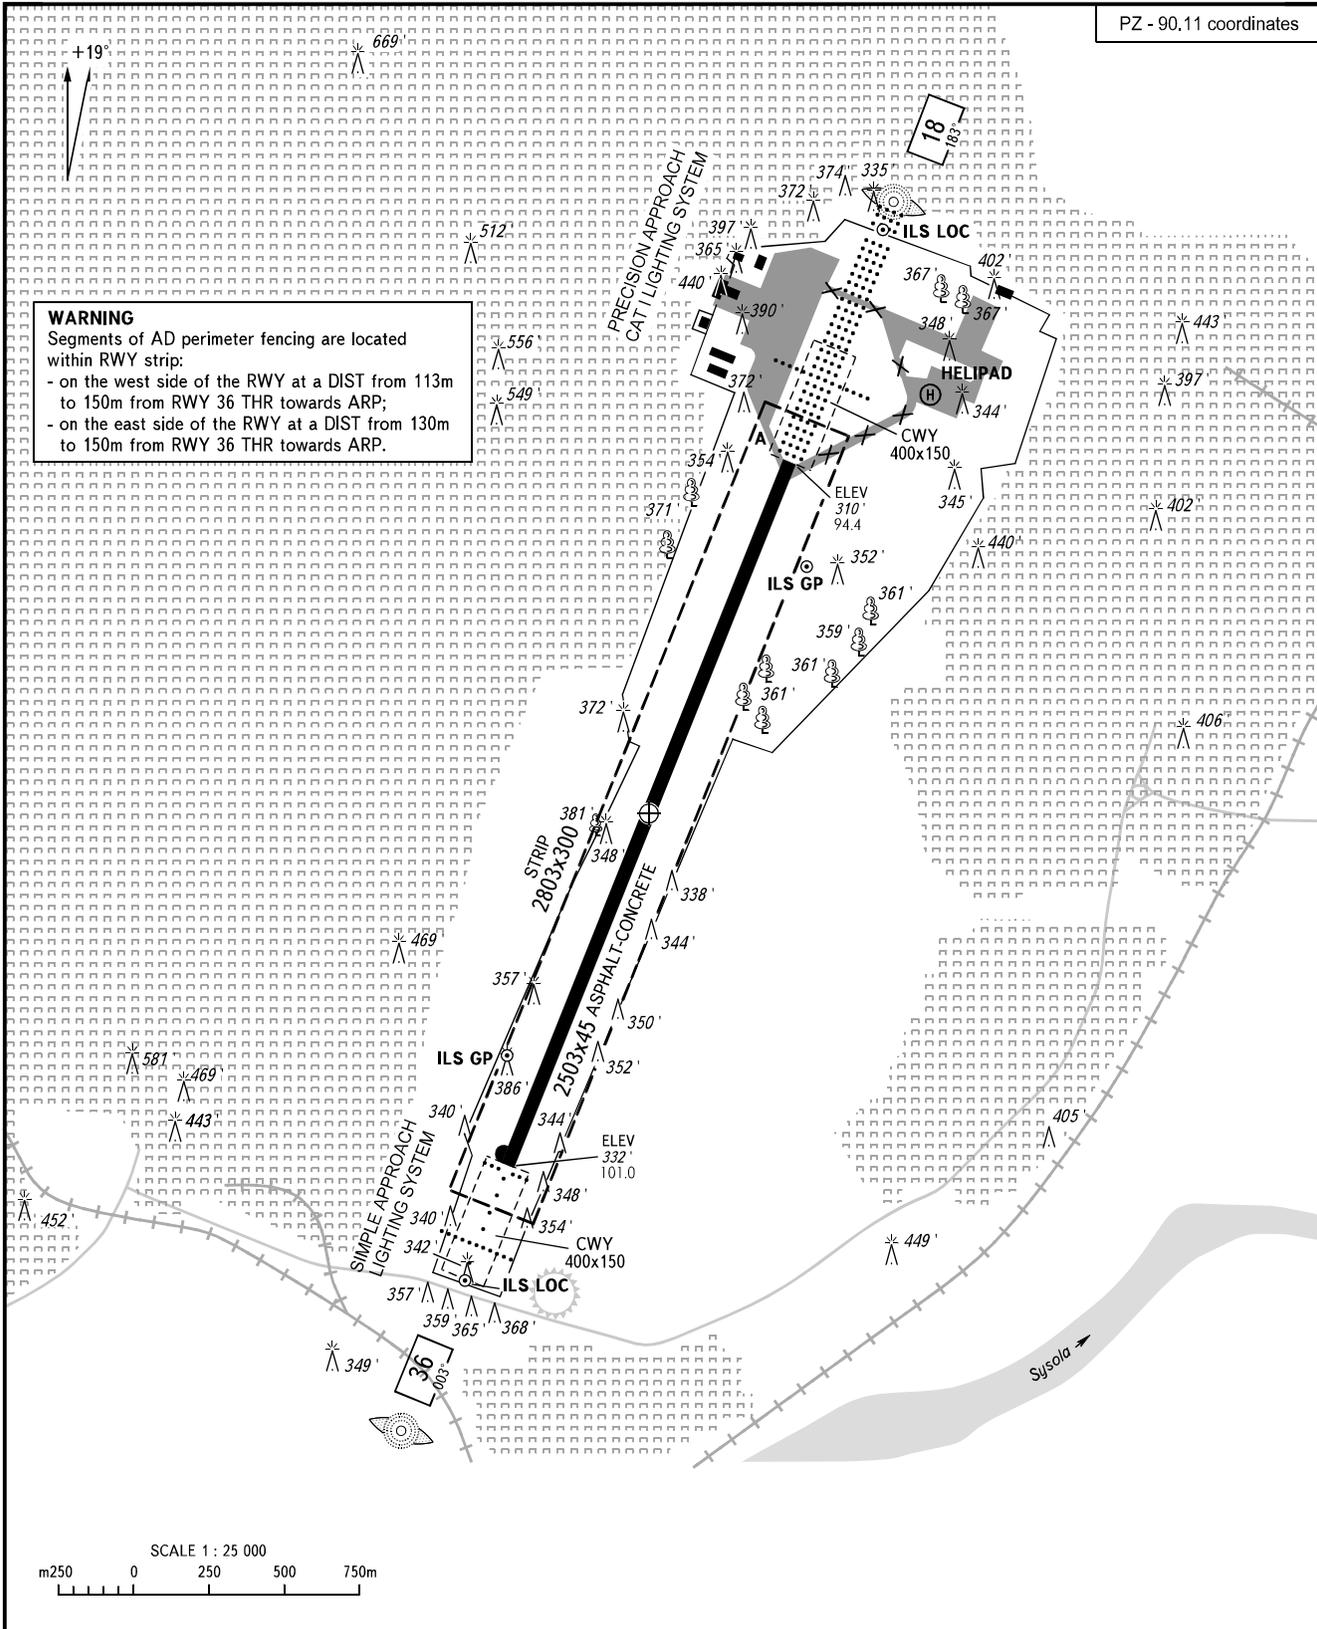


RWY	DIRECTION (TRUE)	THR	BEARING STRENGTH
18	201°46' 34"	61°39'27"N 050°51'14"E	PCN 49/F/D/X/T
36	021°45'39"	61°38'12"N 050°50'11"E	



ELEVATIONS IN FEET AND METRES  
DIMENSIONS IN METRES  
BEARINGS ARE MAGNETIC

CHANGE: New chart

MARKING AIDS RWY 36 / 18 AND EXIT TWY

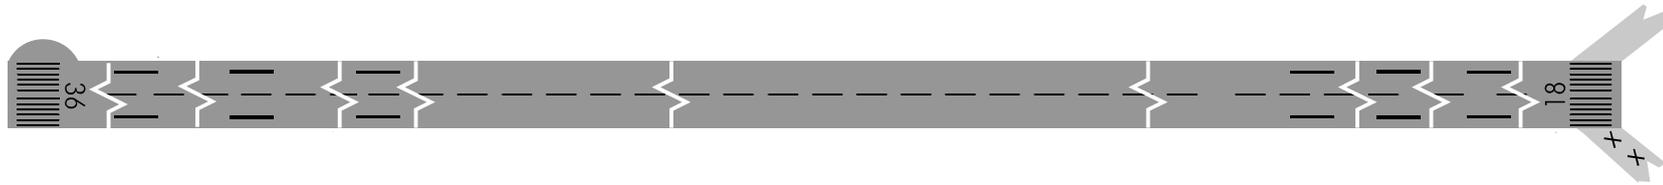

LIGHTING AIDS RWY 36 / 18 AND EXIT TWY

 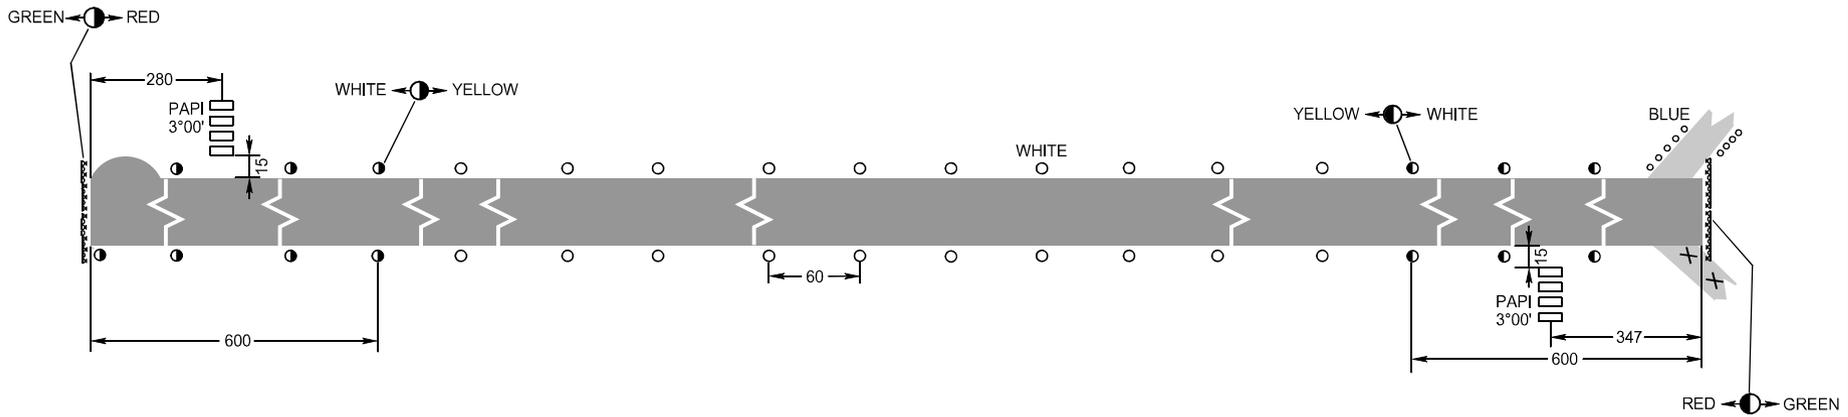

DIMENSIONS IN METRES

CHANGE: NIL