


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

VLADIVOSTOK, RUSSIA
KNEVICH I
RWY 07R/25L

TRANSITION
LEVEL : ①

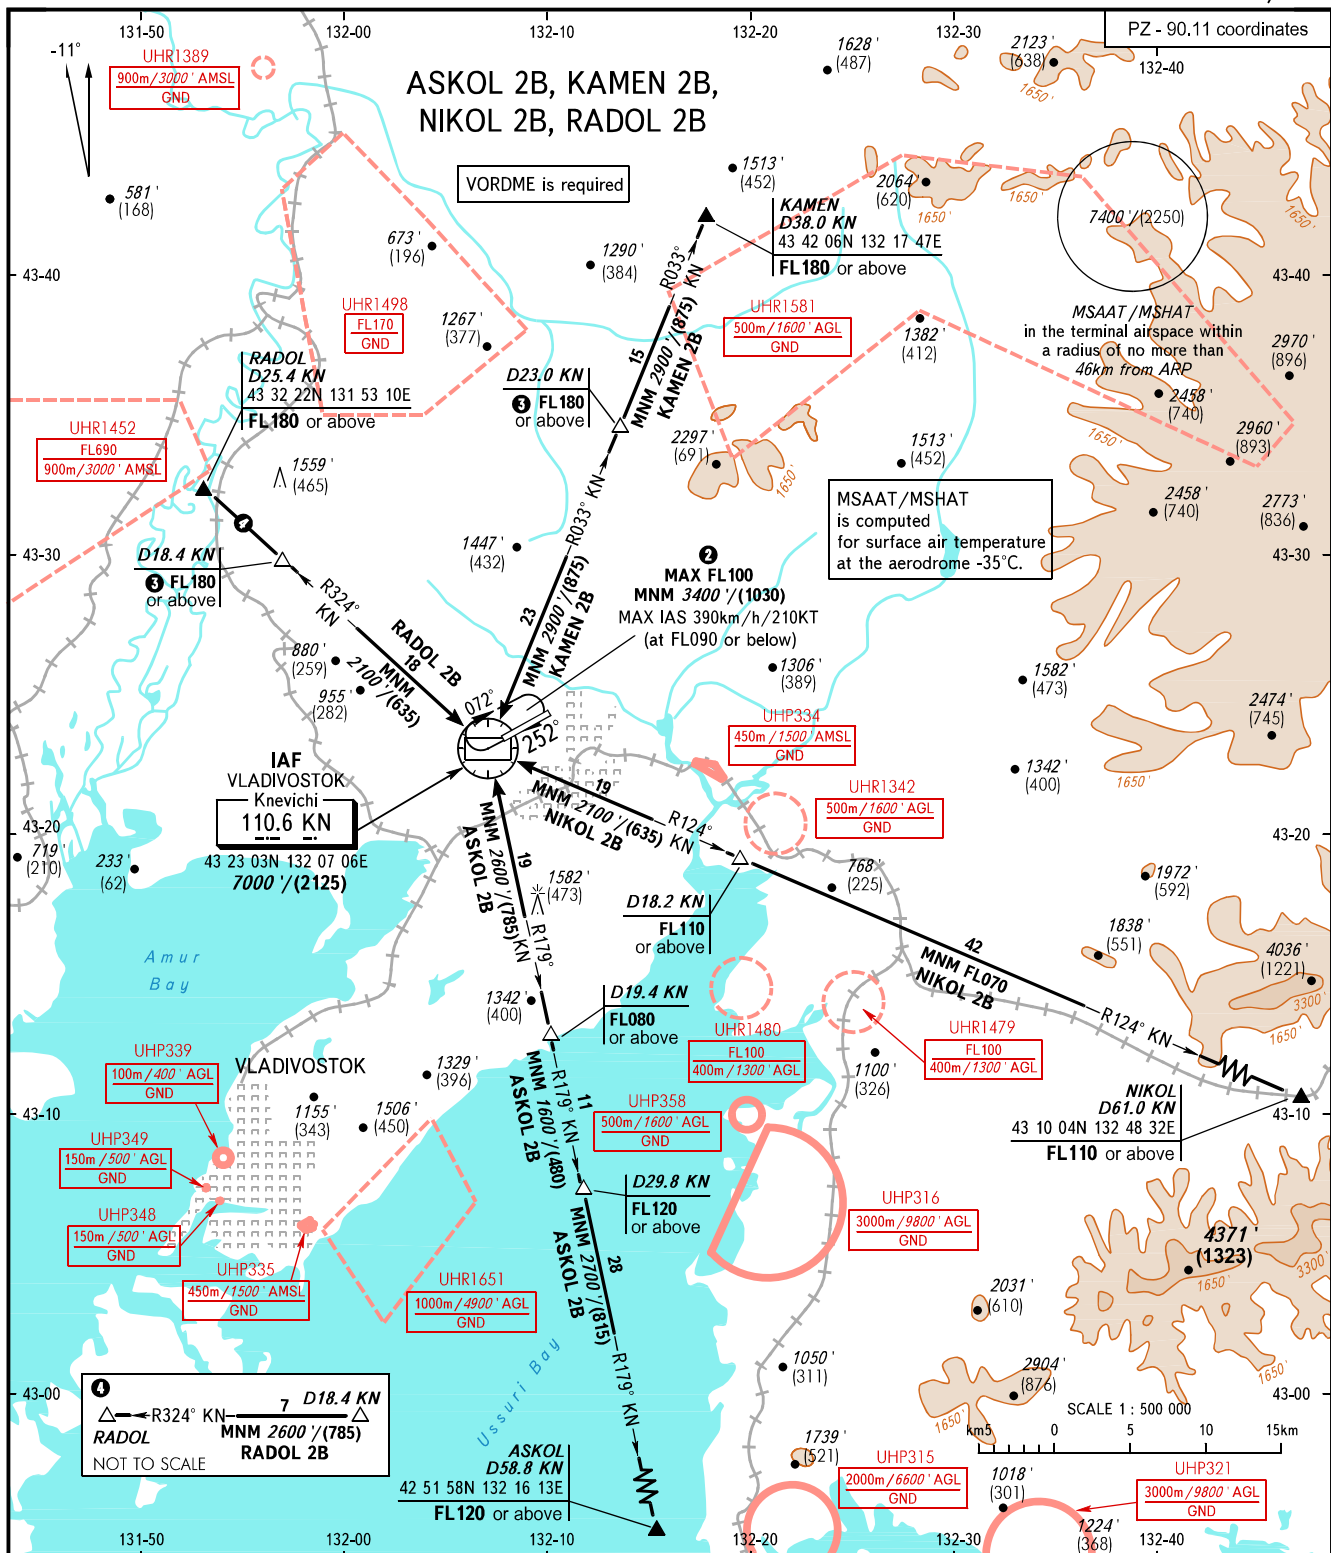

VLADIVOSTOK RADAR 123.400
VLADIVOSTOK START 119.500

WARNING
HGT is given relative to RWY 07R.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES IN FEET
HEIGHTS IN METRES
ELEVATIONS IN FEET AND METRES
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);
-hPa(mm on req).

- ① TRANSITION LEVEL:
- FL090 when QNH is 1013 hPa (760mm mercury column) or above;
- FL100 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL110 when QNH is less than 977 hPa (733mm mercury column).
- ② Holding procedure shall be executed by arrangement with ATS unit, when one of the areas UHR1452, UHR1479, UHR1480, UHR1498 is active.
- ③ FL080 or above, when area UHR1498 is not active.