

AIRCRAFT PARKING/DOCKING CHART - ICAO	MUENCHEN ATIS 123.130	MUENCHEN TOWER 118.705	MUENCHEN TOWER 119.405	MUENCHEN TOWER 120.505	MUENCHEN TOWER 123.130	MUENCHEN GROUND 121.830	MUENCHEN GROUND 121.980	MUENCHEN GROUND 121.780	MUENCHEN APRON 2 121.830	MUENCHEN APRON 3 121.930	MUENCHEN APRON 2 121,710	MUENCHEN APRON 3 121,930
---------------------------------------	--------------------------	---------------------------	---------------------------	---------------------------	---------------------------	----------------------------	----------------------------	----------------------------	-----------------------------	-----------------------------	-----------------------------	-----------------------------

ADVANCED VISUAL DOCKING GUIDANCE SYSTEM (A-VDGS)

Procedure and safety information:

- Aircraft shall not enter a stand when "HOLD" is displayed.
- Aircraft shall not enter the stand unless the running/float arrows are displayed and the displayed aircraft type matches the approaching aircraft.
- Aircraft shall not proceed further than the (first) passenger boarding bridge or stairs unless the running/float arrows have been superseded by the closing rate bar.
- In case of malfunction, uncertainty or concerns, aircraft shall hold and contact Apron Control for further information and assistance.
- All installed A-VDGS are from the manufacturer ADB Safegate. The figures shown here only represent exemplary key indications of the pilot display during normal operations. Depending on the actual installed model and configuration, the pilot display may look different.



HOLD



A380



**A380
17.0m**



STOP

Aircraft parking stands with A-VDGS:
110, 111A/B, 112, 113A/BX, 115A/B, 116, 117A/B, 118, 119, 120, 121, 135, 155, 161, 161Y, 162, 163, 163Y, 164, 164Y, 181, 182, 183, 184, 185, 186, 187, 188, 189, 201, 202A/B, 203, 204A/B, 205A/B, 206, 207A/B, 208, 209A/B, 210A/B, 211, 212A/B, 213A/B, 214, 215A/B, 216, 217A/B, 218, 219A/B, 220A/B, 221, 222A/B, 223A/B, 224A/B, 232, 233, 234, 244, 245, 246, 247, 248A/B, 249A/B, 250, 251A/B, 252A/B, 253, 254, 255, 256, 262, 301, 301A/B, 302, 302A/B, 308, 309, 310, 311, 312, 313, 317, 317A/B, 318, 318A/B, 352, 352A/B, 353, 353A/B, 354, 354A/B, 355, 355A/B, 356, 356A/B, 371, 371A/B, 372, 372A/B.

PARKING POSITIONS

Frequency "Munich Apron":
Apron 1, 6, 7, 8, 9, Maintenance 121.780
Apron 2, 12 121.710
Apron 3, 5, 13, 35 121.930

Hydrant system for underground refuelling is available at parking stands 101-121, 135, 155, 161-164, 181-189, 201-263, 301-318, 352-372, 901-907.

No hydrant system is available at parking stands 170-175, 191-195, 321-349, 511-595, Z1, Z2 and aprons 6, 7, 8, 13, M1.
At this parking stands refuelling with fuel trucks.

LEGEND

- Yellow line: Taxi guidance lines
- Red circle: Caution - stands with suffix "Y" have transverse lead-in lines
- Blue circle: Caution - do not confuse TWY B12 with TWY B12West

