


STANDARD ARRIVAL CHART  
INSTRUMENT (STAR) - ICAO

KRASNODAR, RUSSIA  
PASHKOVSKIY  
RNAV RWY 05R

TRANSITION  
LEVEL: **1**

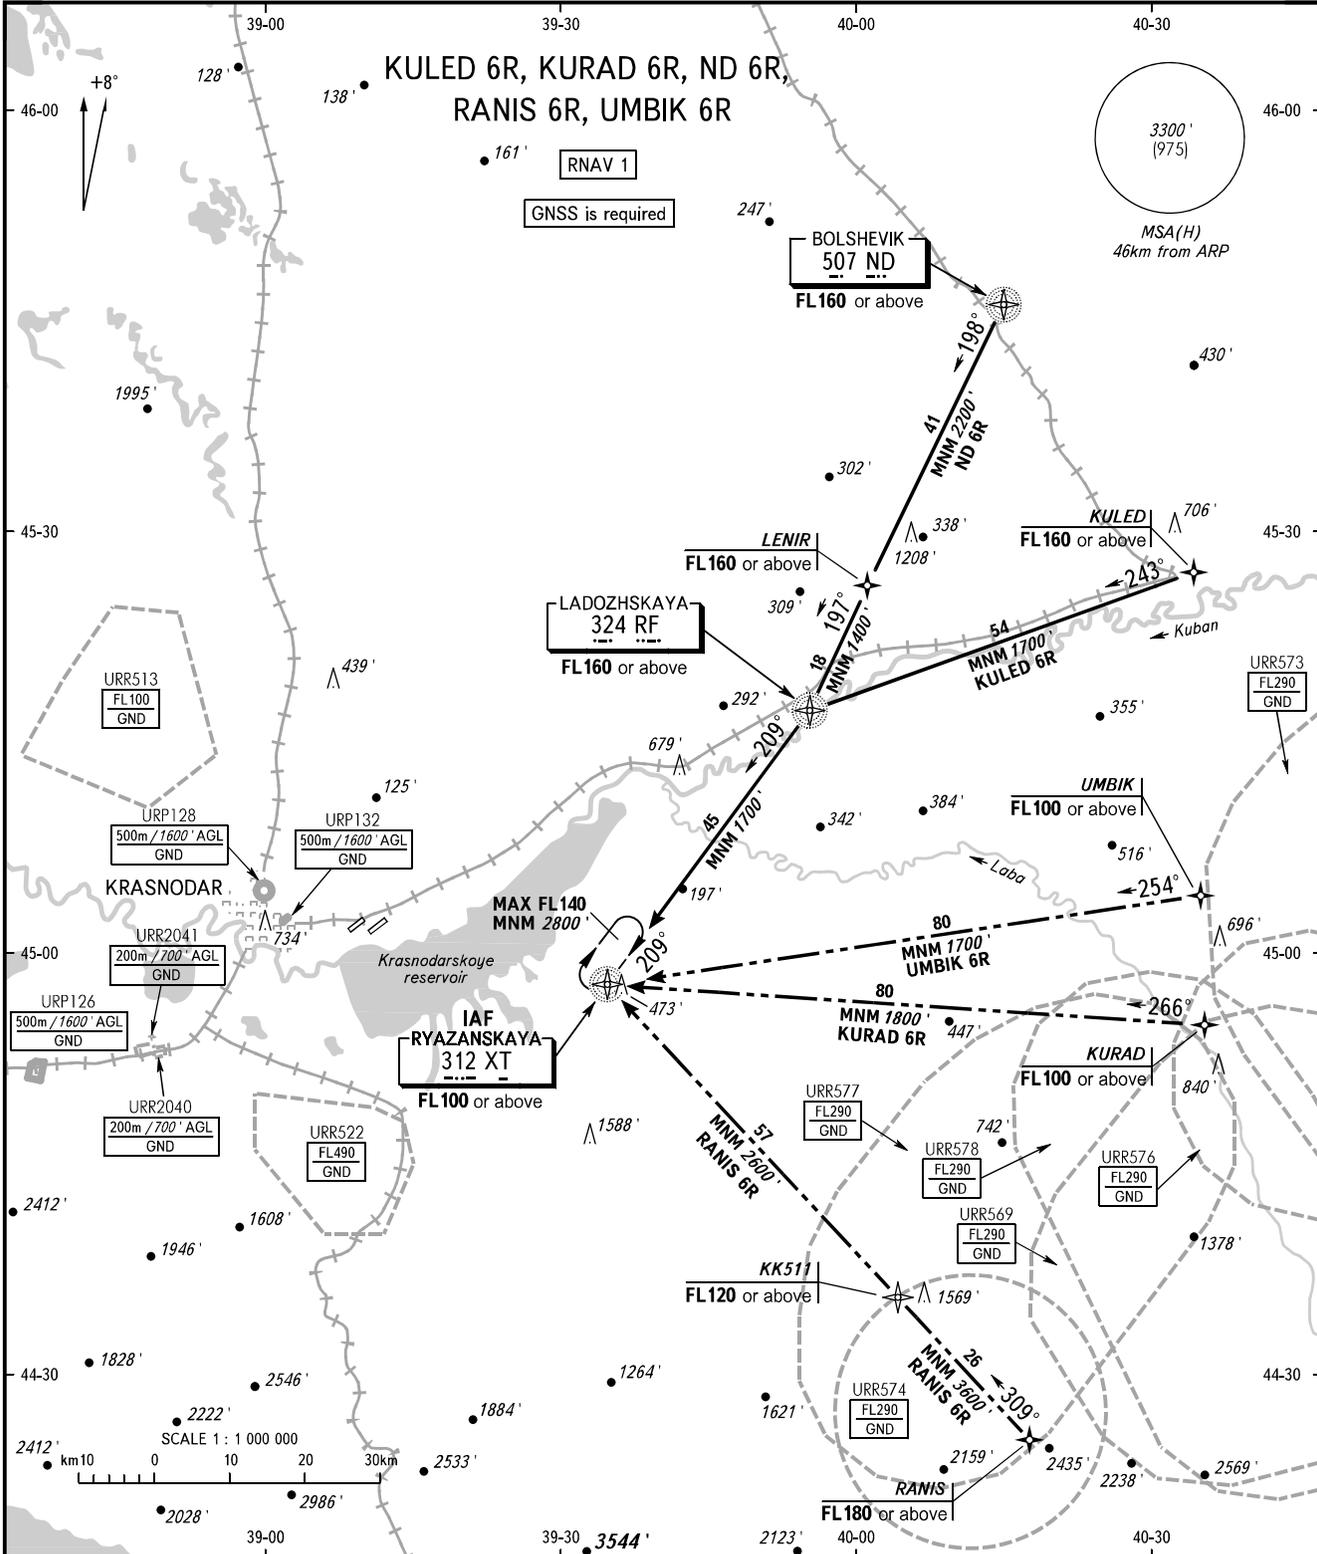

APPROACH Sector WEST **127.700**  
Sector EAST **129.600**  
TOWER **118.200**  
RADAR **121.300**

**1** TRANSITION LEVEL:  
- FL060 when QNH is 977 hPa (733mm mercury column) or above;  
- FL070 when QNH is 941 hPa (706mm mercury column) or above,  
but less than 977 hPa (733mm mercury column).

**NOTE:**

- When URR577, URR578, URR576, URR573, URR569 are active, STAR KURAD 6R is not AVBL.
- When URR574, URR577, URR569 are active, STAR RANIS 6R is not AVBL.
- When URR578, URR573, URR576 are active, STAR UMBIK 6R is not AVBL.

BEARINGS AND TRACKS ARE MAGNETIC  
ALTITUDES AND ELEVATIONS IN FEET  
HEIGHTS IN METRES  
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);  
-hPa(mm on req).

CHANGE: HLDG