


AERODROME GROUND
MOVEMENT CHART - ICAO

SIVKAR START 124.600

SYKTYVKAR, RUSSIA

SYKTYVKAR

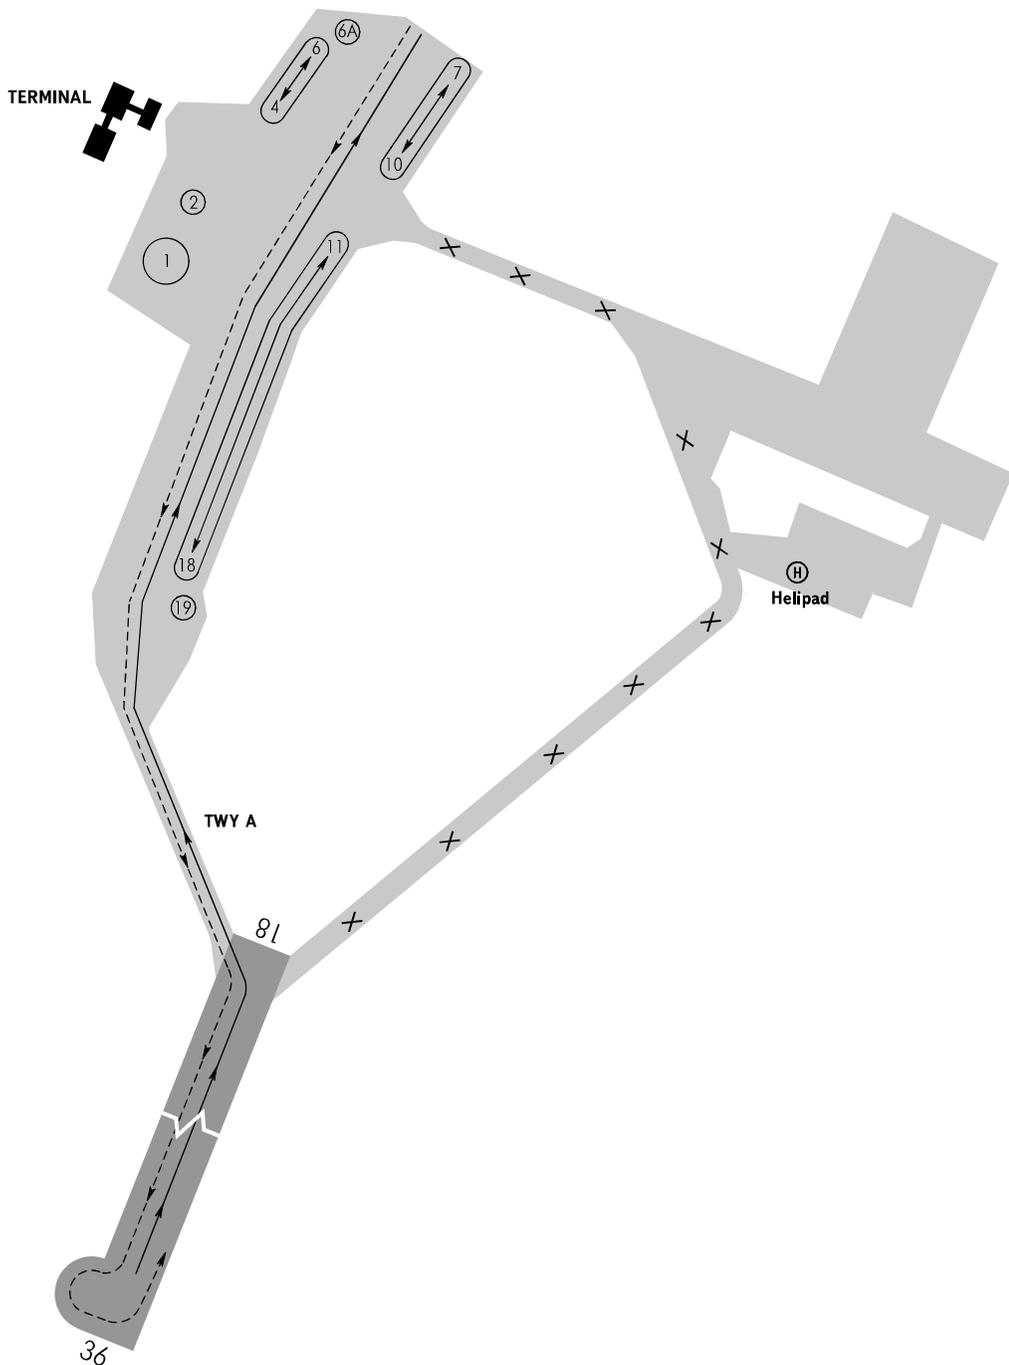

Not to scale

APRON:

Surface: Asphalt-Concrete

Strength:

Stands:	1, 2, 8-10	- PCN 28/R/B/X/U
	4-6, 6A	- PCN 30/R/B/X/U
	7, 11-18	- PCN 37/F/D/X/T
	19	- PCN 47/F/D/X/T

TAXIWAYS:

Width:	A	- 19m
Surface:	A	- Asphalt-Concrete
Strength:	A	- PCN 51/F/D/X/T

WARNING:

1. RWY 36/18 is AVBL for flight operations of Mi-2, Mi-8 HEL, flights operations in sector 192°-355° (over the city) are PROHIBITED.
2. Taxiing of Mi-2, Mi-8 HEL into/out of stands 15-18 is permitted through stand 19 in accordance with the marking.
3. Helipad for HEL on skid landing gear.
4. AD is not AVLB for APR/DEP of cargo ACFT carrying dangerous goods on board due to absence of a stand equipped for handling dangerous goods at the AD.