


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

ANAPA, RUSSIA
VITYAZEVO
RWY 21

TRANSITION
LEVEL : 1

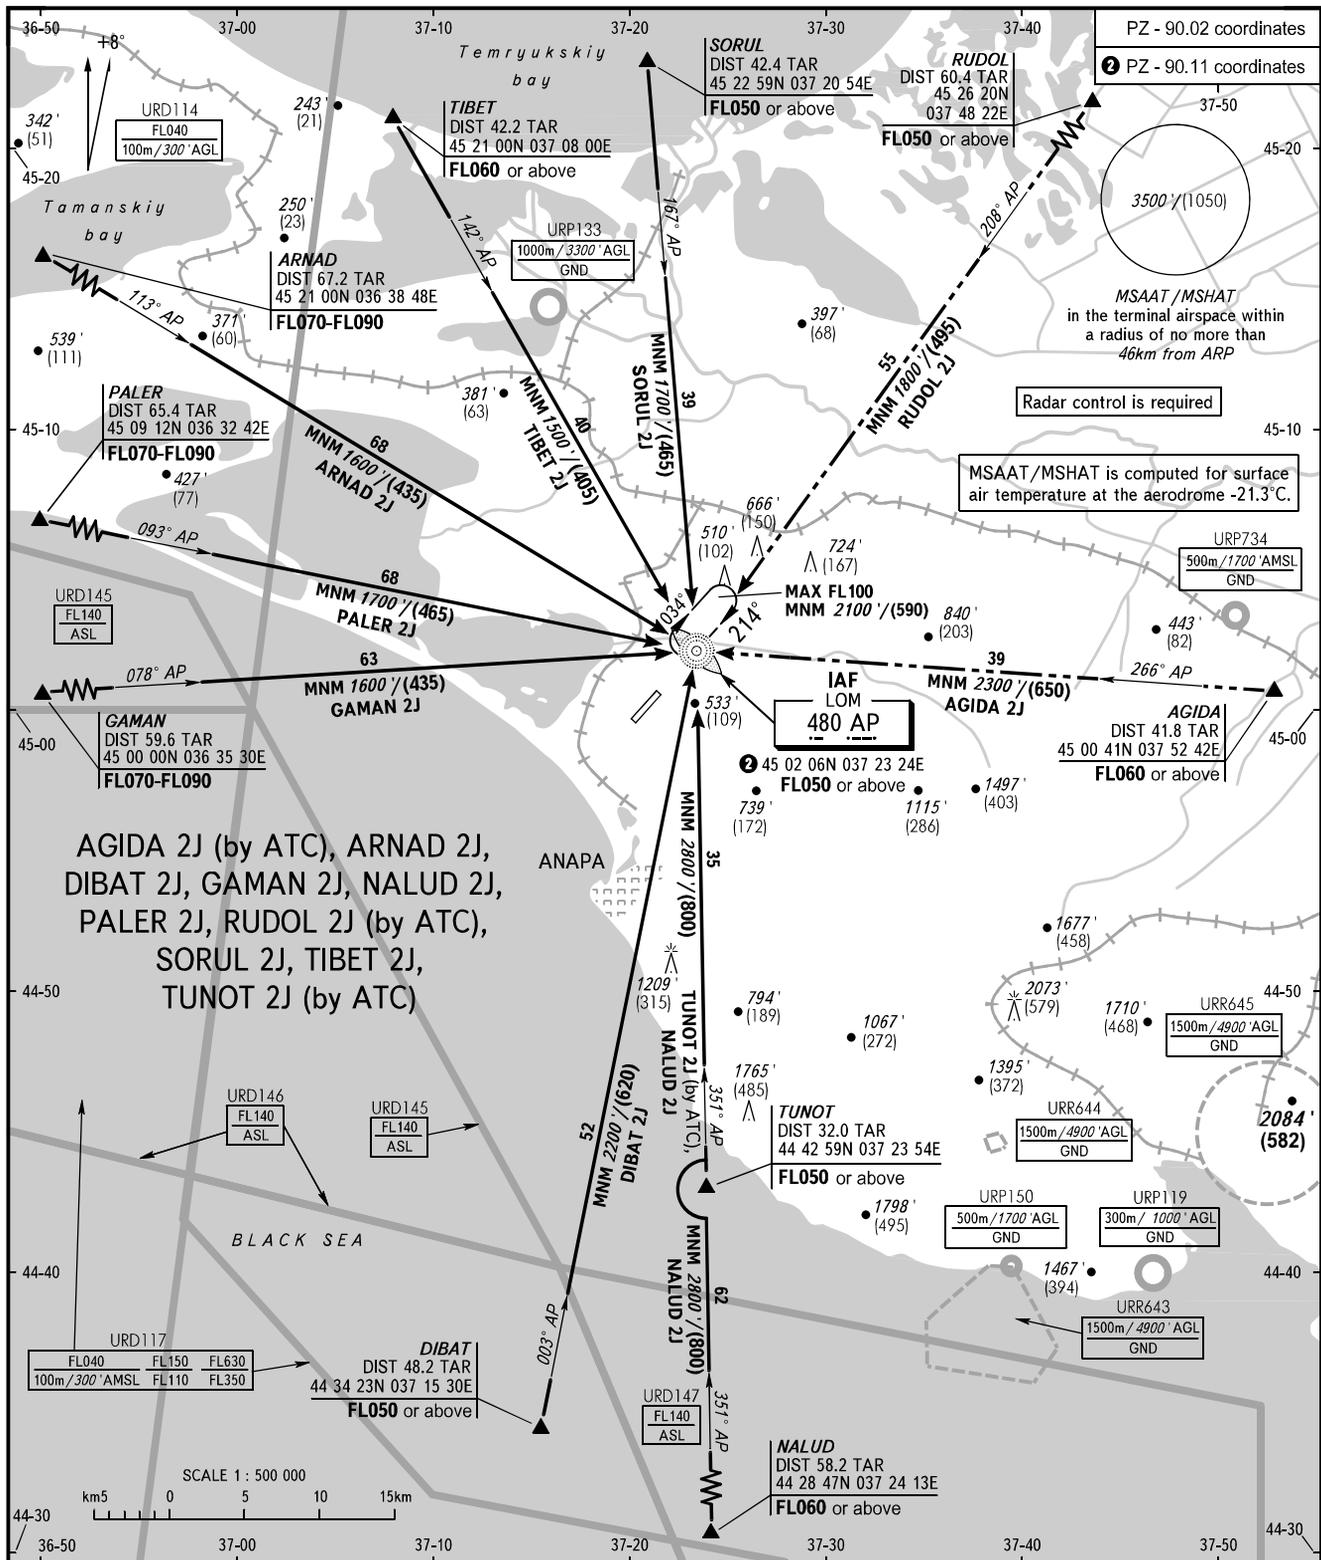

ANAPA RADAR 118.700
ANAPA TOWER 119.800

1 TRANSITION LEVEL:
 - FL050 when QNH is 1013 hPa (760mm mercury column) or above;
 - FL060 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
 - FL070 when QNH is less than 977 hPa (733mm mercury column).

BEARINGS AND TRACKS ARE MAGNETIC
 ALTITUDES IN FEET
 HEIGHTS IN METRES
 ELEVATIONS IN FEET AND METRES
 DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);
-hPa(mm on req).