


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

SYKTYVKAR, RUSSIA
SYKTYVKAR
RWY 36

TRANSITION
LEVEL: 1

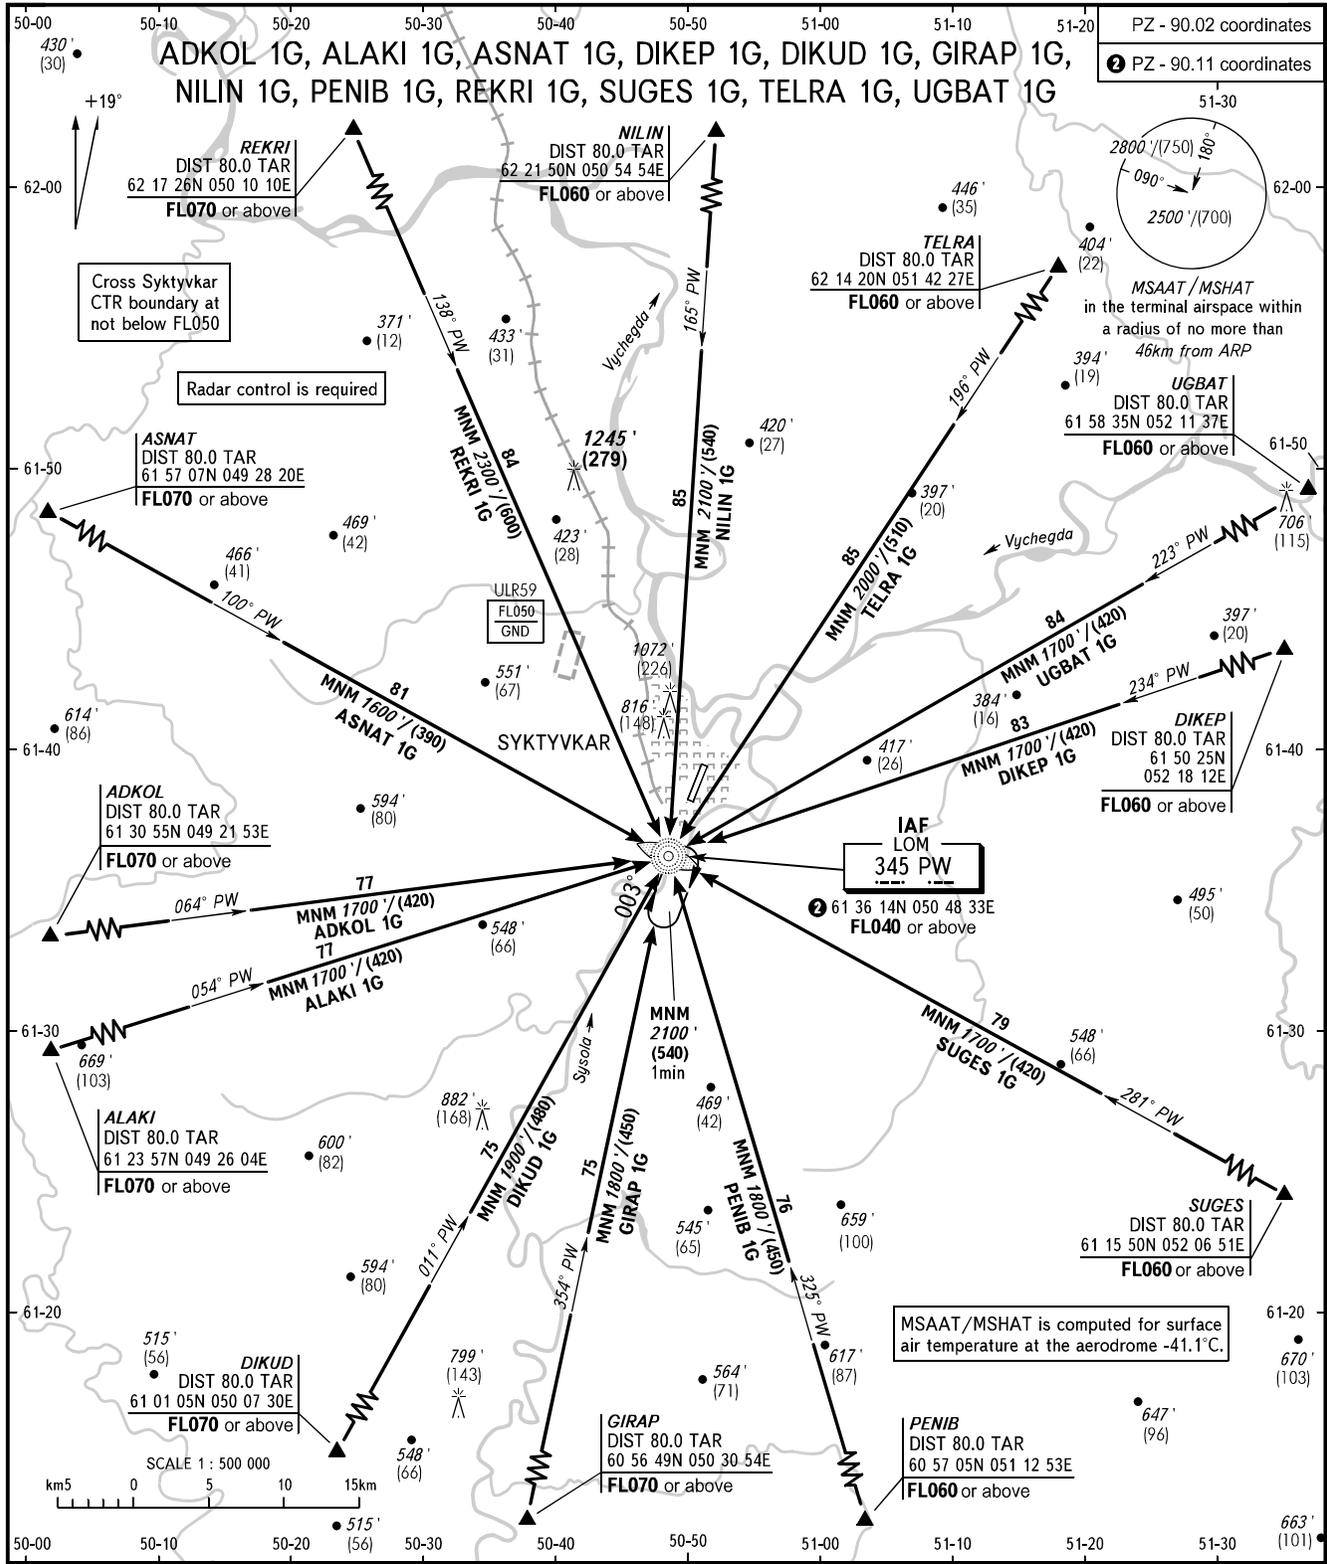

<p>SIVKAR RADAR 124.600</p>	<p>WARNING: 1. TAR reads zero at ARP. 2. ASNAT 1G, NILIN 1G, REKRI 1G, HLDG by ATC, when ULR59 is active.</p>	<p>1 TRANSITION LEVEL: - FL040 when QNH is 1013 hPa (760mm mercury column) or above; - FL050 when QNH is 977 hPa (733mm mercury column) or above but less than 1013 hPa (760mm mercury column); - FL060 when QNH is less than 977 hPa (733mm mercury column).</p>
<p>BEARINGS AND TRACKS ARE MAGNETIC ALTITUDES IN FEET ELEVATIONS IN FEET AND METRES HEIGHTS IN METRES DISTANCES IN KILOMETRES</p>	<p>Alt set: - QNH(QFE on req); - hPa(mm on req).</p>	