


STANDARD ARRIVAL CHART INSTRUMENT (STAR) - ICAO

TRANSITION
LEVEL: 1

ROSTOV-NA-DONU, RUSSIA

PLATOV

RNAV RWY 23

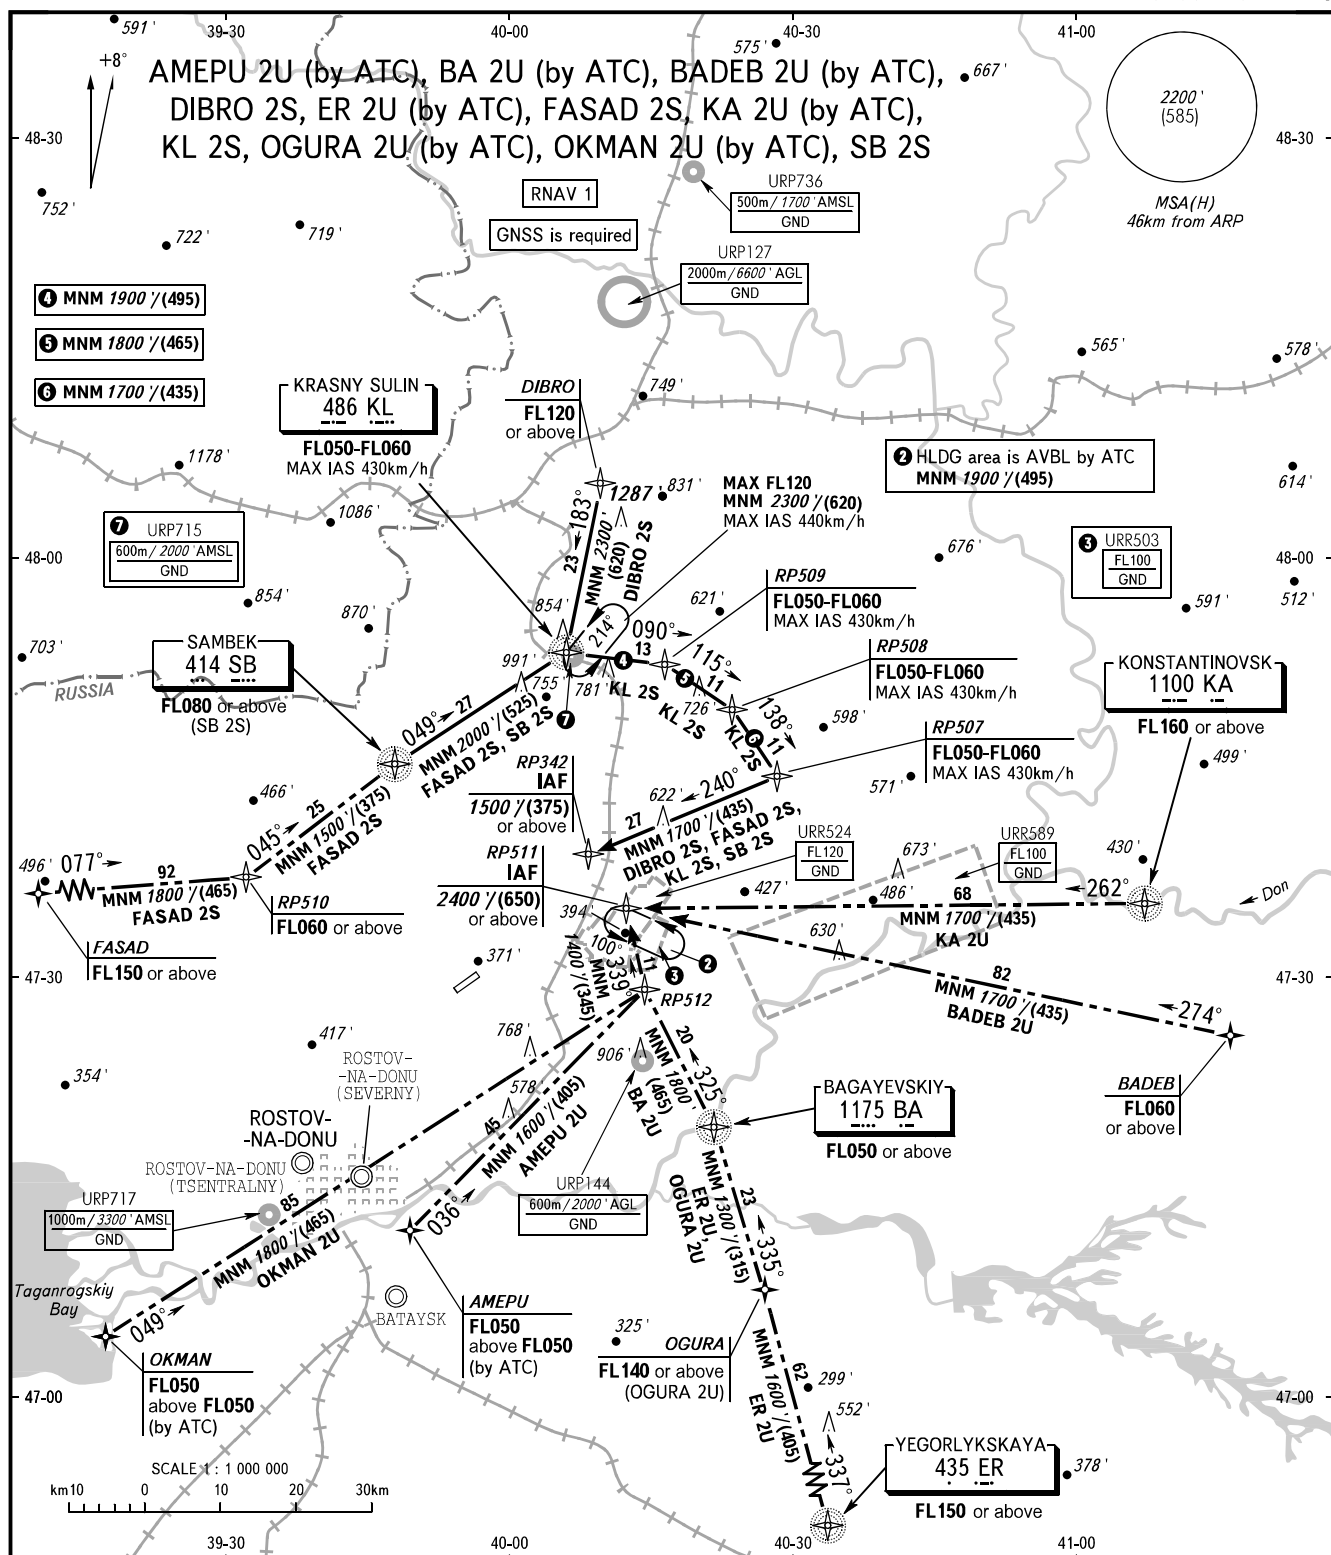

PLATOV APPROACH	130.600
PLATOV RADAR	121.200
PLATOV TOWER	119.700

1 TRANSITION LEVEL:

- FL050 when QNH is 996 hPa (747mm mercury column) or above;
- FL060 when QNH is 960 hPa (720mm mercury column) or above, but less than 996 hPa (747mm mercury column).

WARNING:

1. AMEPV 2U, BA 2U, ER 2U, OGURA 2U, OKMAN 2U are not AVBL, when URR503, URR524 are active.
2. BADEB 2U, KA 2U are not AVBL, when URR503, URR524, URR589 are active.

BEARINGS AND TRACKS ARE MAGNETIC
ELEVATIONS IN *FEET*
ALTITUDES IN *FEET*
HEIGHTS IN METRES
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);
-hPa(mm on req).

CHANGE: URP