


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

YAKUTSK, RUSSIA
YAKUTSK
RNAV RWY 05

TRANSITION
LEVEL: **1**

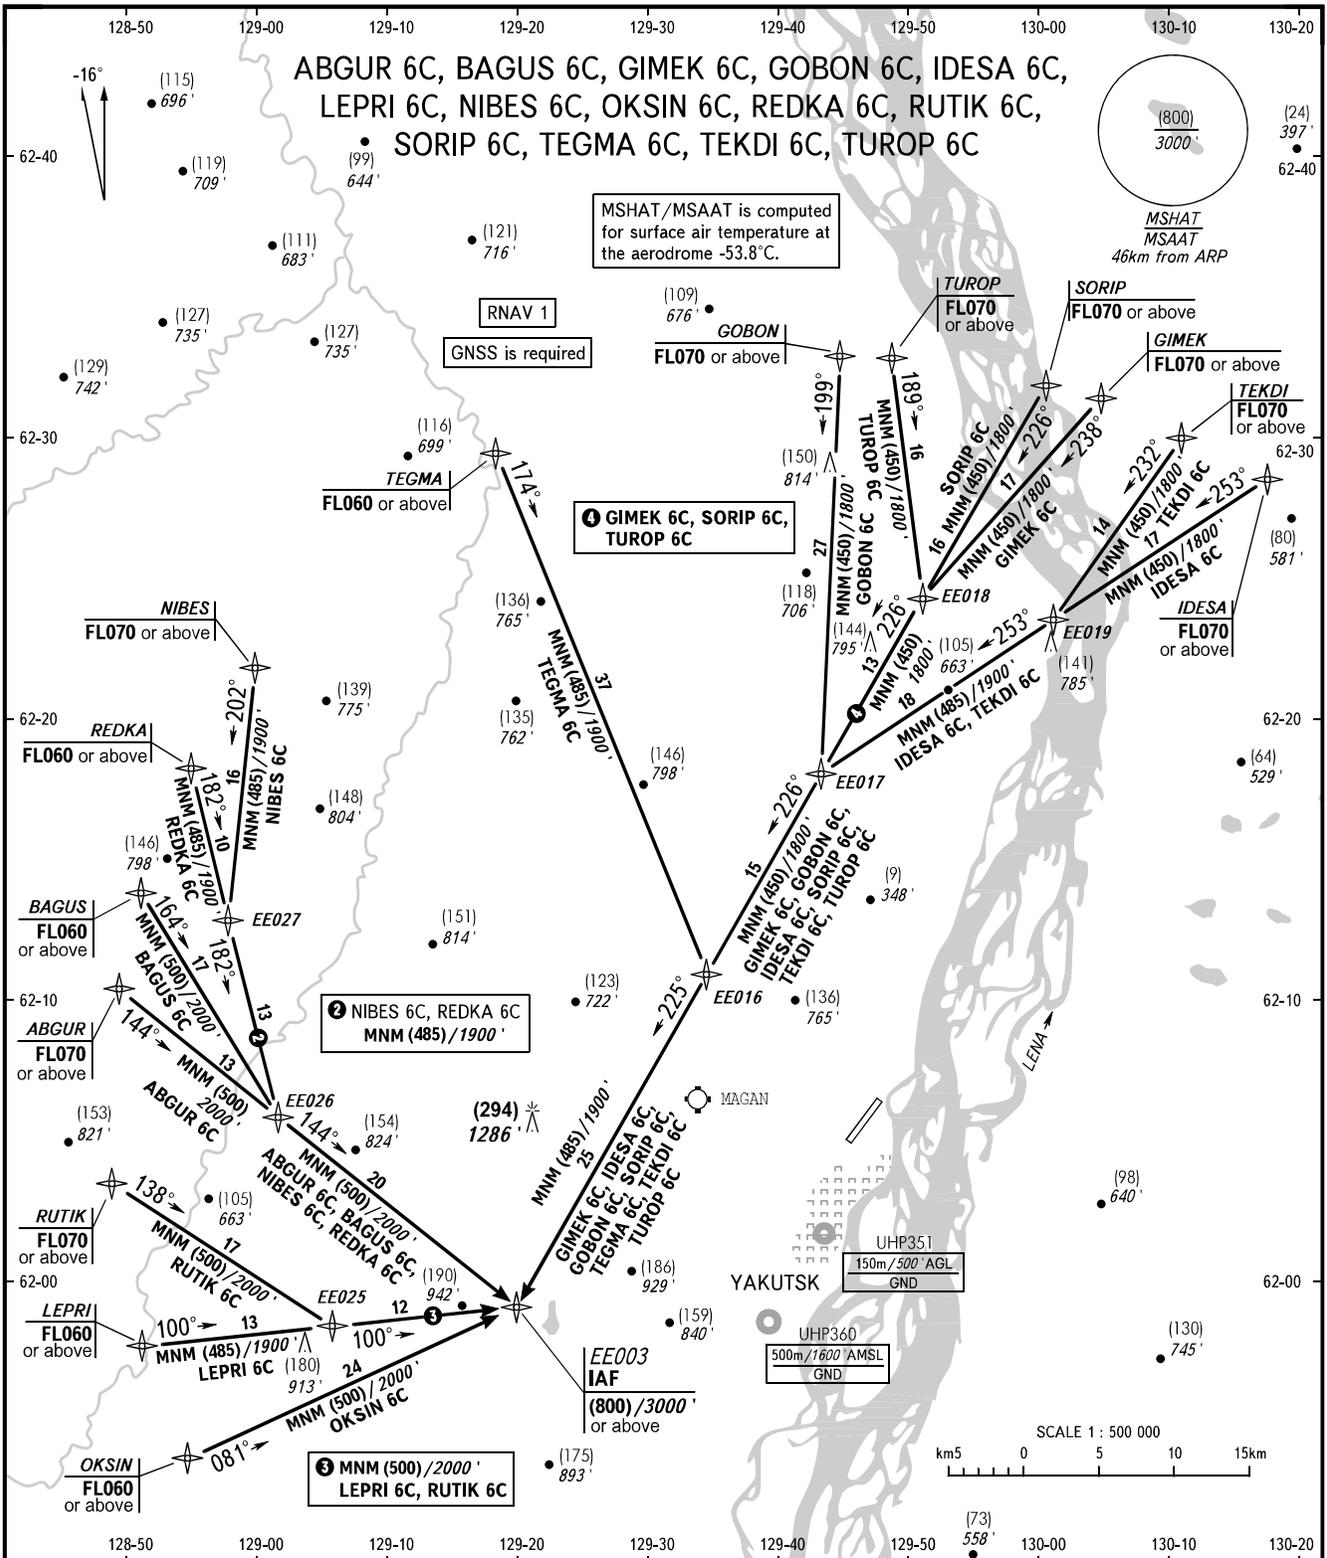

| | |
|----------|---------|
| APPROACH | 129.300 |
| RADAR | 120.300 |
| START | 120.000 |

- 1** TRANSITION LEVEL:
- FL050 when QFE is 751mm mercury column or above;
 - FL060 when QFE is 724mm mercury column or above but less than 751mm mercury column;
 - FL070 when QFE is less than 724mm mercury column.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES AND ELEVATIONS IN METRES AND FEET
HEIGHTS IN METRES
DISTANCES IN KILOMETRES

Alt set: -QFE(QNH on req);
-mm(hPa on req).

CHANGE: New chart