


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

TRANSITION
LEVEL : 1

NOVOSIBIRSK, RUSSIA
TOLMACHEVO
RNAV RWY 34

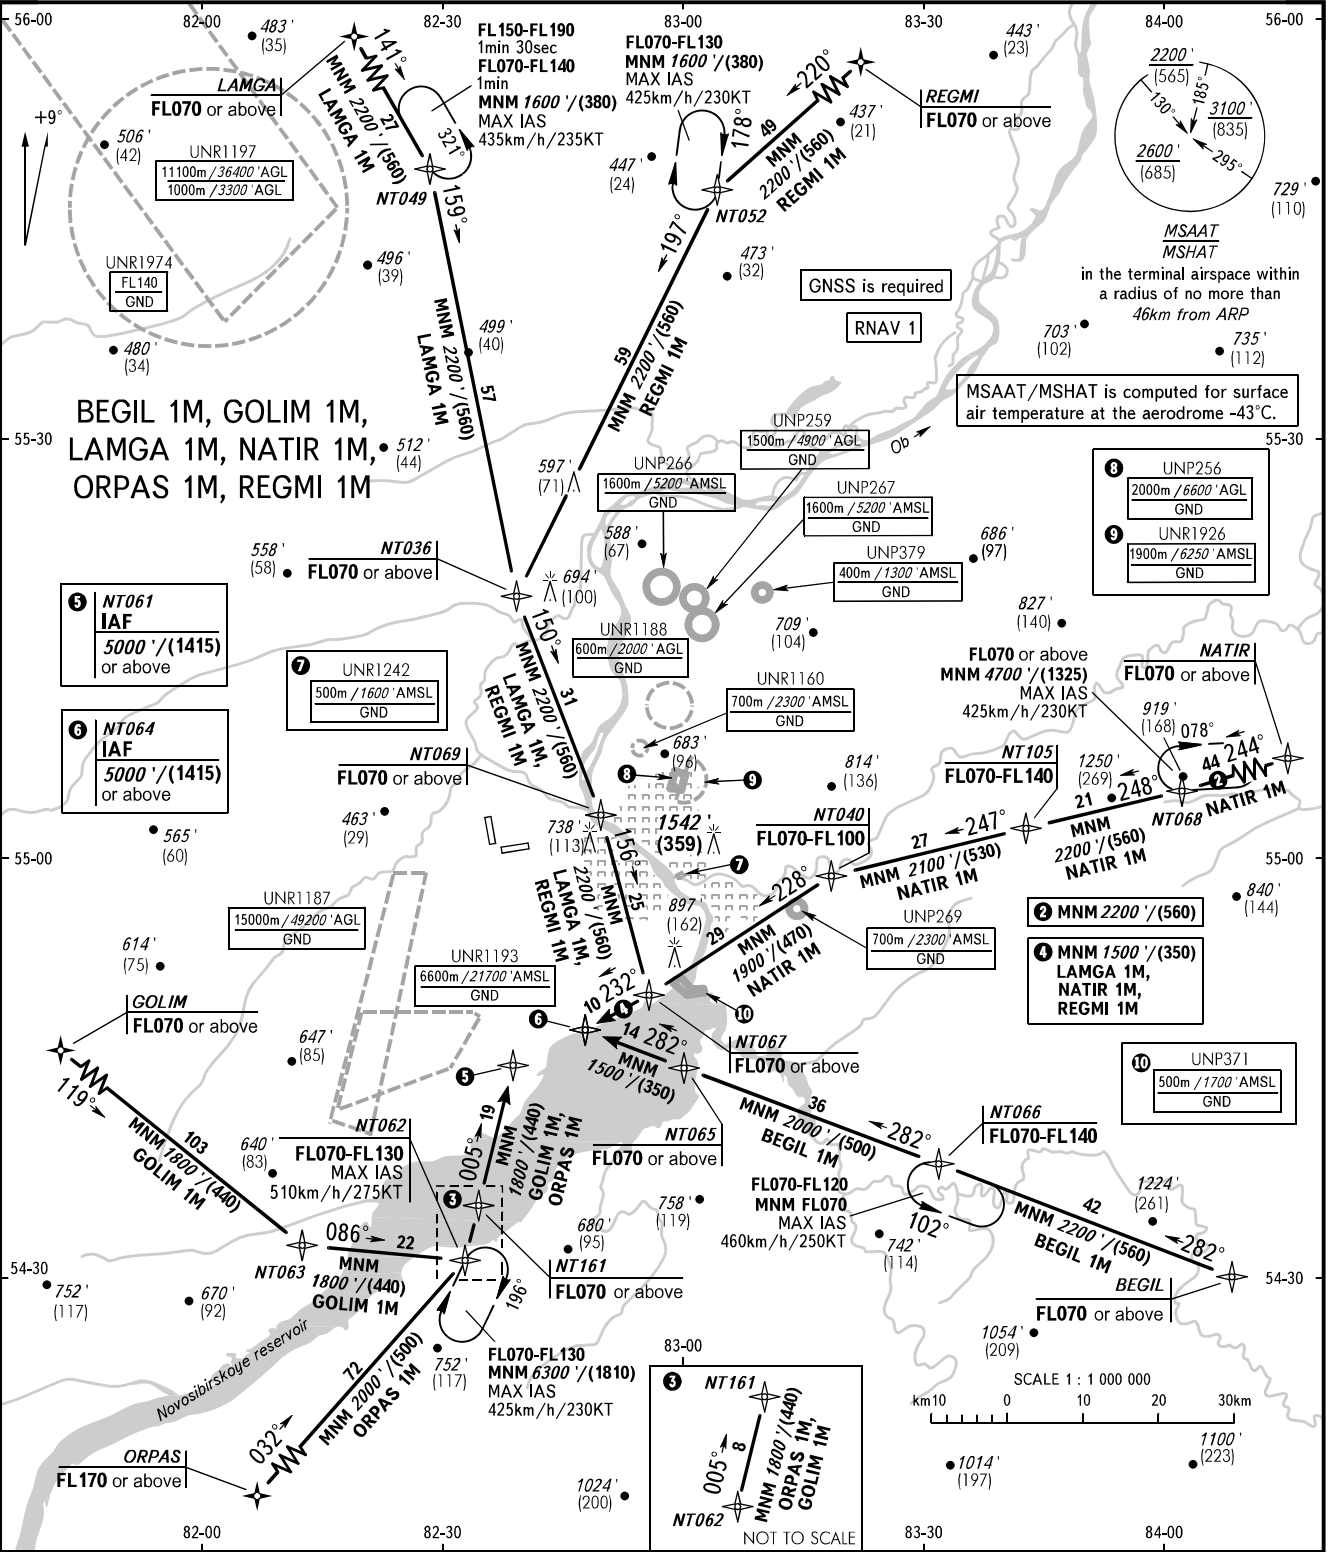

APPROACH
RADAR
TOWER

127.500
122.000
126.700

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES IN FEET, HEIGHTS IN METRES
ELEVATIONS IN METRES AND FEET
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);
-hPa(mm on req).

1. TRANSITION LEVEL:
- FL070 when QNH is 1013 hPa (760mm mercury column) or above;
- FL080 when QNH is 977 hPa (733mm mercury column) or above,
but less than 1013 hPa (760mm mercury column);
- FL090 when QNH is less than 977 hPa (733mm mercury column).

WARNING
Holding area at NT049 shall be used, if clearance to cross
UNR1197 (during its activity), UNR1974 (during its activity) or
arrangement with ATS unit are AVBL.