


AREA CHART - ICAO

ARRIVAL, DEPARTURE
AND TRANSIT ROUTES

GROZNY, RUSSIA

SEVERNY

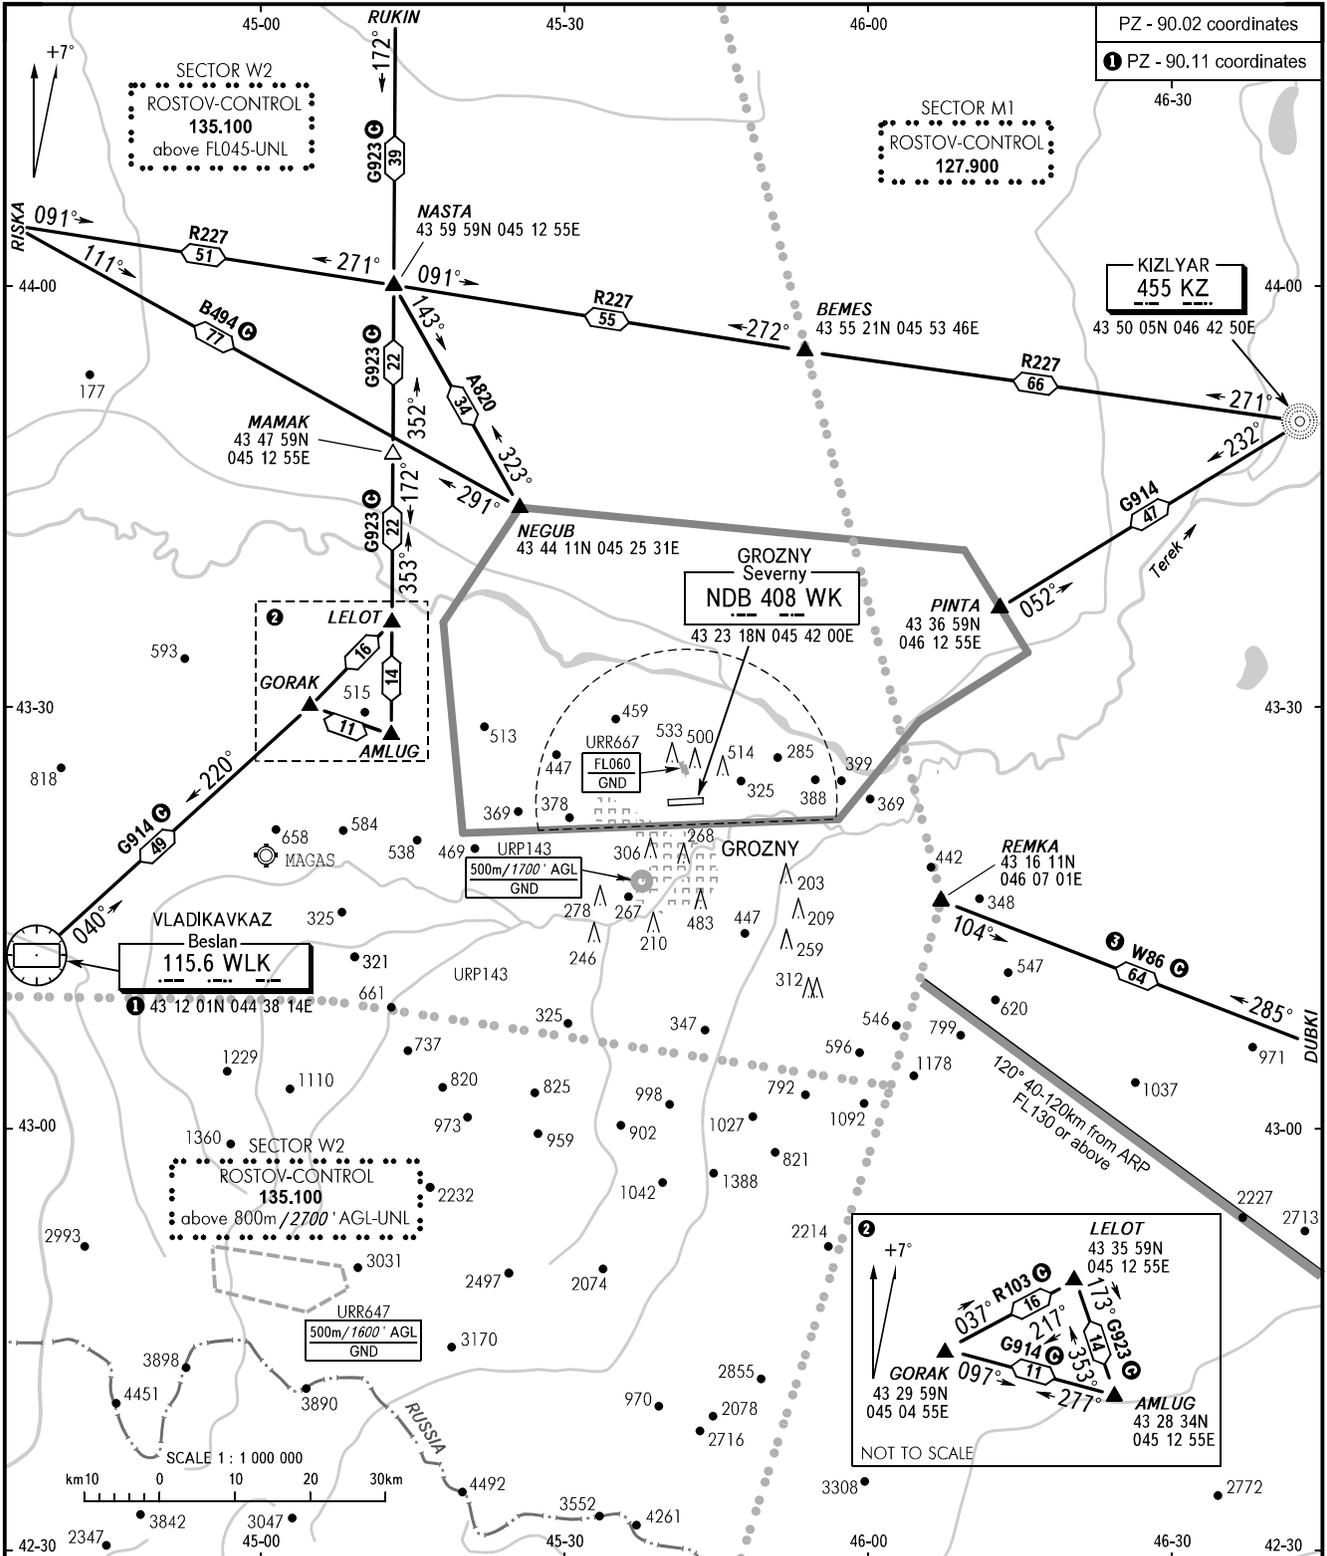

PZ - 90.02 coordinates
 ① PZ - 90.11 coordinates

KIZLYAR
 455 KZ
 43 50 05N 046 42 50E

SECTOR W2
 ROSTOV-CONTROL
 135.100
 above FL045-UNL

SECTOR M1
 ROSTOV-CONTROL
 127.900

MAMAK
 43 47 59N
 045 12 55E

NASTA
 43 59 59N 045 12 55E

BEMES
 43 55 21N 045 53 46E

LELOT
 43 35 59N
 045 12 55E

GROZNY Severny
 NDB 408 WK
 43 23 18N 045 42 00E

PINTA
 43 36 59N
 046 12 55E

VLADIKAVKAZ
 Beslan
 115.6 WLK
 ① 43 12 01N 044 38 14E

SECTOR W2
 ROSTOV-CONTROL
 135.100
 above 800m / 2700' AGL-UNL

LELOT
 43 35 59N
 045 12 55E

GORAK
 43 29 59N
 045 04 55E

AMLUG
 43 28 34N
 045 12 55E

NOT TO SCALE

GROZNY TOWER 120.200
 GROZNY START 119.000

③ Only for Russian users.

BEARINGS AND TRACKS ARE MAGNETIC
 ALTITUDES, HEIGHTS AND ELEVATIONS IN METRES
 DISTANCES IN KILOMETRES

CHANGE: New chart