

YAKUTSK, RUSSIA
YAKUTSK
RNAV RWY 05



1 TRANSITION LEVEL:

- FL050 when QFE is 751mm mercury column or above;
- FL060 when QFE is 724mm mercury column or above but less than 751mm mercury column;
- FL070 when QFE is less than 724mm mercury column.

Alt set: -QFE(QNH on req);
-mm(hPa on req).

CHANGE: New chart