


AIRCRAFT PARKING/DOCKING
CHART - ICAO

GROUND	127.000
START	118.100
APRON	118.900

PETROPAVLOVSK-KAMCHATSKY, RUSSIA

YELIZOVO

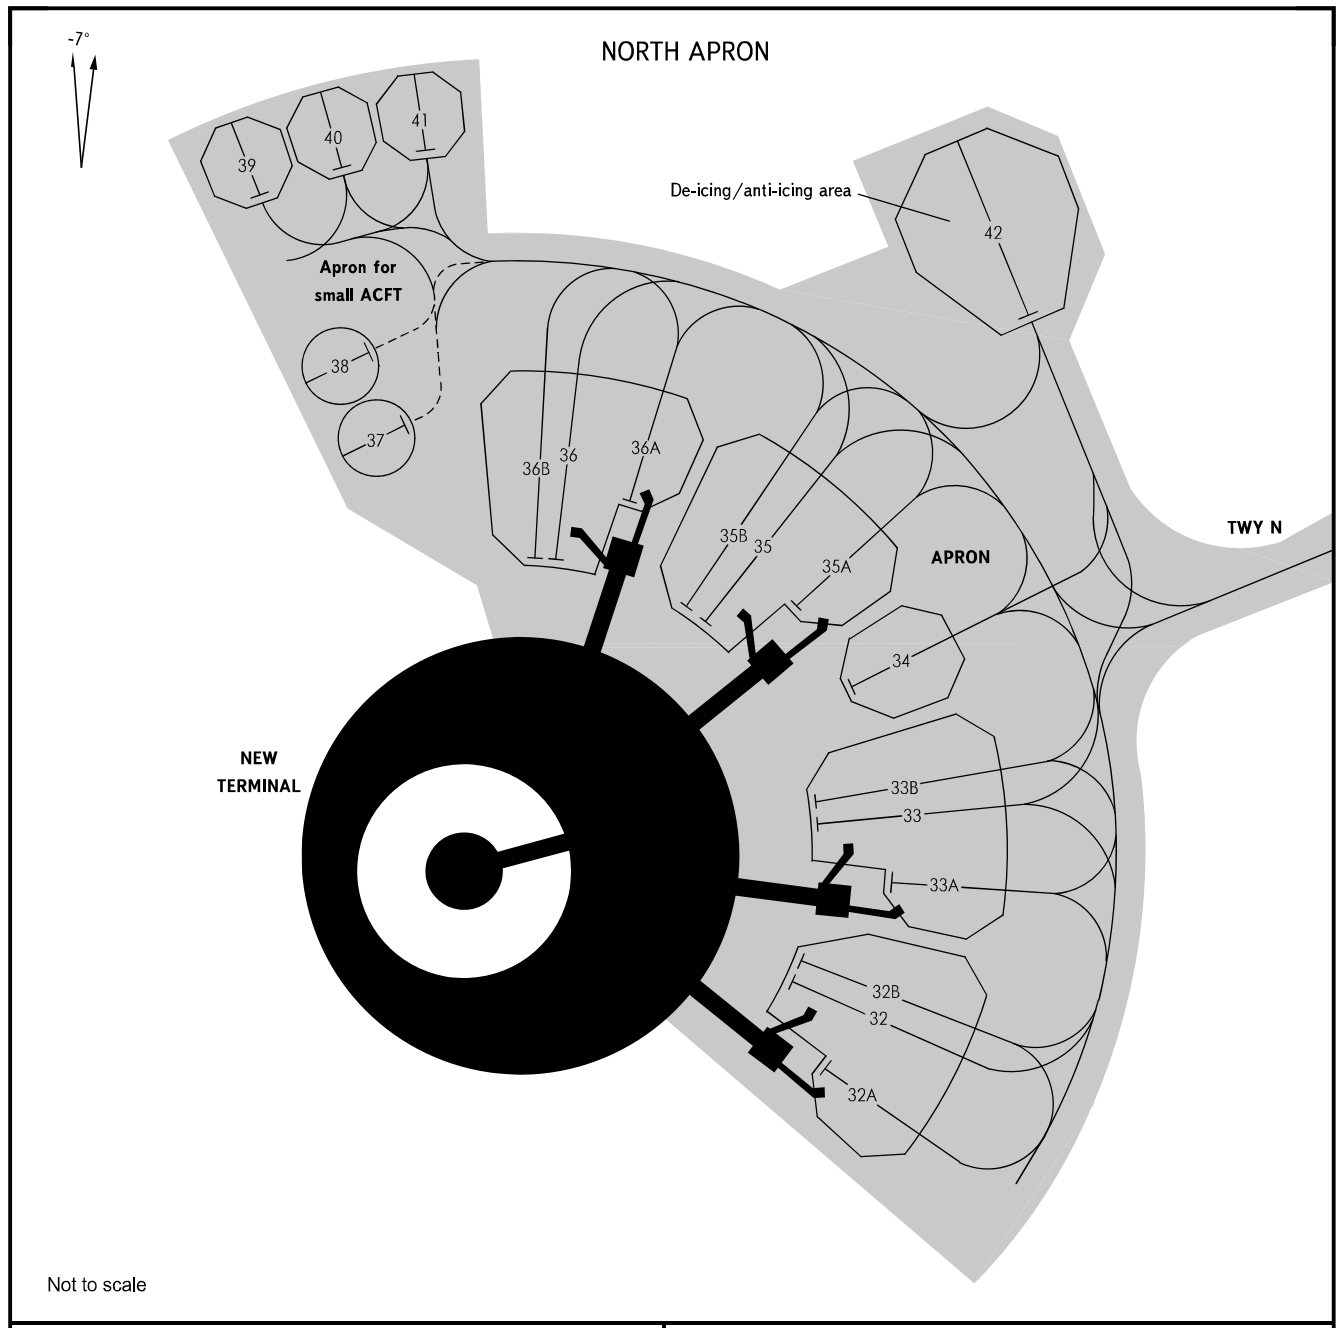

APRON:
Surface: Cement-Concrete
Strength: Stands 32-36, 42 - PCN 68/R/A/W/T
 Stands 37-41 - PCN 27/R/A/W/T

TAXIWAYS:
Width: N - 23m
Surface: N - Cement-Concrete
Strength: N - PCN 68/R/A/W/T

- NOTE:**
1. Flight crew shall maintain radio communication with the ground personnel in charge of engines start-up (towing) on FREQ 118.900 MHz, call sign Petropavlovsk-Apron.
 2. ACFT parking on stands 32A-32B, 33A-33B, 35A-35B, 36A-36B is permitted only when stands 32, 33, 35, 36 are vacant.
 3. Simultaneous towing of ACFT from two adjacent stands is PROHIBITED.
 4. Taxiing of ACFT into stands 39-41 shall be executed under own engines power facing north, taxiing out of the stands - by towing.
 5. Stand 42 is AVBL for de-icing/anti-icing treatment of ACFT.