


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

TRANSITION
LEVEL : 1

PETROZAVODSK, RUSSIA
PETROZAVODSK
RNAV RWY 01

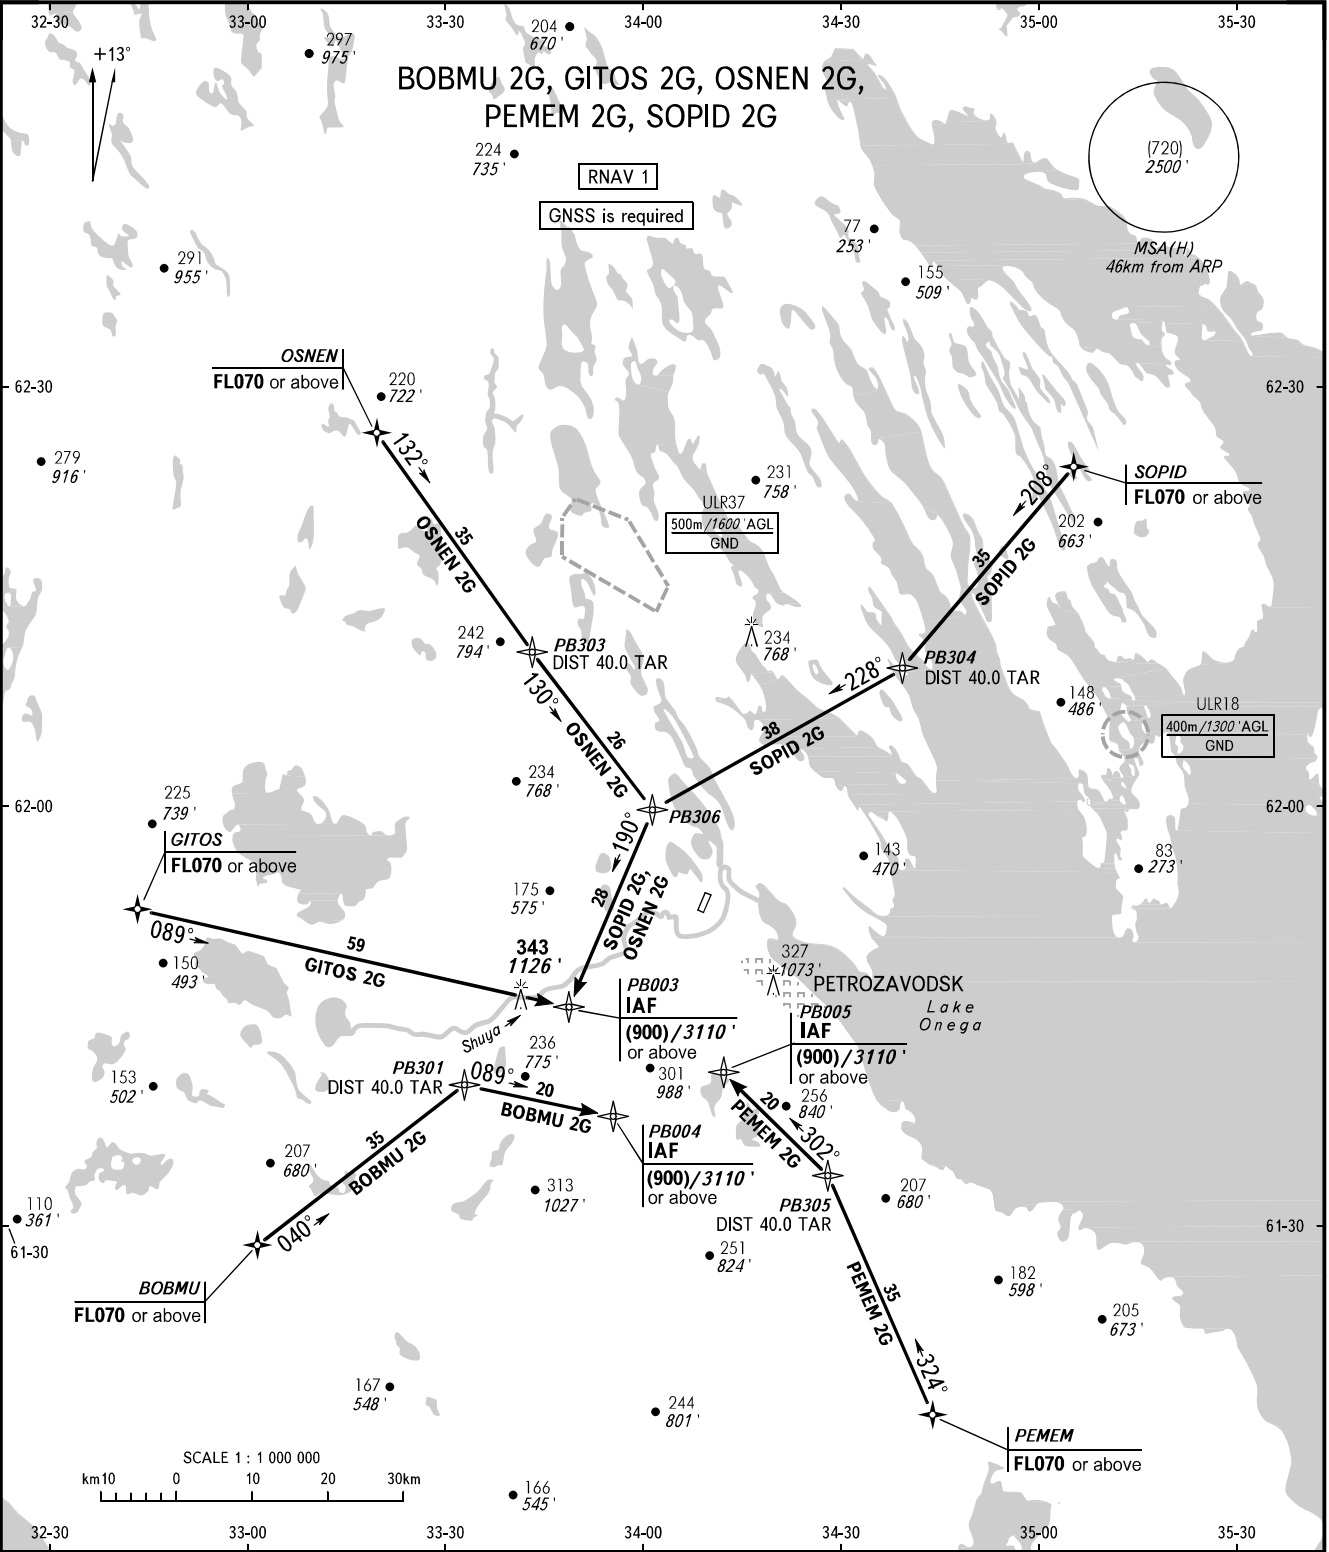

TOWER
128.000

1
TRANSITION LEVEL:
- FL050 when QFE is 733mm mercury column or above;
- FL060 when QFE is less than 733mm mercury column.

BEARINGS AND TRACKS ARE MAGNETIC HEIGHTS IN METRES ALTITUDES IN FEET ELEVATIONS IN METRES AND FEET DISTANCES IN KILOMETRES	Alt set: -QFE(QNH on req); -mm(hPa on req).
--	--