


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

TRANSITION
LEVEL: **FL080**

GROZNY, RUSSIA
SEVERNY
RWY 08/26

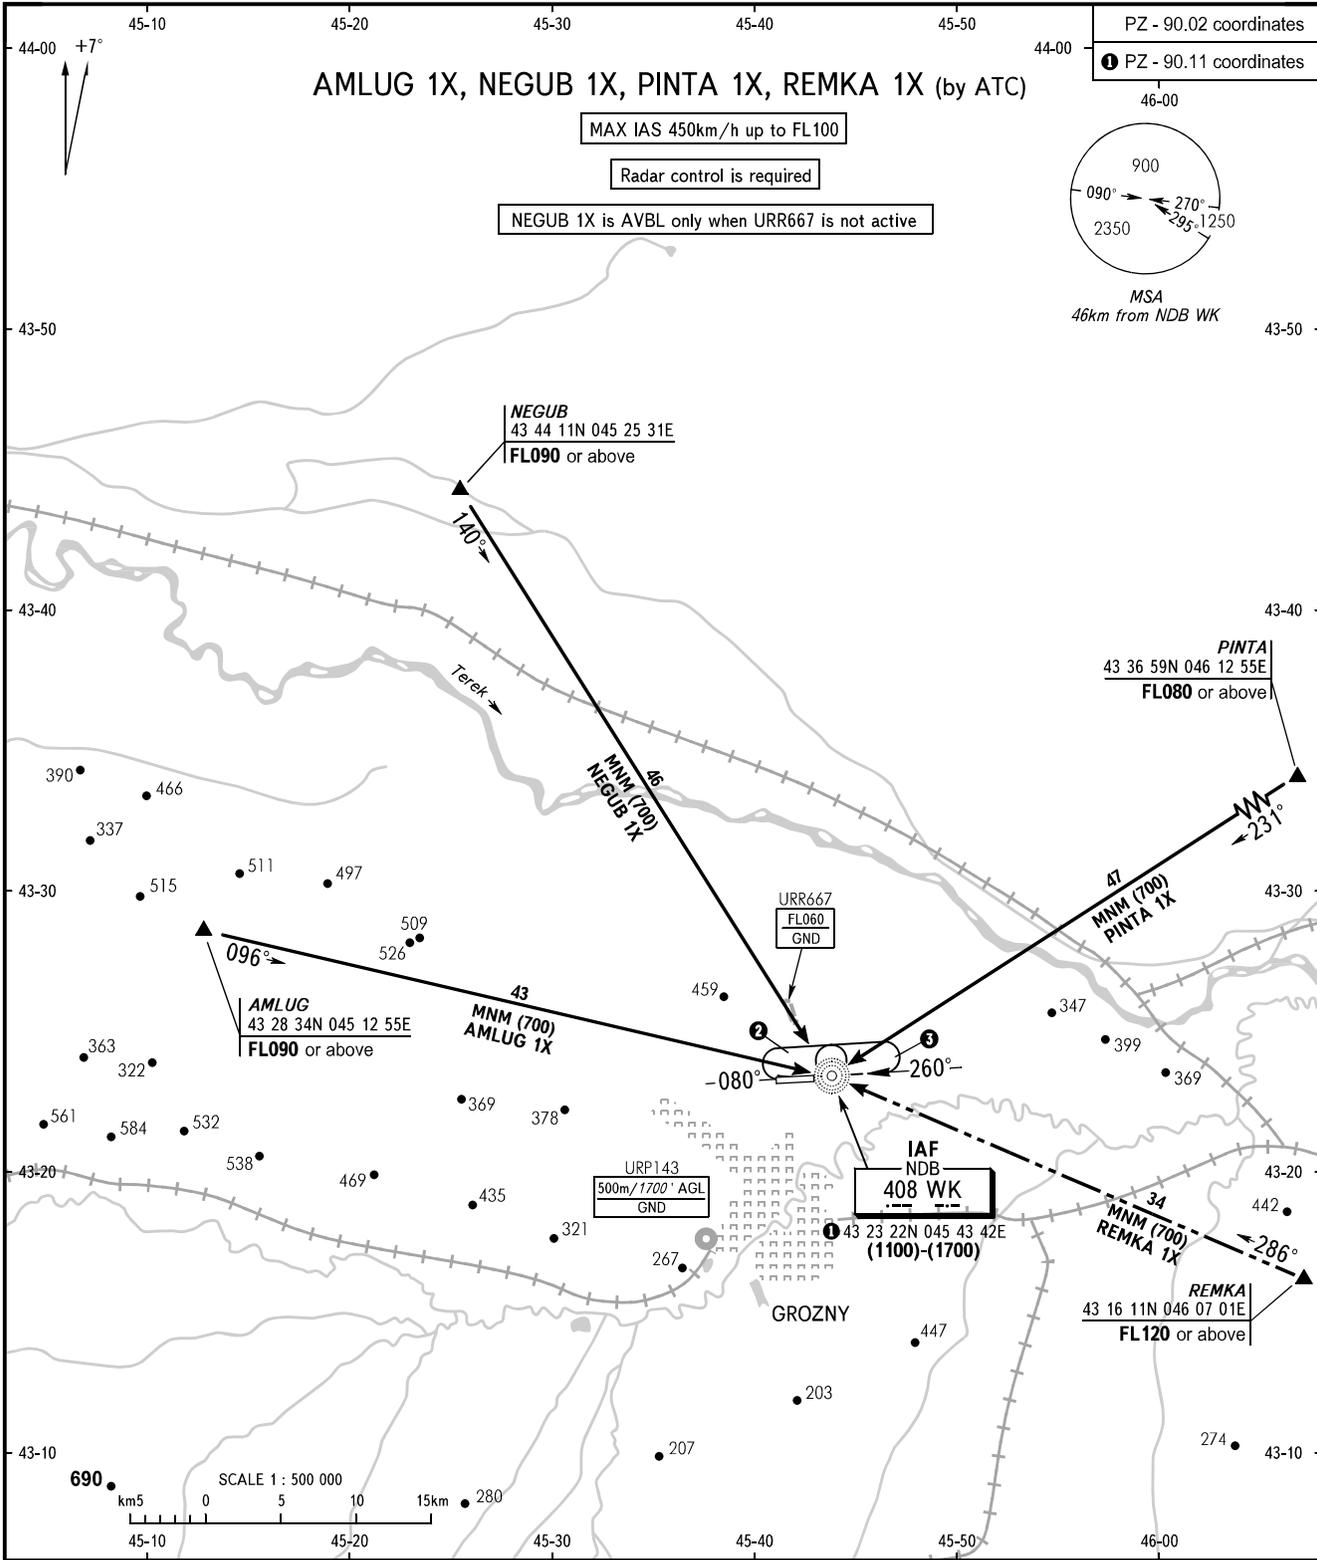

GROZNY TOWER **120.200**
GROZNY START **119.000**

WARNING:

- | | |
|--|--|
| ② HOLDING AREA
RWY 08
FL080 or below
MNM (700)
MAX IAS 425km/h
1min | ③ HOLDING AREA
RWY 26
FL080 or below
MNM (700)
MAX IAS 425km/h
1min |
|--|--|

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES, HEIGHTS AND ELEVATIONS IN METRES
DISTANCES IN KILOMETRES

Alt set: -QFE(QNH on req);
-mm(hPa on req).

CHANGE: HEADING: URP143