STANDARD ARRIVAL CHART INSTRUMENT (STAR) - ICAO

TRANSITION LEVEL: ❶

BLAGOVESHCHENSK, RUSSIA
IGNATYEVO
RWY 36

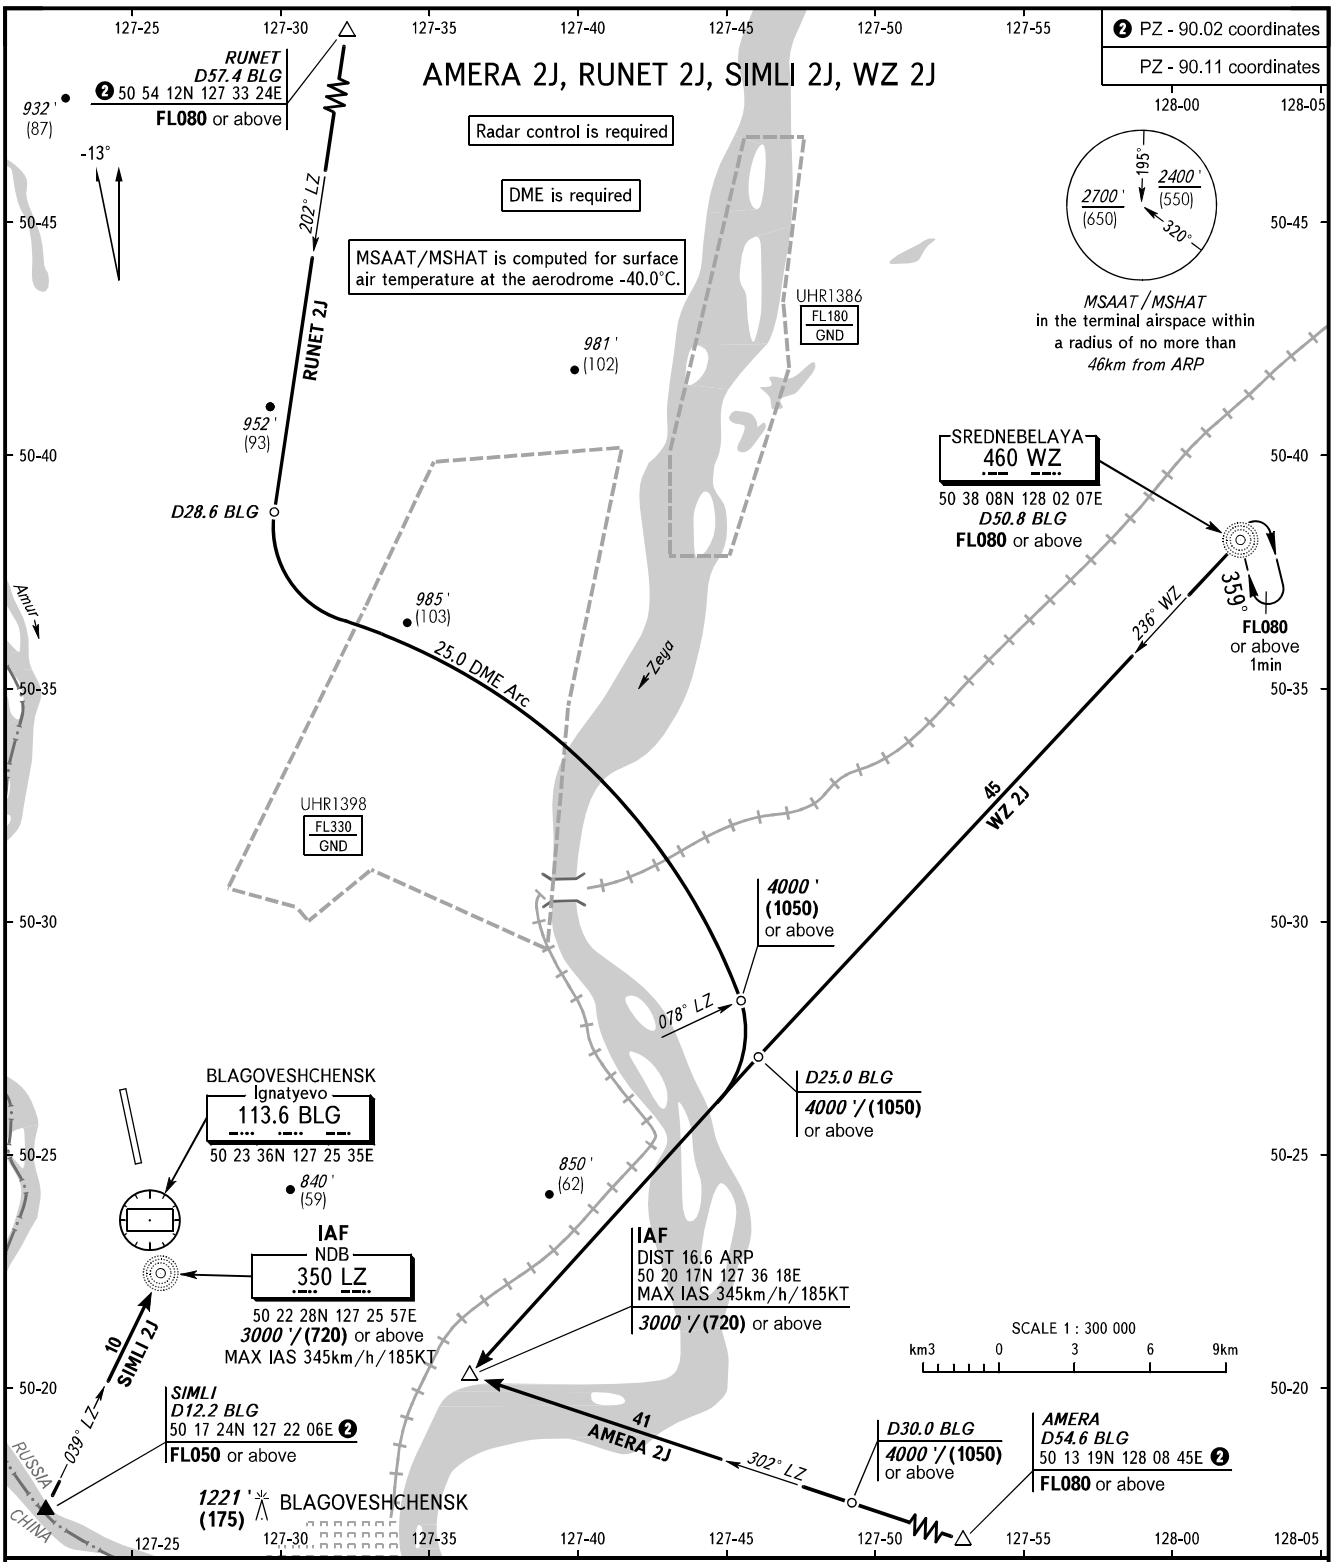

BLAGOVESHCHENSK TOWER **127.200**

❶ TRANSITION LEVEL:
- FL050 when QNH is 1013 hPa (760mm mercury column) or above;
- FL060 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL070 when QNH is less than 977 hPa (733mm mercury column).

BEARINGS AND TRACKS ARE MAGNETIC ELEVATIONS IN *FEET* AND METRES ALTITUDES IN *FEET* HEIGHTS IN METRES DISTANCES IN KILOMETRES	Alt set: - QNH (QFE on req); - hPa (mm on req).

CHANGE: New chart