STANDARD ARRIVAL CHART INSTRUMENT (STAR) - ICAO

TRANSITION LEVEL : ❶

NOVOSIBIRSK, RUSSIA
TOLMACHEVO
RWY 25, 34

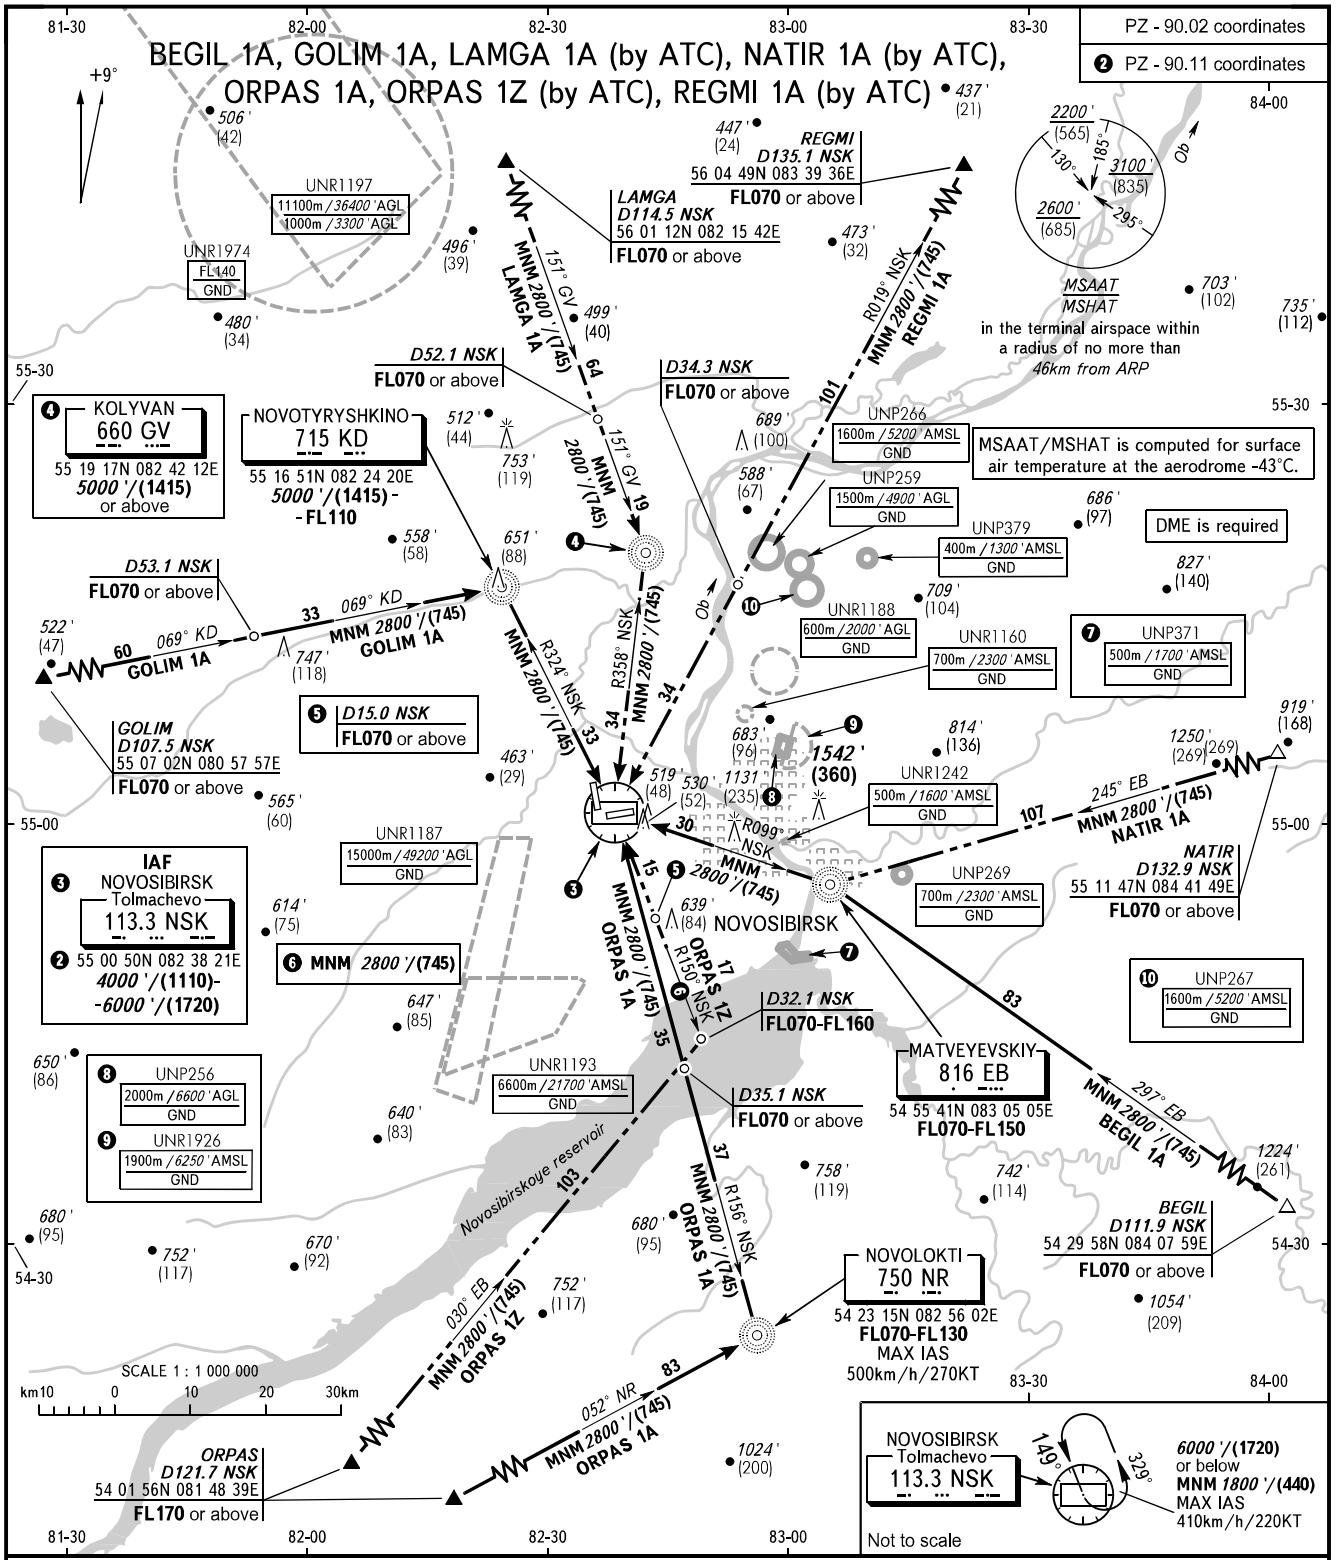

APPROACH	**127.500**	
RADAR	**122.000**	
TOWER	**118.500**	**126.700**

WARNING

Holding area shall be used, if clearance to cross UNR1187 (during its activity) or arrangement with ATS unit is AVBL.

❶ TRANSITION LEVEL:
- FL070 when QNH is 1013 hPa (760mm mercury column) or above;
- FL080 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL090 when QNH is less than 977 hPa (733mm mercury column).

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES IN *FEET*, HEIGHTS IN METRES
ELEVATIONS IN METRES AND *FEET*
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req); -hPa(mm on req).

CHANGE: UNP379