STANDARD ARRIVAL CHART INSTRUMENT (STAR) - ICAO

TRANSITION LEVEL : **FL080**

GROZNY, RUSSIA
SEVERNY
RNAV RWY 08

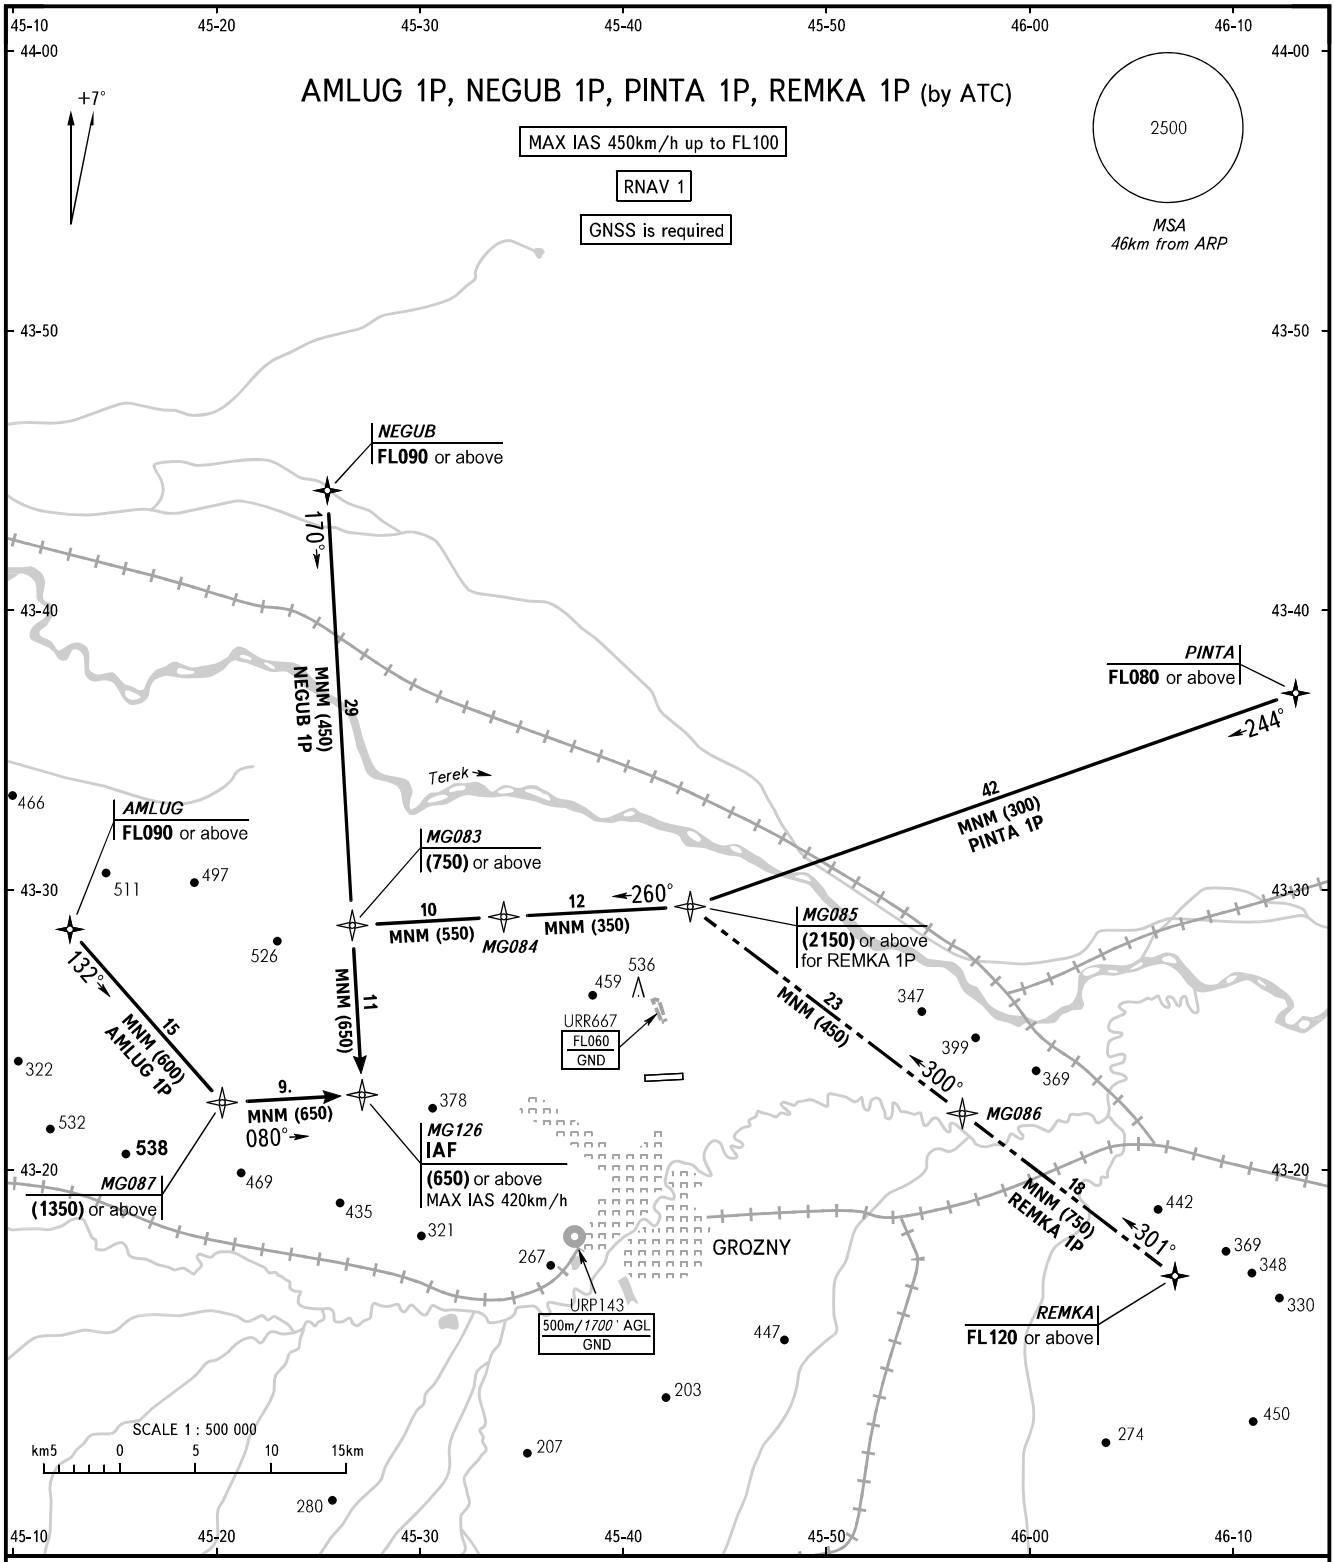

GROZNY TOWER **120.200**
GROZNY START **119.000**

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES, HEIGHTS AND ELEVATIONS IN METRES
DISTANCES IN KILOMETRES

Alt set: -QFE(QNH on req);
-mm(hPa on req).

CHANGE: HEADING, URP143