# STANDARD ARRIVAL CHART INSTRUMENT (STAR) - ICAO

TRANSITION LEVEL : ❶

# VLADIVOSTOK, RUSSIA
## KNEVICHI
## RNAV RWY 25L

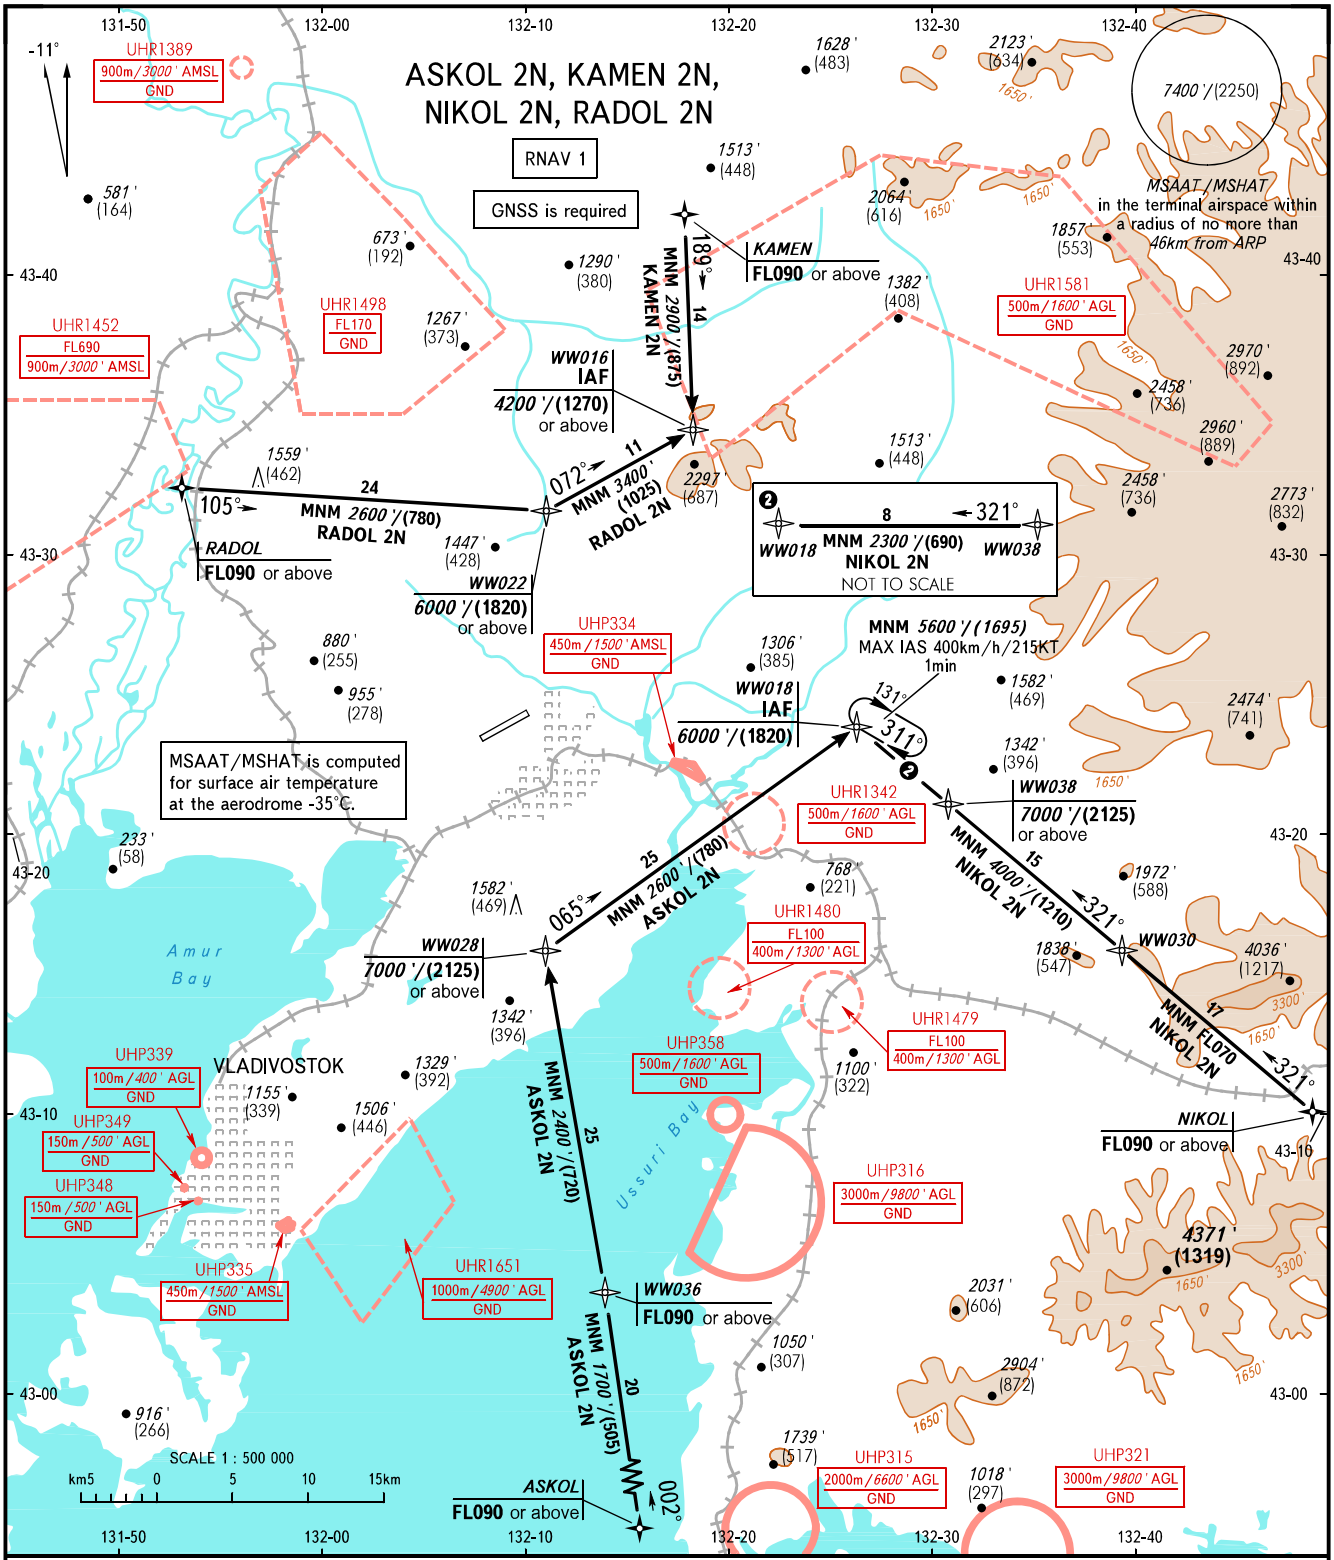


VLADIVOSTOK RADAR **123.400**
VLADIVOSTOK START **119.500**

❶ TRANSITION LEVEL:
- FL090 when QNH is 1013 hPa (760mm mercury column) or above;
- FL100 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL110 when QNH is less than 977 hPa (733mm mercury column).

**NOTE**
Holding procedure shall be executed by arrangement with ATS unit, when one of the areas UHR1479, UHR1480 is active.

| | |
|---|---|
| BEARINGS AND TRACKS ARE MAGNETIC<br>ALTITUDES IN *FEET*<br>HEIGHTS IN METRES<br>ELEVATIONS IN *FEET* AND METRES<br>DISTANCES IN KILOMETRES | Alt set: -QNH(QFE on req);<br>-hPa(mm on req). |

**CHANGE:** New chart