STANDARD ARRIVAL CHART INSTRUMENT (STAR) - ICAO

TRANSITION LEVEL : ❶

SYKTYVKAR, RUSSIA

SYKTYVKAR
RWY 18

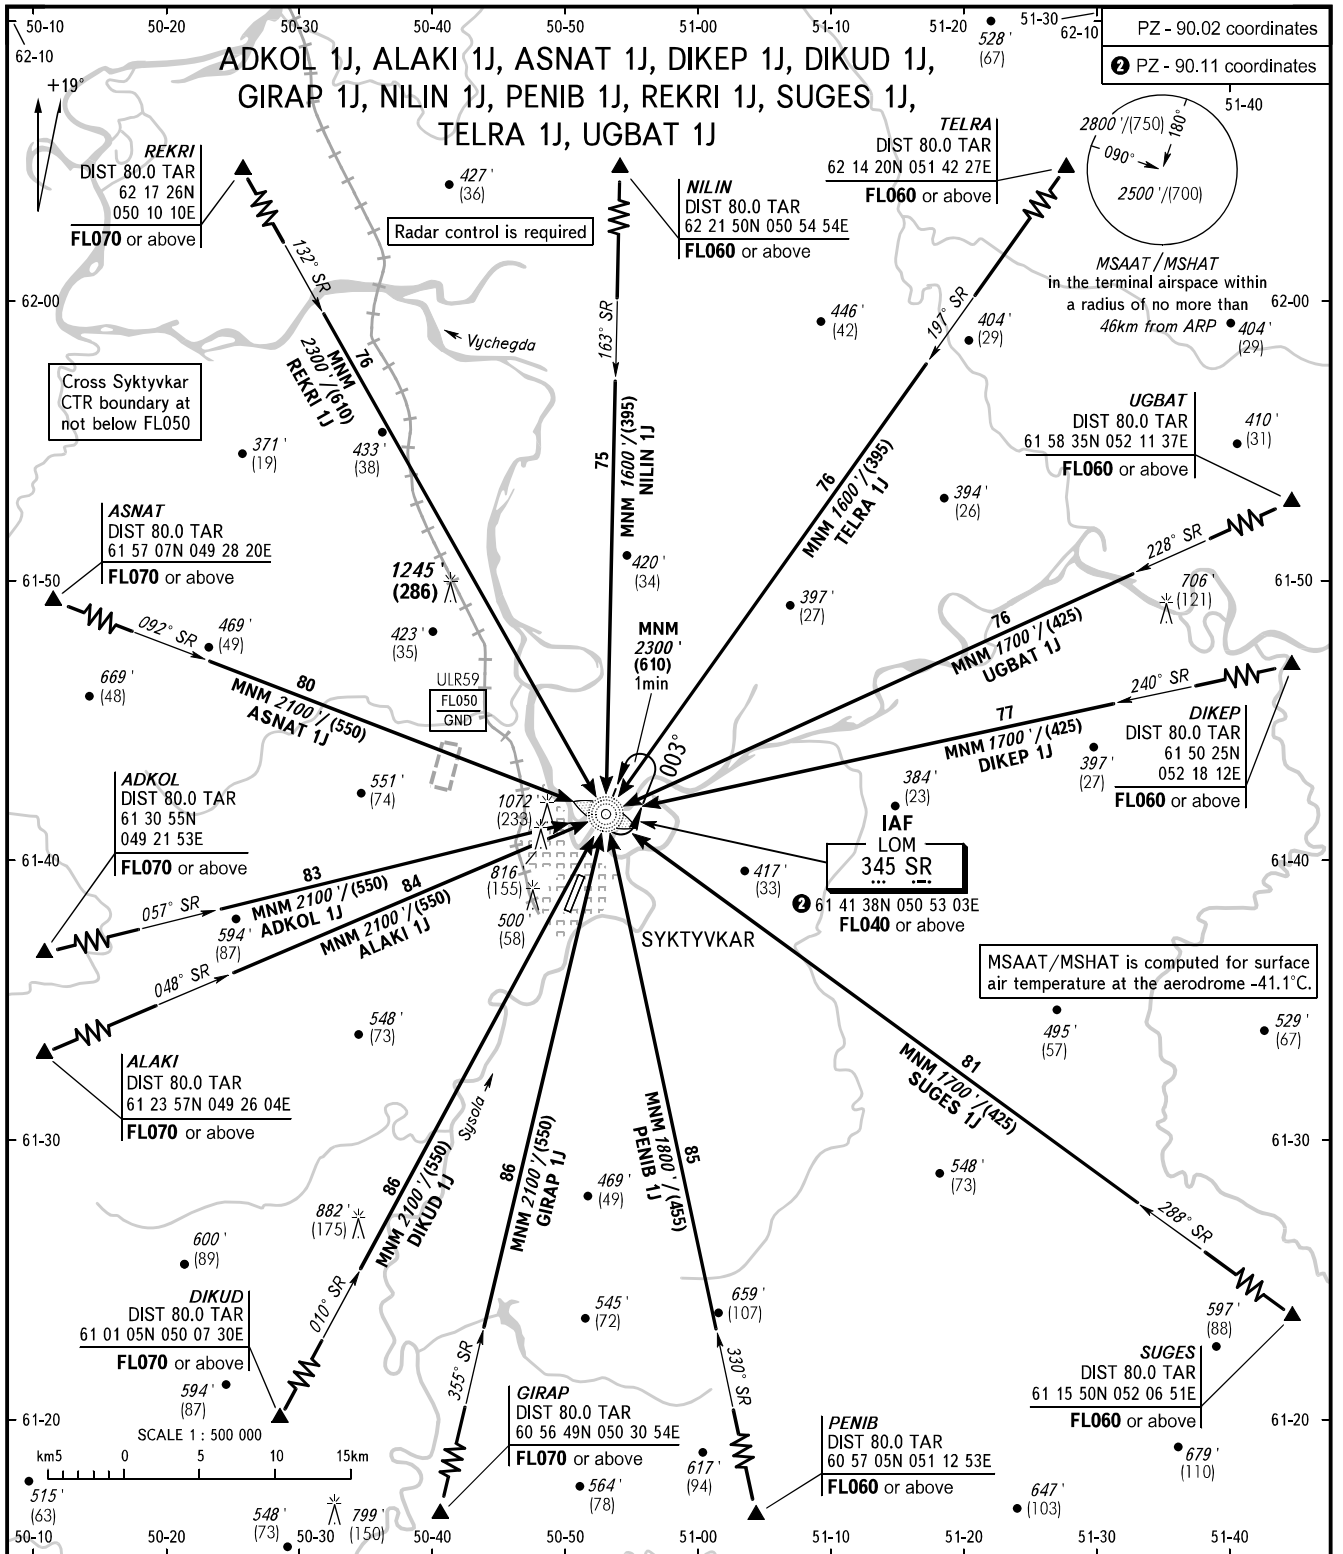

SIVKAR RADAR **124.600**

WARNING:
1. TAR reads zero at ARP.
2. ADKOL 1J, ASNAT 1J, ALAKI 1J, REKRI 1J, HLDG by ATC, when ULR59 is active.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES IN ***FEET***
ELEVATIONS IN ***FEET*** AND METRES
HEIGHTS IN METRES
DISTANCES IN KILOMETRES

Alt set: - QNH(QFE on req);
- hPa(mm on req).

❶ TRANSITION LEVEL:
- FL040 when QNH is 1013 hPa (760mm mercury column) or above;
- FL050 when QNH is 977 hPa (733mm mercury column) or above but less than 1013 hPa (760mm mercury column);
- FL060 when QNH is less than 977 hPa (733mm mercury column).

CHANGE: NIL