STANDARD ARRIVAL CHART INSTRUMENT (STAR) - ICAO

TRANSITION LEVEL : ❶

ANAPA, RUSSIA
VITYAZEVO
RWY 21

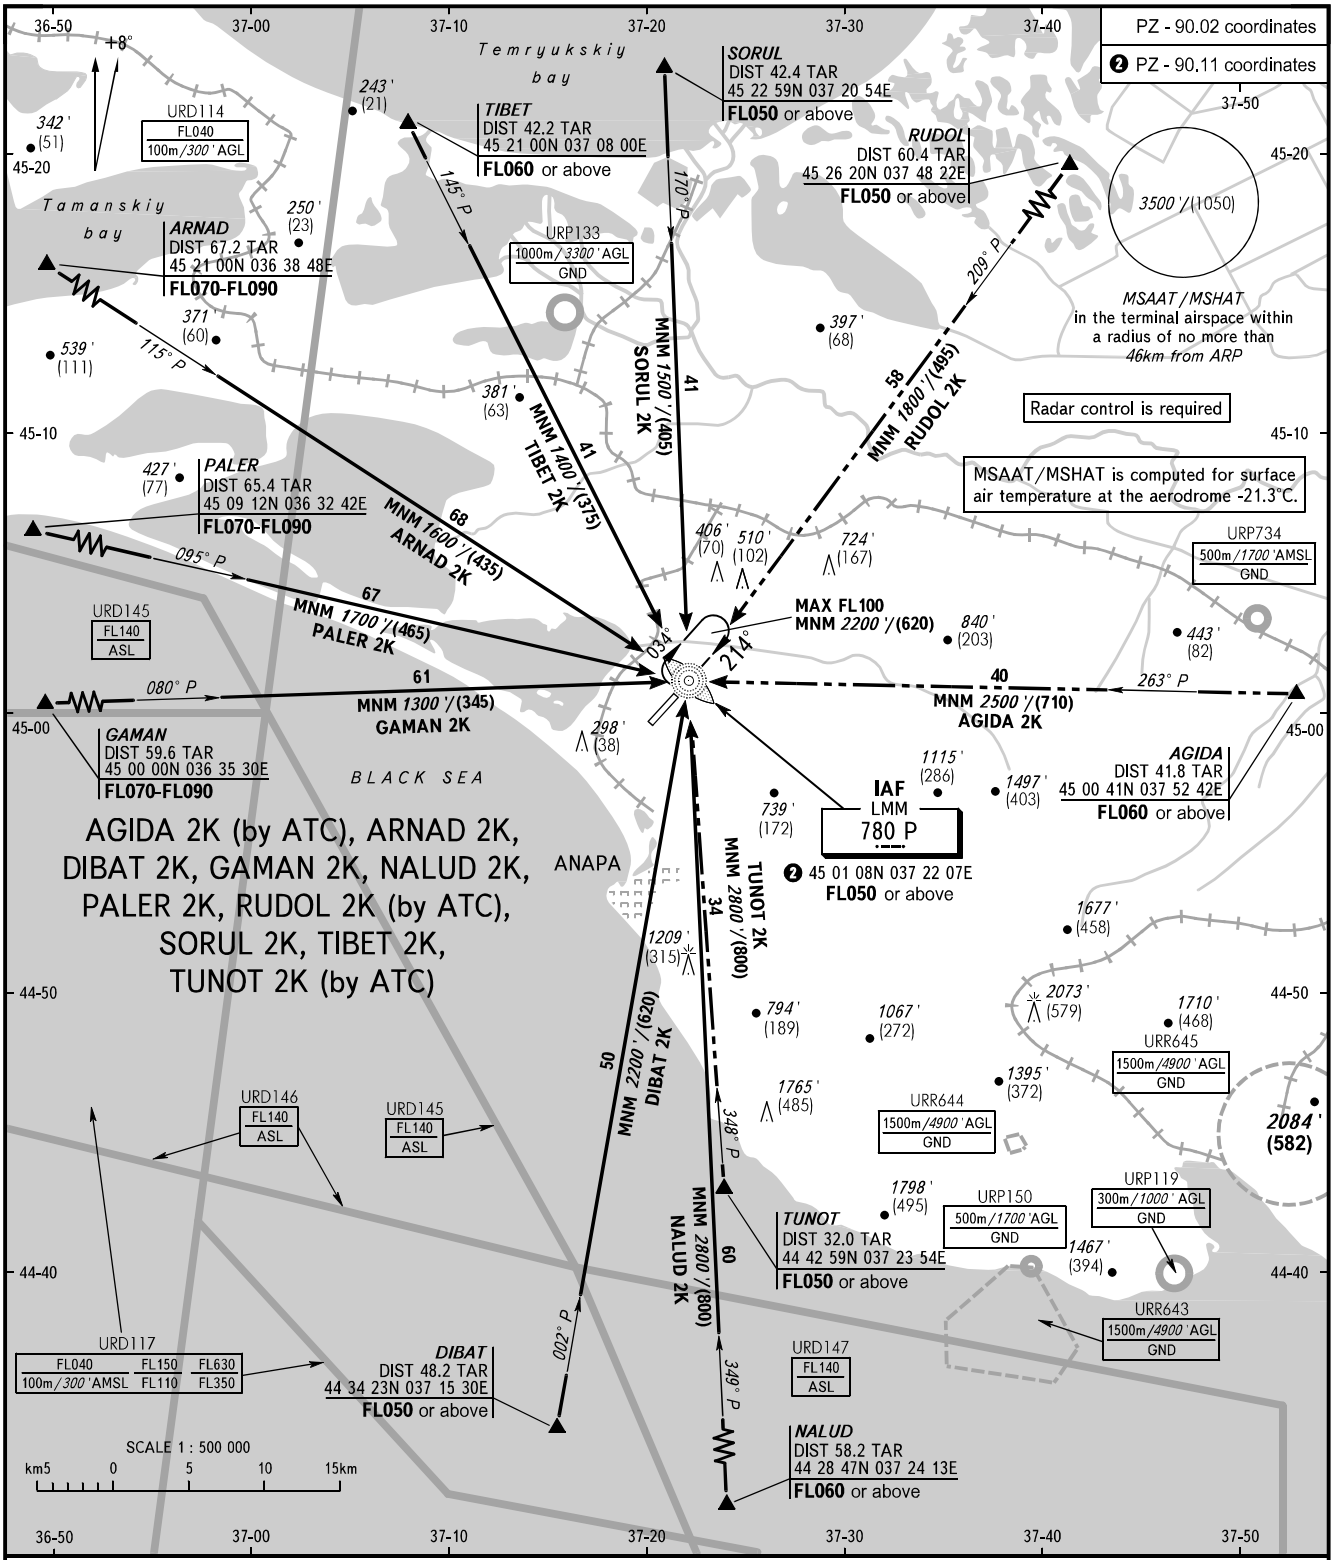

ANAPA RADAR	**118.700**
ANAPA TOWER	**119.800**

❶ TRANSITION LEVEL:
- FL050 when QNH is 1013 hPa (760mm mercury column) or above;
- FL060 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL070 when QNH is less than 977 hPa (733mm mercury column).

BEARINGS AND TRACKS ARE MAGNETIC ALTITUDES IN *FEET* HEIGHTS IN METRES ELEVATIONS IN *FEET* AND METRES DISTANCES IN KILOMETRES	Alt set: -QNH(QFE on req); -hPa(mm on req).

CHANGE: URD145, URD146, URD147