STANDARD ARRIVAL CHART INSTRUMENT (STAR) - ICAO

TRANSITION LEVEL : ❶

ULYANOVSK, RUSSIA
BARATAYEVKA
RWY 20

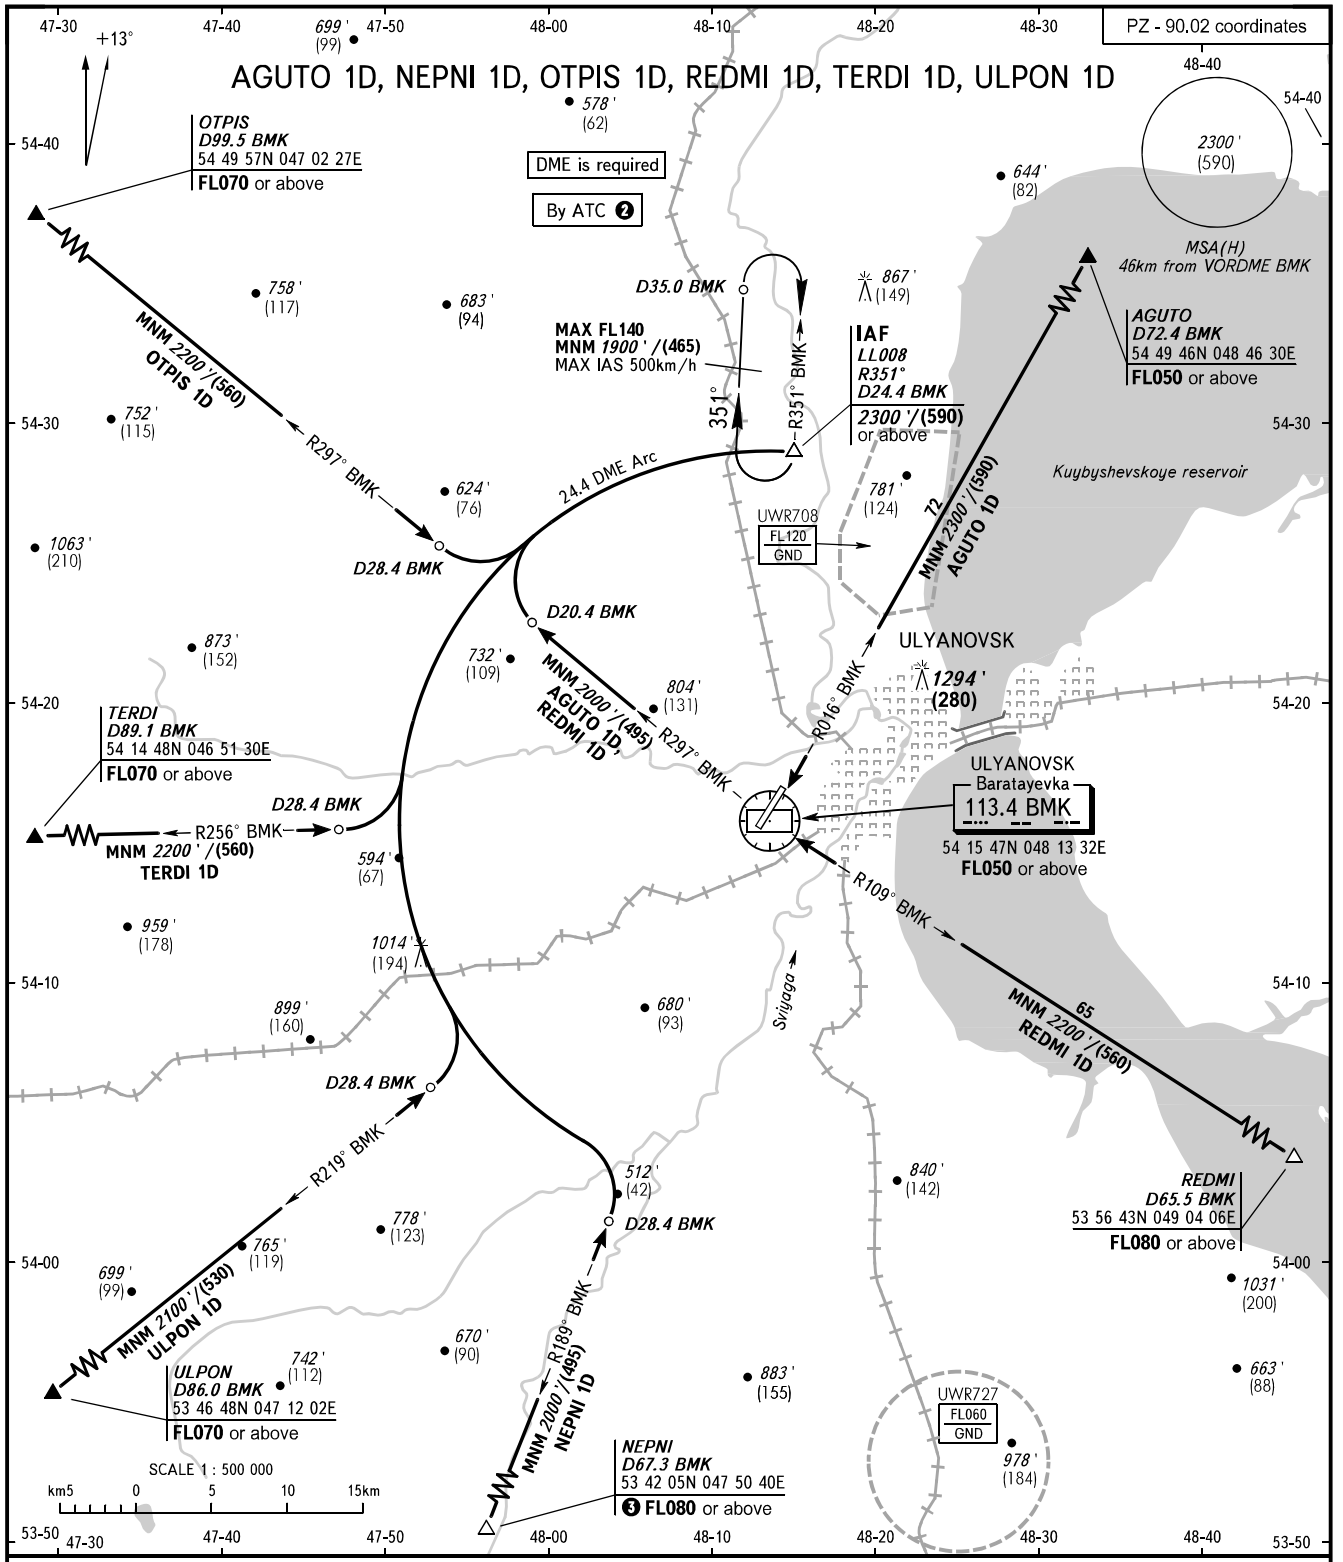

APPROACH	**127.300**
RADAR	**120.800**
START	**120.400**

❶ TRANSITION LEVEL:
- FL050 when QNH is 1013 hPa (760mm mercury column) or above;
- FL060 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL070 when QNH is less than 977 hPa (733mm mercury column).

❷ When restricted area UWR708 is active.

❸ **FL070** - by ATC.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES IN ***FEET***
HEIGHTS IN METRES
ELEVATIONS IN ***FEET*** AND METRES
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);
-hPa(mm on req).

CHANGE: Heading, HGT