

STANDARD DEPARTURE CHART-INSTRUMENT


RJCC / NEW CHITOSE

SID

SAVIT TWO DEPARTURE

RWY01L/01R: Climb via RWY HDG until 1NM FM RWY end/CHE 6.3DME, turn right, direct to CHE VOR/DME within CHE 10DME (5NM FM RWY end), via CHE R224 to SAVIT.
Cross 4DME prior to CHE VOR/DME (MKE R330) at or above 3000FT, cross CHE R224/8.0DME at or above 3600FT.

RWY19R/19L: Climb direct to CHE VOR/DME, via CHE R224 to SAVIT.
Cross CHE R224/8.0DME at or above 3600FT.

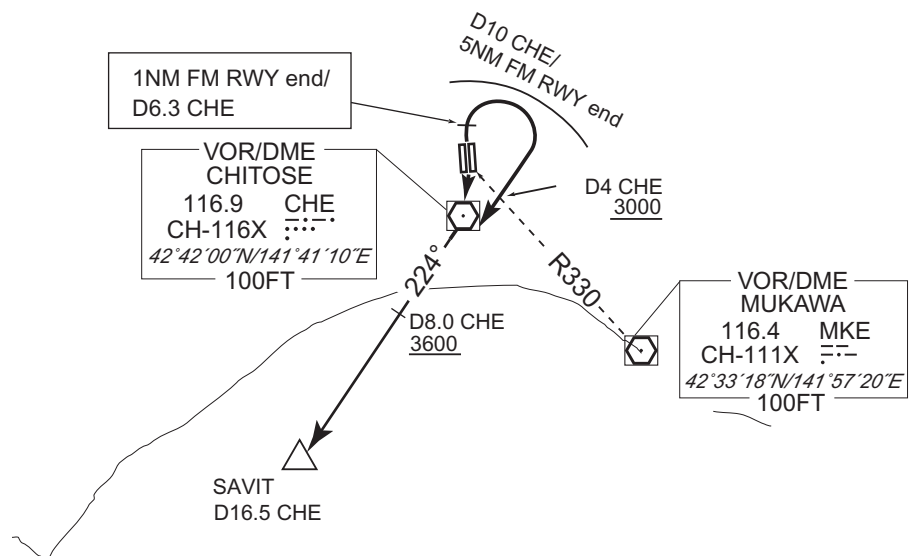

CHANGE : Description of PROC name.