


STANDARD DEPARTURE  
CHART - INSTRUMENT  
(SID)

TRANSITION  
ALTITUDE 5000  
VAR 2° E

BADEN ATIS	121.280
BADEN GROUND	121.830
BADEN TOWER	134.105
STRASBOURG APPROACH	119.580

KARLSRUHE/BADEN-BADEN  
RWY 03

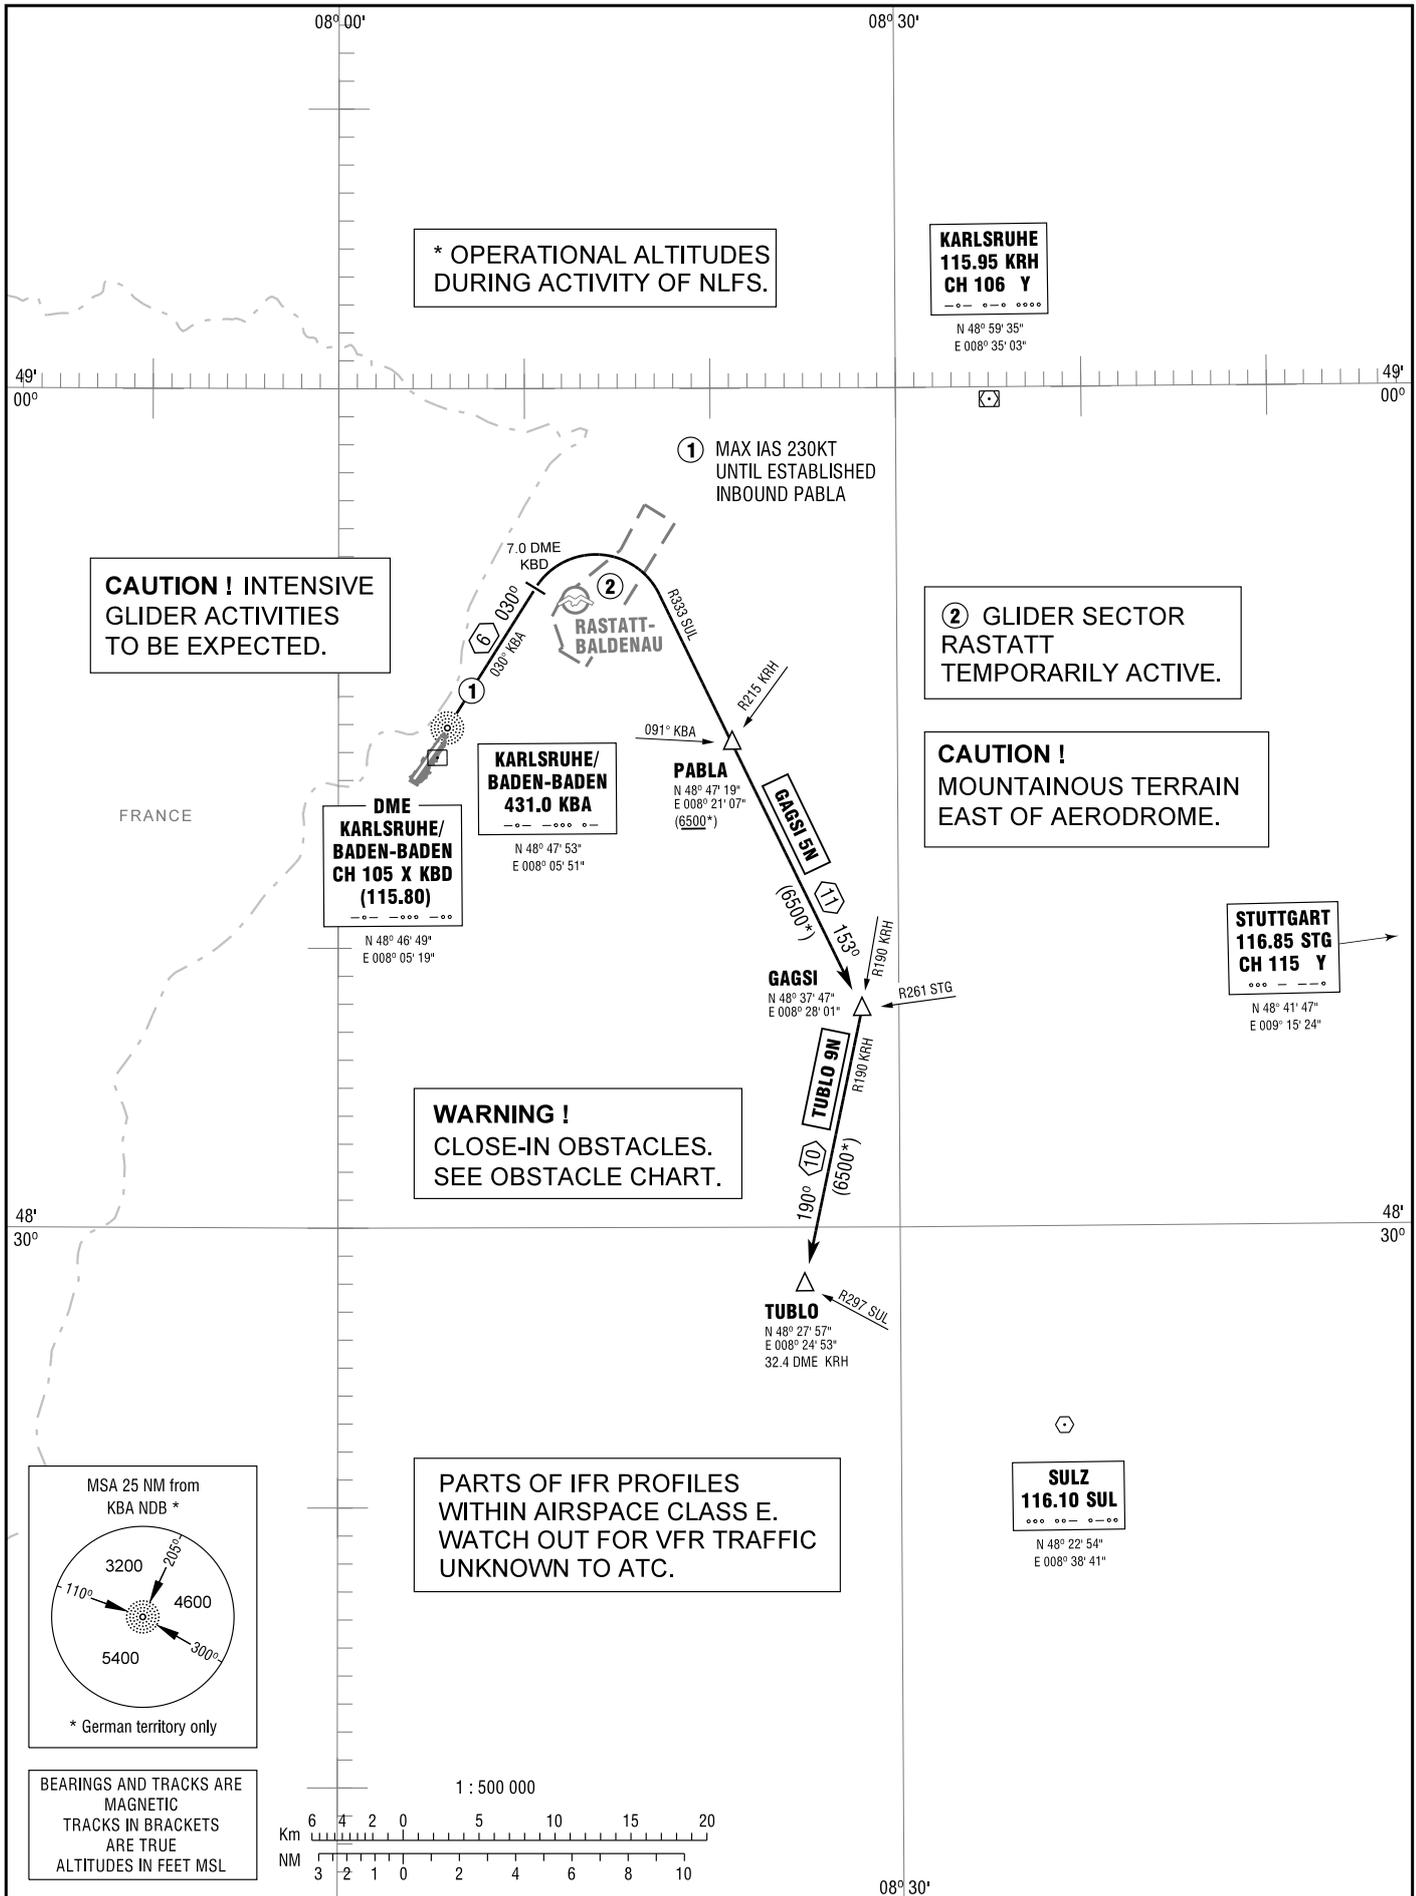

Correction: Communications.