
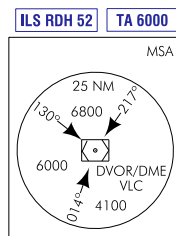


VALENCIA
ILS Y
RWY 12



AD 2-LEVC IAC/2.1

VALENCIA AD

REQUISITOS DE LA BASE DE DATOS AERONÁUTICA
AERONAUTICAL DATABASE REQUIREMENTS

PROCEDIMIENTOS DE APROXIMACIÓN POR INSTRUMENTOS // INSTRUMENT APPROACH PROCEDURES

ILS Y RWY 12



PUNTO POINT	LAT	LONG	AZIMUT VERDADERO TRUE BEARING	DISTANCIA DME DME DISTANCE (NM)
DVOR/DME CLS (IAF)	39°42'25.8"N	000°59'10.8"W	—	—
OPERA	39°37'21.9"N	000°46'44.1"W	117.71° (CLS)	10.87 DME CLS
IF	39°35'09.0"N	000°44'10.2"W	296.19° (LOC VLN)	12.20 DME ILS
FAP	39°33'10.7"N	000°38'57.2"W	296.19° (LOC VLN)	7.71 DME ILS
Aproximación final de precisión - Pendiente (Ángulo de descenso) // Precision final approach - Slope (Descent angle)				5.24% (3.00°)