

STANDARD DEPARTURE CHART-INSTRUMENT


RJCJ / CHITOSE

SID

SAVIT TWO DEPARTURE

- RWY 36R/36L : Climb via RWY HDG to 500ft or above, turn right to CHE VOR/DME within CHE 10DME (5NM FM RWY end).
Cross 4DME prior to CHE VOR/DME (MKE R-329) at or above 3,000ft....
- RWY 18R/18L : Climb direct to CHE VOR/DME....
....then via CHE R-224 to SAVIT.
Cross CHE R-224/8.0DME at or above 3,600ft.

SAVIT TWO DEPARTURE

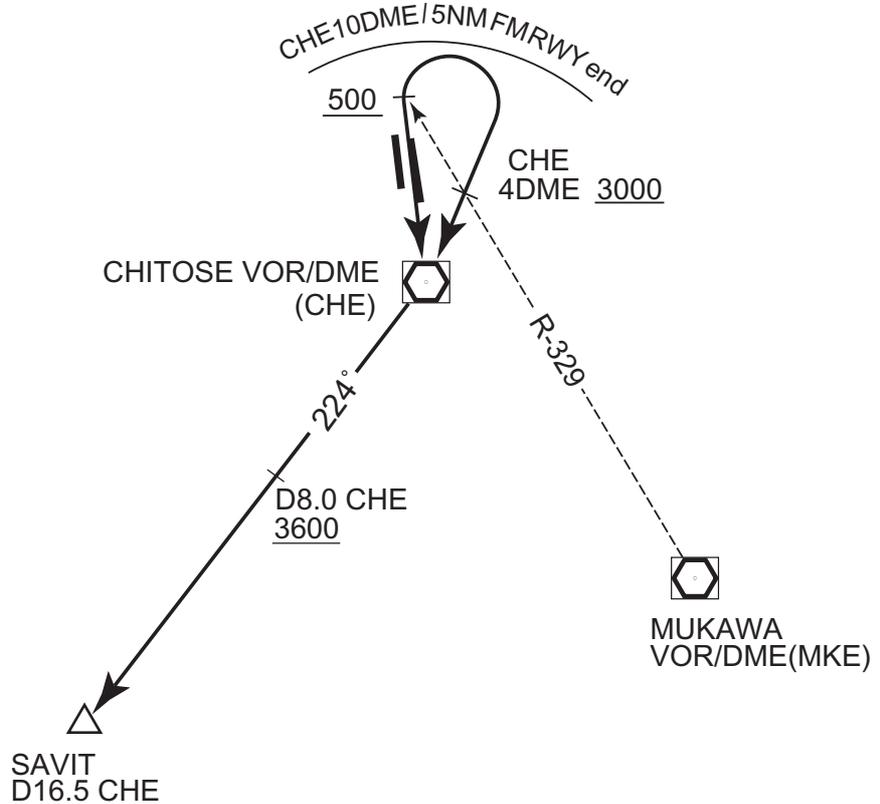

CHANGE : PROC renamed. ALT restriction added.