

STANDARD DEPARTURE CHART - INSTRUMENT

RJCW / WAKKANAI

SID

PANKE TWO DEPARTURE


RWY08 : Climb RWY HDG to 900FT, turn right HDG 220° ...

RWY26 : Climb RWY HDG to 700FT, turn left HDG 130° ...
...to intercept and proceed via WKE R175 to PANKE.

Cross WKE R175/16.0DME at or below 6000FT, cross PANKE at or above 6000FT.

NOTE RWY08 : 4.4% climb gradient required up to 900FT.

OBST ALT 591FT located at 2.6NM 096° FM end of RWY08.

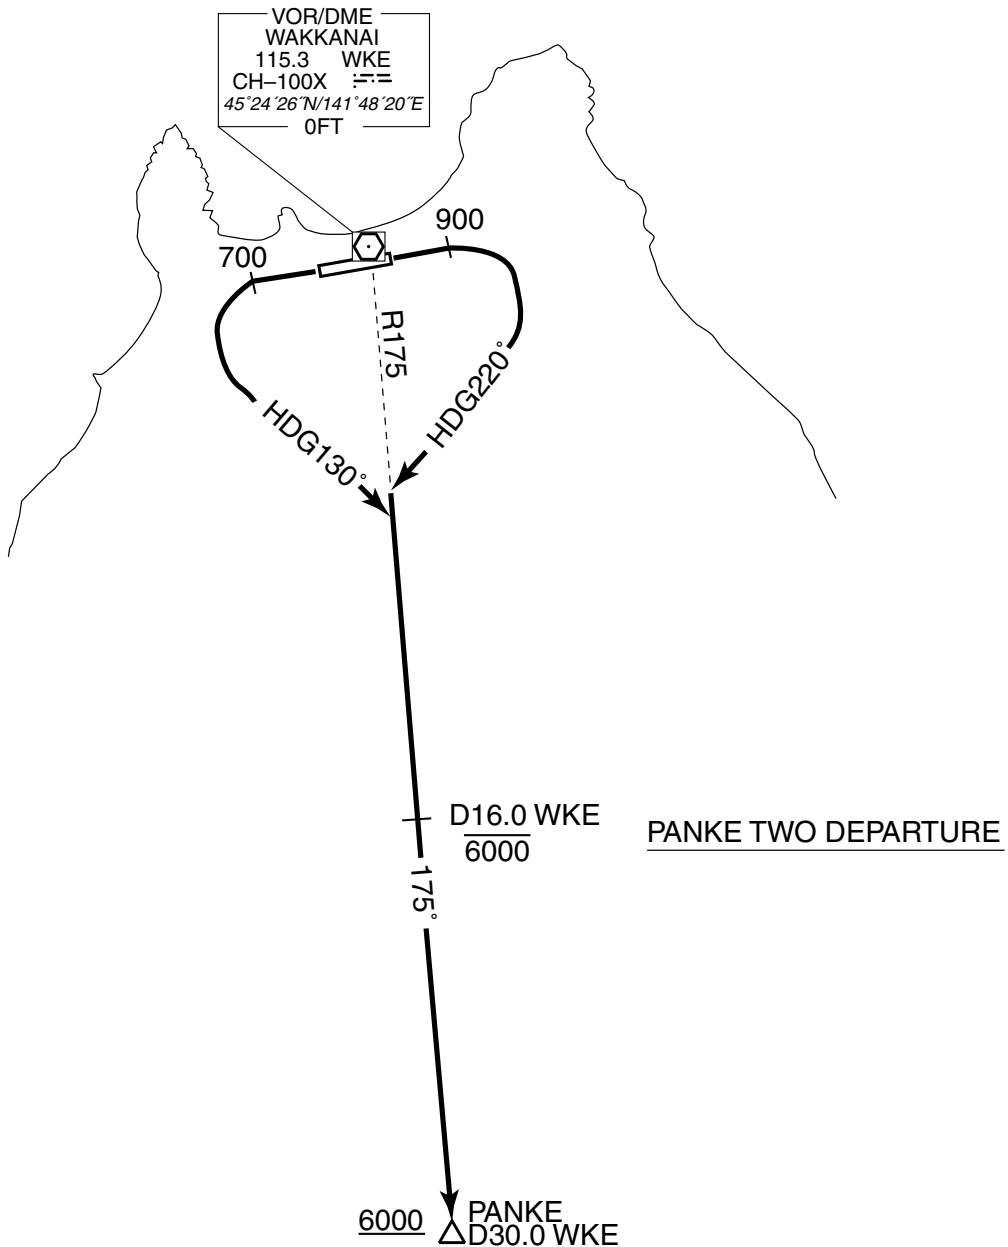

STANDARD DEPARTURE CHART - INSTRUMENT

RJCW / WAKKANAI

TRANSITION

URYU TRANSITION

From over PANKE, proceed via WKE R175/AWE R355 to intercept and proceed via SPE R040 to RUMOI.

Cross WKE R175/60.0DME (AWE R355/48.0DME) at or above 11000FT.

NOTE : PANKE AWE MRA 9000FT.

