

STANDARD DEPARTURE CHART -INSTRUMENT

RJGG / CHUBU CENTRAIR

SID

ESPAN THREE DEPARTURE

RWY18 : Climb RWY HDG to 500FT, turn right,...


RWY36 : Climb RWY HDG to 500FT, turn left HDG260° to intercept and proceed via KCC R214 to 30.7DME(CBE R256), turn left, via CBE 9.0DME counterclockwise ARC,...

...via CBE R203 to ESPAN via FTAMI.

Cross FTAMI at or above 7000FT.

Cross ESPAN at or above 12000FT.

CHANGE : Description of PROC name.

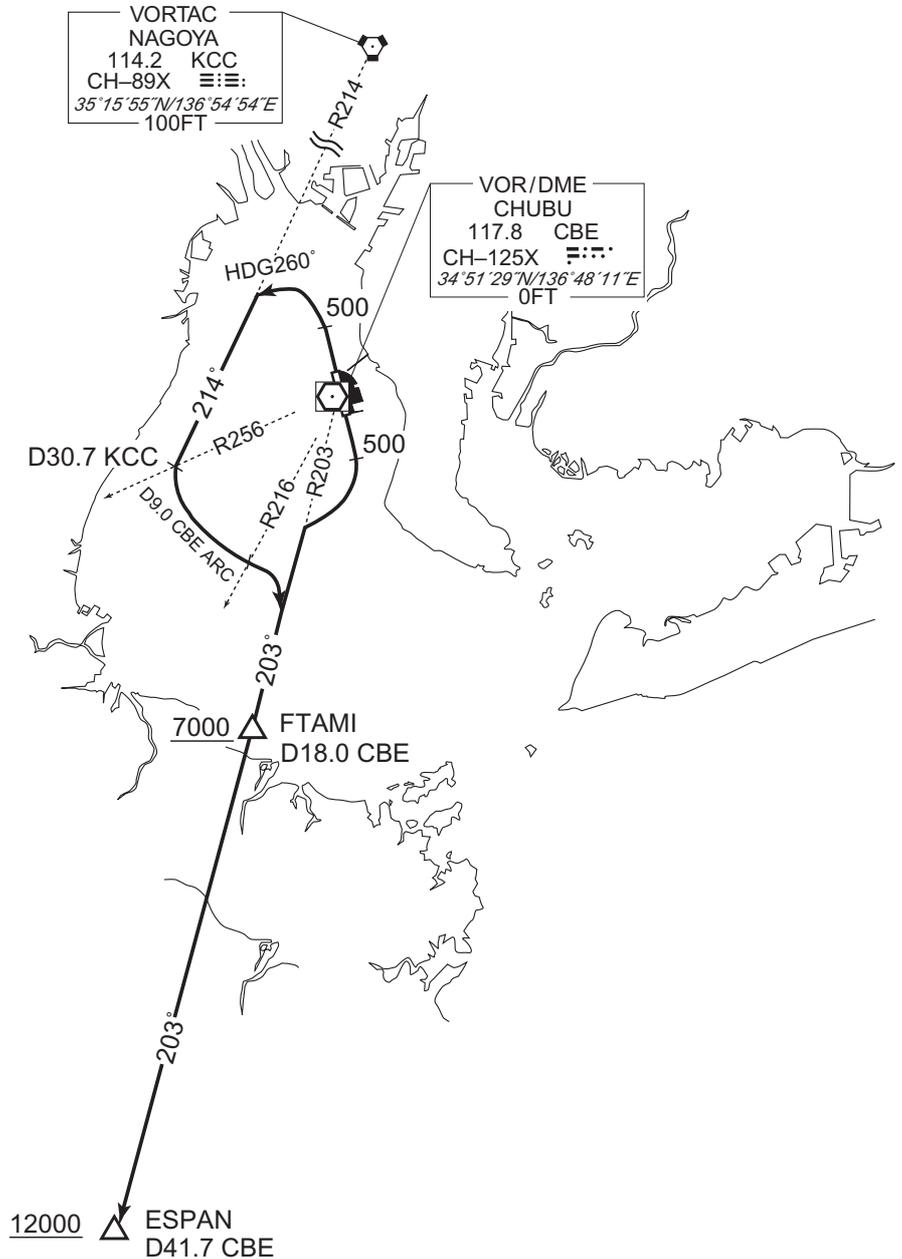

STANDARD DEPARTURE CHART -INSTRUMENT


RJGG / CHUBU CENTRAIR

TRANSITION

KUSHIMOTO TRANSITION

From over ESPAN, proceed via KEC R049 to KEC VORTAC.

Note : Not applicable for aircraft equipped with TACAN only.

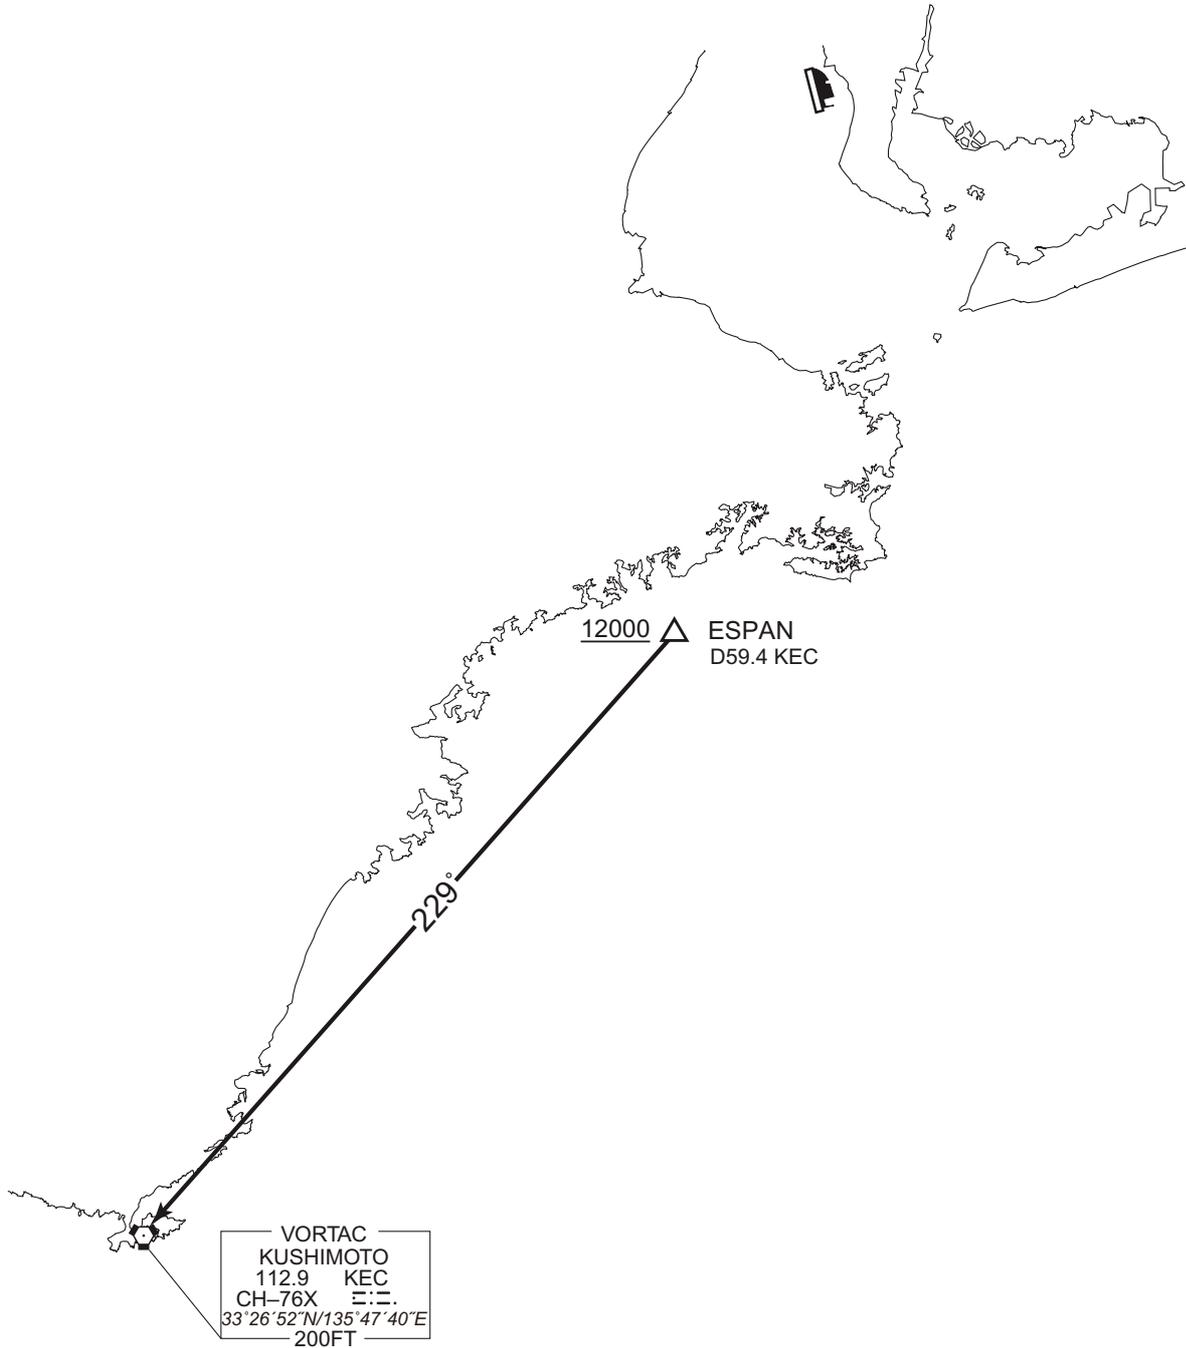

CHANGE : Note added.