


MISSED APPROACH:
Climb straight ahead, intercept and follow R 245 PAR, to 12 DME PAR turn right, intercept and follow R 265 PAR. Proceed to PAR 4000ft, turn right intercept and follow R 121 PAR and enter the holding pattern 4000ft. (See Note 2)

Note 1
For Missed Approach MNM HOLDING ALTITUDE 4000ft.

Note 2
If traffic permits, a/c executing a missed approach procedure may be cleared, after passing PAR 4000ft, to execute the published base turn procedure.

Transition Altitude 6000

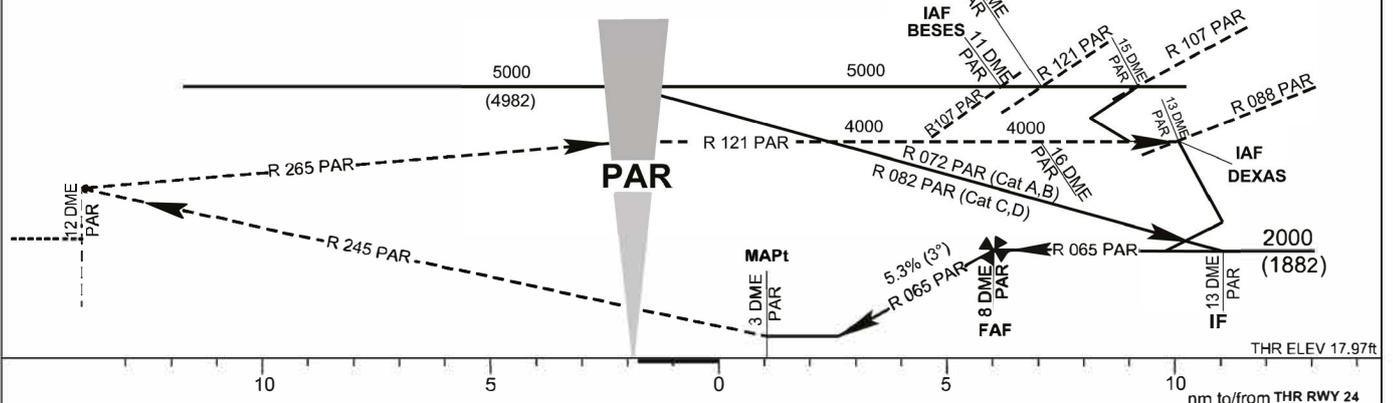

OCA / H	A	B	C	D	Altitude / Height on Final Approach								
					7 DME	6 DME	5 DME	4 DME	3 DME				
Straight-in Approach		1100 (1082)			1678 (1660)	1356 (1338)	1034 (1016)	712 (694)	390 (372)				
Circling NORTH of RWY		1100 (1081)			KT	100	130	140	150	160	170	180	190
					Rate of descent ft/min	537	698	751	805	859	912	965	1020