



ICAO - INSTRUMENT APPROACH CHART

DOC.8168-ED.6-2014

NEW PROCEDURE

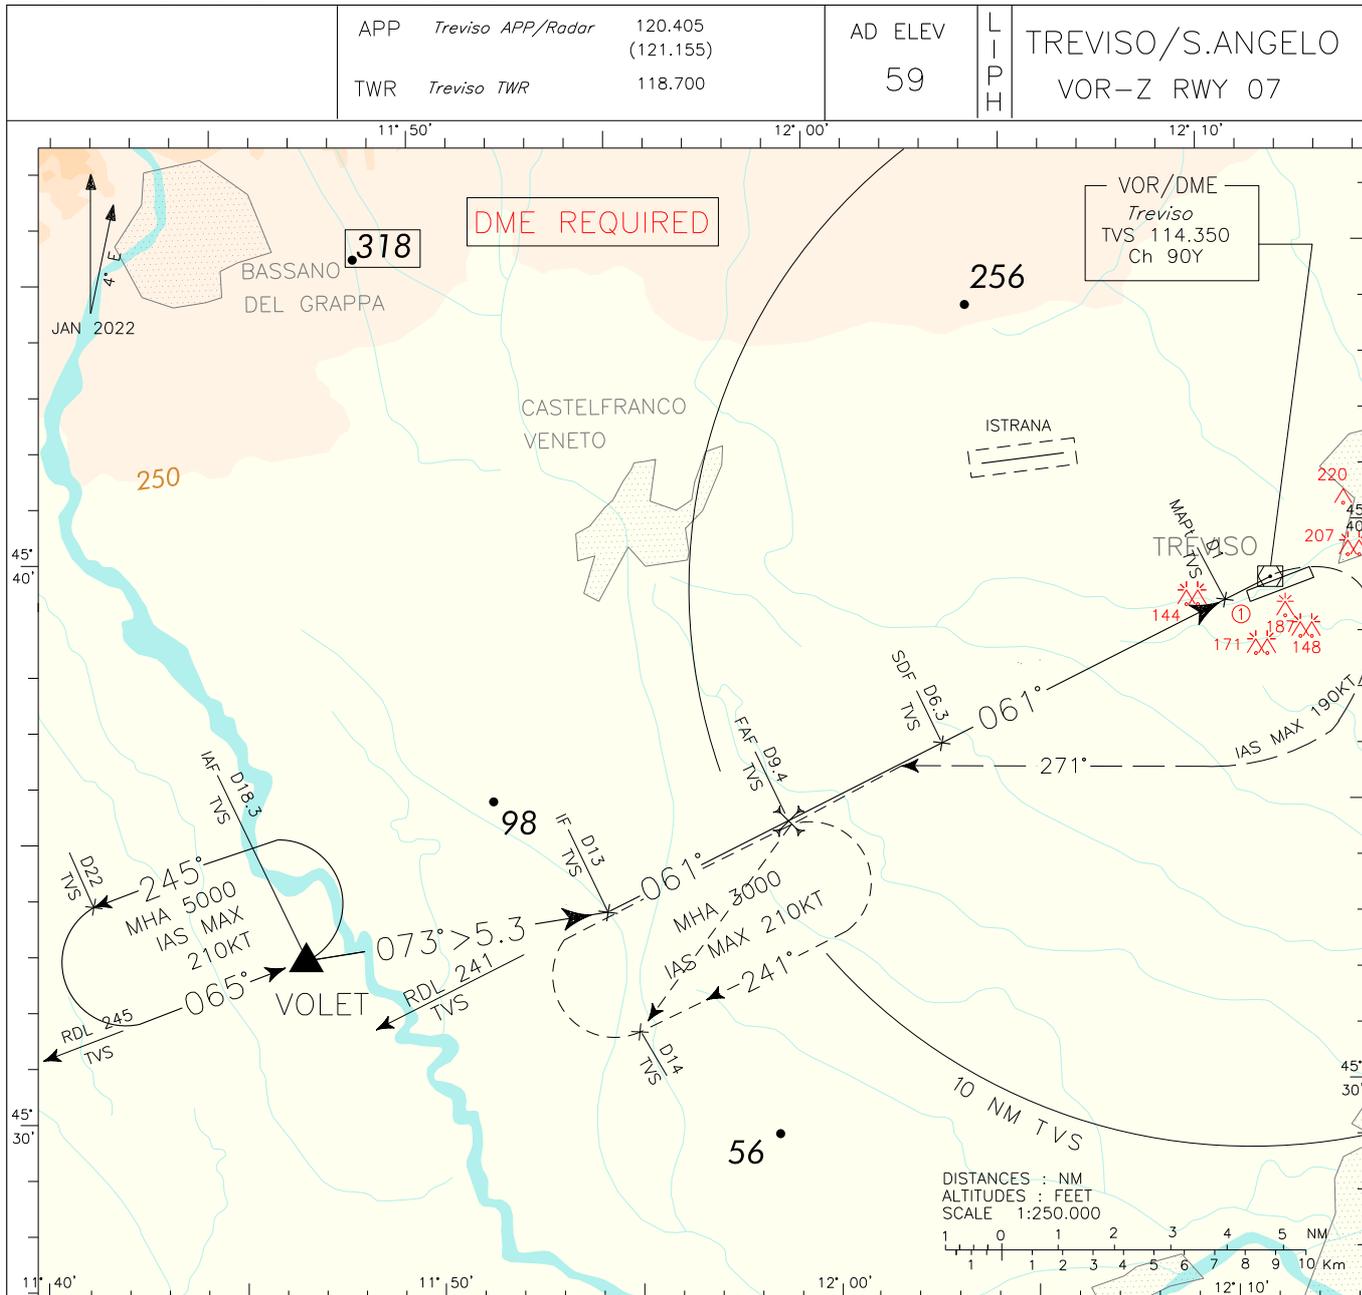

TRANSITION ALT 6000 MISSED APPROACH: As soon as possible, turn right (TR 271° IAS MAX 190KT) climbing to 3000 ft to intercept and follow RDL 241 (TR 241°) TVS VOR to MAHF (RDL 241/9.4 NM TVS VOR/DME). Hold between D9.4 and D14 NM TVS DME inbound track 061°, IAS MAX 210KT, right turn.

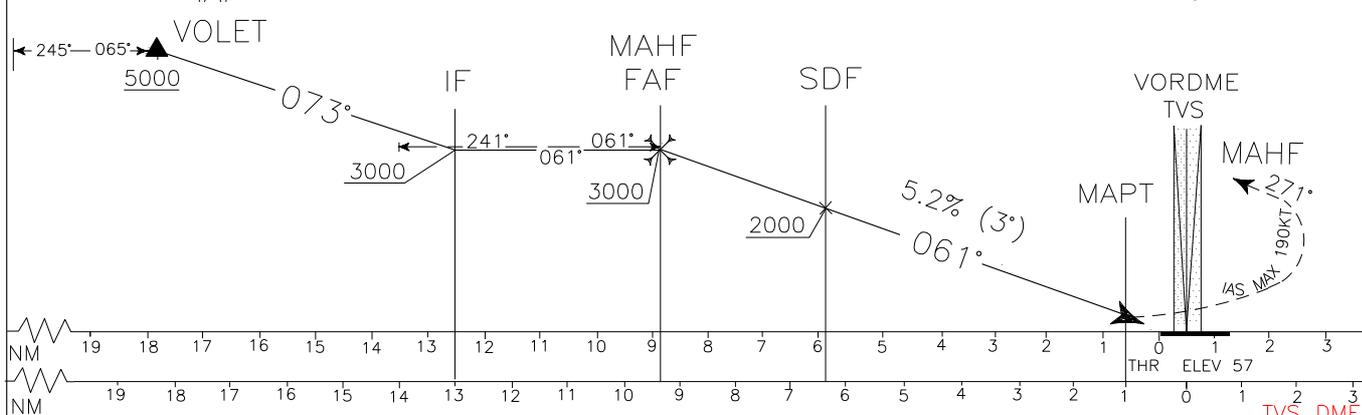

OCA (OCH)		A	B	C	D		GS	FT PER MN	DME TVS	ALT (HGT)	MNM SECT ALT TVS VOR
STRAIGHT IN APPROACH	VOR RWY 07	510 (460)					80	420	8	3000 (2943)	
							100	530	7	2225 (2168)	
							120	640	6.3	2000 (1943)	
CIRCLING	South of RWY only	560 (510)	580 (530)	660 (610)	750 (700)	140	740	5	1588 (1531)		
						160	850	4	1269 (1212)		
						180	960	3	951 (894)		
								1.6	510 (453)		

Edited by AM-CIGA