


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

PERM, RUSSIA
BOLSHOE SAVINO
RNAV RWY 03

TRANSITION
LEVEL: **1**

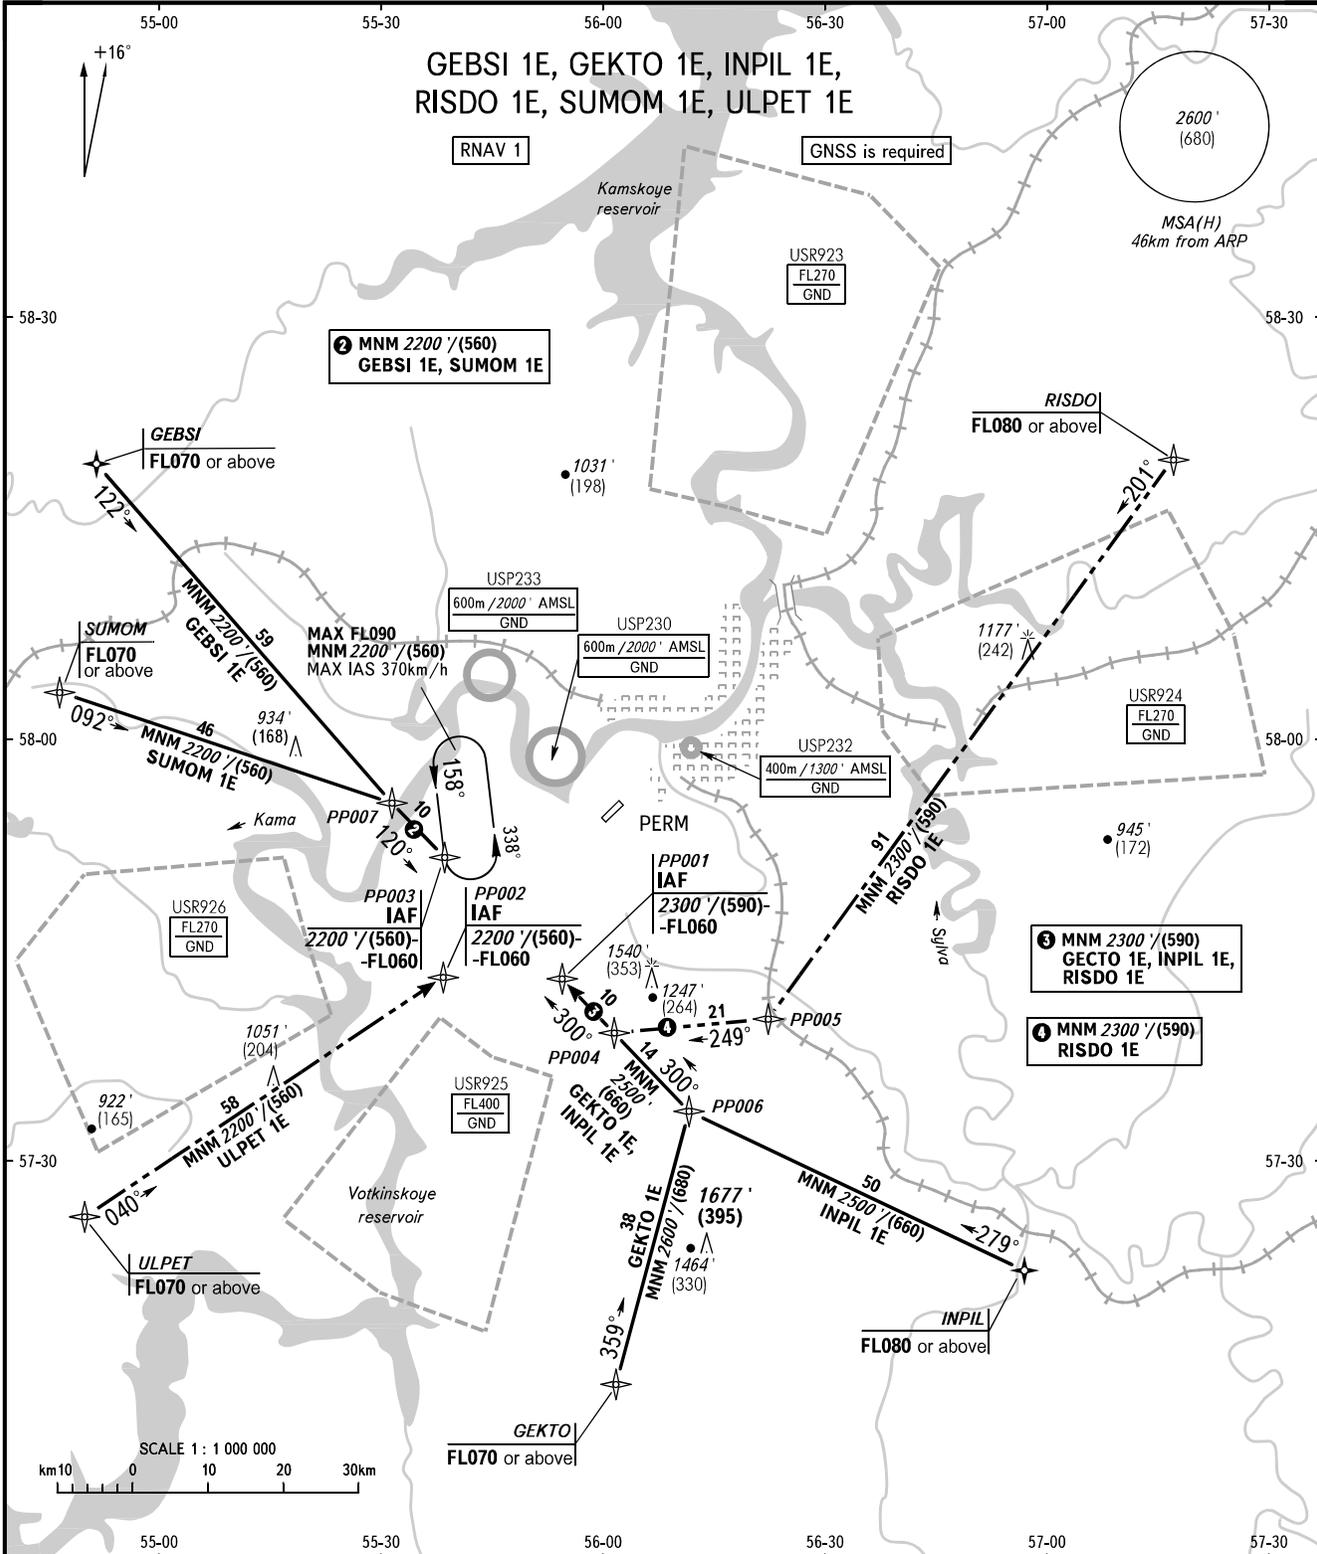

APPROACH 127.100
RADAR 121.700
START 124.000

1 TRANSITION LEVEL:
- FL050 when QNH is 1013 hPa (760mm mercury column) or above;
- FL060 when QNH is 977 hPa (733mm mercury column) or above,
but less than 1013 hPa (760mm mercury column);
- FL070 when QNH is less than 977 hPa (733mm mercury column).

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES AND ELEVATIONS IN FEET
HEIGHTS IN METRES
DISTANCES IN KILOMETRES

Alt set: - QNH (QFE on req);
- hPa (mm on req).