


STANDARD DEPARTURE CHART -
INSTRUMENT (SID) - ICAO

SANTA MARIA (LPAZ)

RWY18

SANTA MARIA TOWER 118.100
 PONTA DELGADA APPROACH 119.400
 SANTA MARIA RADAR 132.150

BEKUN 4S, BEKUN 4T, DOKAS 4S, DOKAS 4T, ETROX 4S
 GINSU 4S, GOMOS 4S, RODIL 4S, VMG 4S, XUVAP 2S

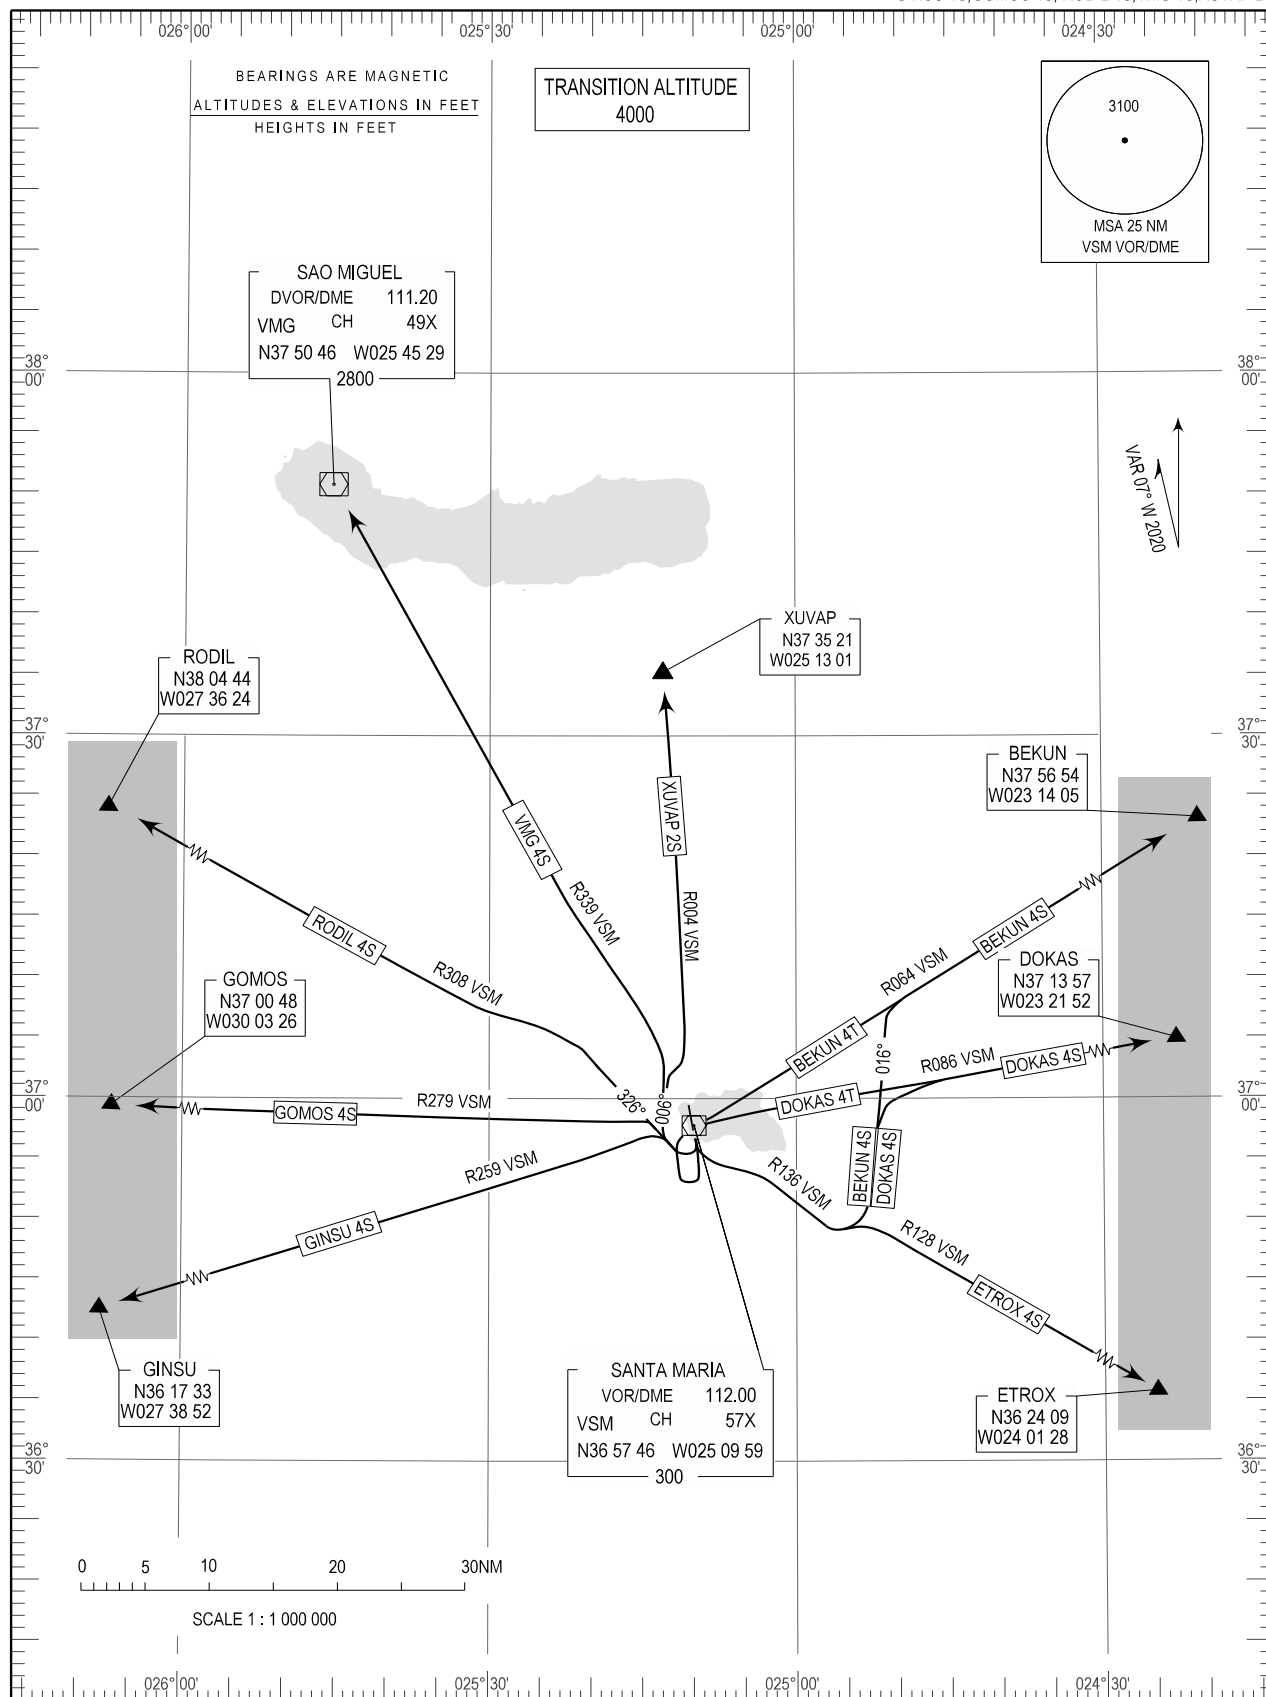

MAGVAR updated.

Santa Maria STANDARD INSTRUMENT DEPARTURE (SID) RWY 18

RUNWAY 18		
Designator	Route	Remarks
BEKUN 4S	Maintain takeoff heading until 1500FT QNH , then turn left to intercept and proceed VSM RDL 136. At 3100FT QNH climbing turn left to track 016 to intercept VSM RDL 064 to BEKUN.	-
BEKUN 4T	Maintain take-off heading until 1500FT QNH, then turn right to VSM VOR and proceed on VSM RDL 064 to BEKUN.	Note: cross VSM VOR at or above 3100FT QNH climbing.
DOKAS 4S	Maintain take-off heading until 1500FT QNH, then turn left to intercept and proceed VSM RDL 136. At 3100FT QNH climbing turn left to track 016 to intercept VSM RDL 086 to DOKAS.	-
DOKAS 4T	Maintain take-off heading until 1500FT QNH, then turn right to VSM VOR and proceed on VSM RDL 086 to DOKAS.	Note: cross VSM VOR at or above 3100FT QNH climbing.
ETROX 4S	Maintain take-off heading until 1500FT QNH, then turn left to intercept VSM RDL 136. AT 3100FT QNH climbing turn left to intercept VSM RDL 128 to ETROX.	-
GINSU 4S	Turn right to track 326 to intercept VSM RDL 259 to GINSU.	-
GOMOS 4S	Turn right to track 326 to intercept VSM RDL 279 to GOMOS.	-
RODIL 4S	Turn right to track 326 to intercept VSM RDL 308 to RODIL.	-
VMG 4S	Turn right to track 006 to intercept VSM RDL 339 to VMG.	Note - Remain West of VSM RDL 008/188.
XUVAP 2S	Turn right to track 006. When crossing VSM RDL 326 turn right to intercept and proceed on VSM RDL 005 to XUVAP.	Note - Remain West of VSM RDL 008/188.