


INSTRUMENT APPROACH CHART

RJSS / SENDAI


VOR RWY27

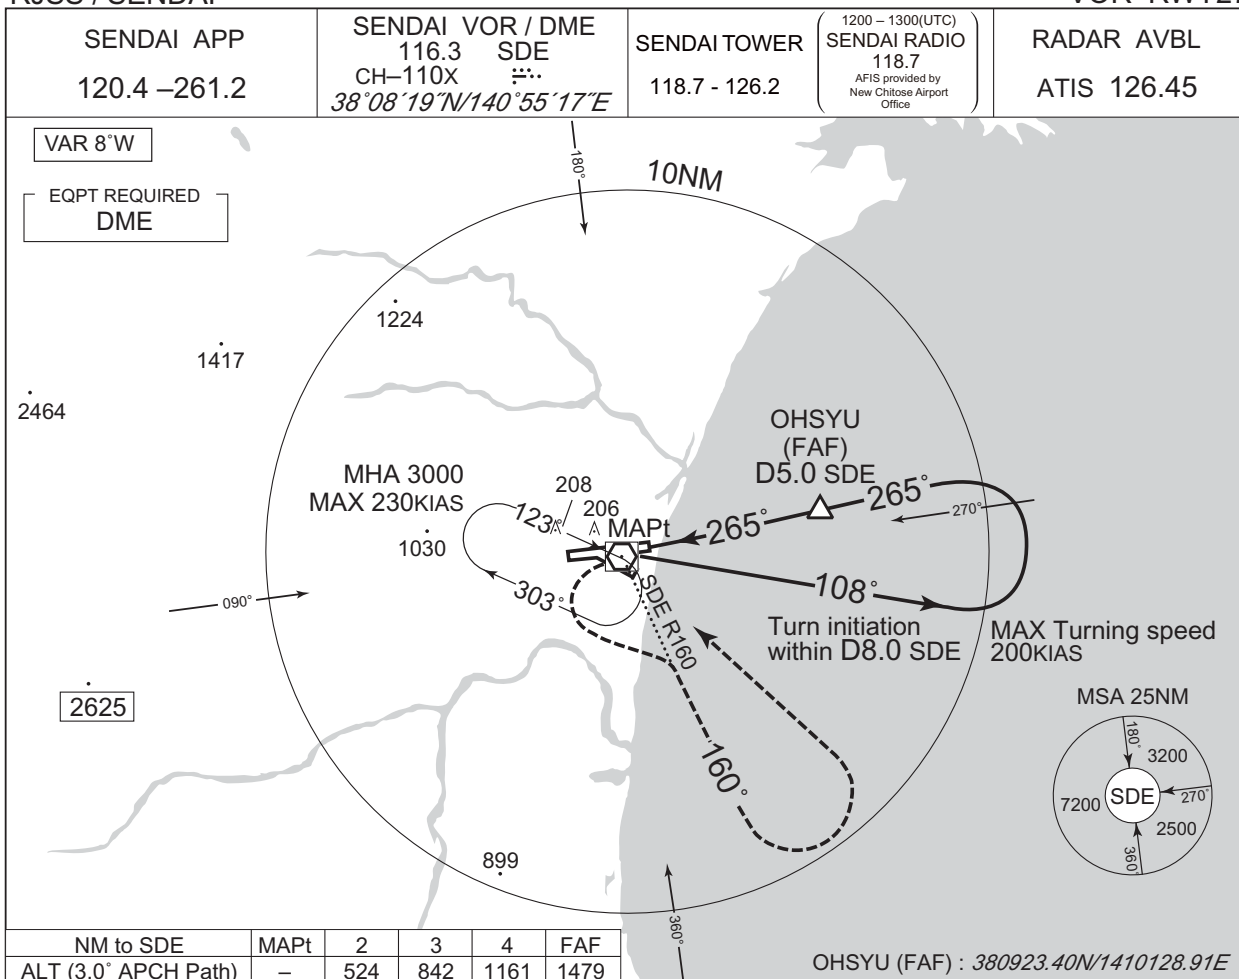

MISSED APPROACH

Turn left, climb via SDE R160 to 3000FT,
turn left, direct to SDE VOR/DME
and hold.
Contact SENDAI APP.

Timing not authorized for defining the MAPt.

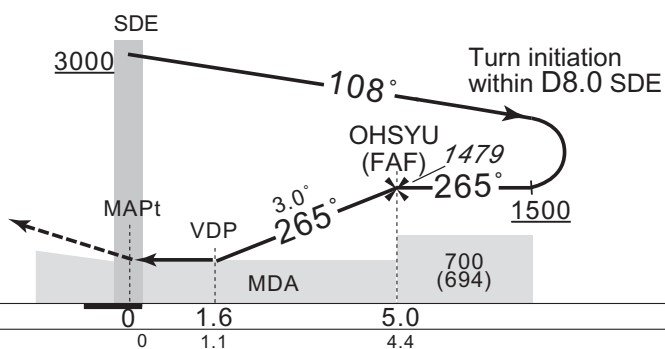

CHANGE : Description of PROC course.

MINIMA		THR elev. 15		AD elev. 6	
CAT			CIRCLING		
	MDA(H)	RVR/ CMV	MDA(H)	VIS	
A	390 (384)	900	530 (524)	1600	
B		1000			
C				2400	
D		1400	560 (554)	3200	