



ICAO - INSTRUMENT APPROACH CHART

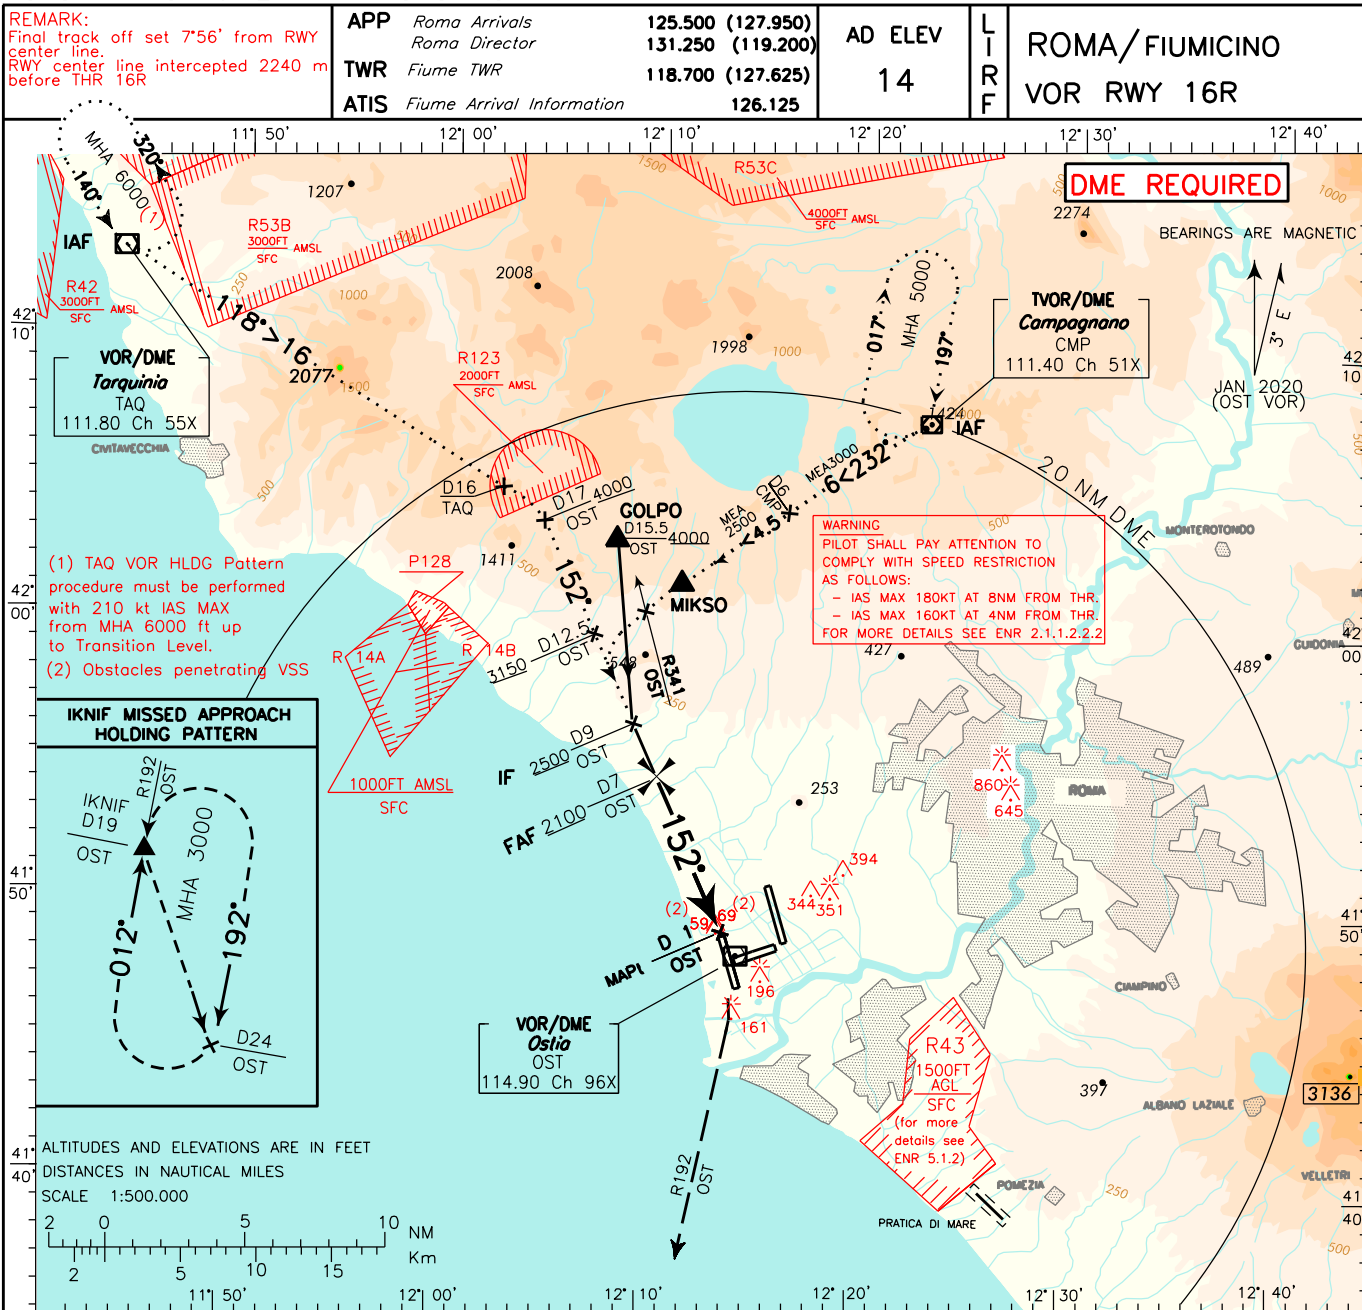

TRANSITION ALT 6000

MISSED APPROACH: Turn right to join RDL 192 OST VOR climbing to 3000 ft; cross 2000 ft not further than 9 NM OST DME; hold between 19 and 24 NM OST DME.

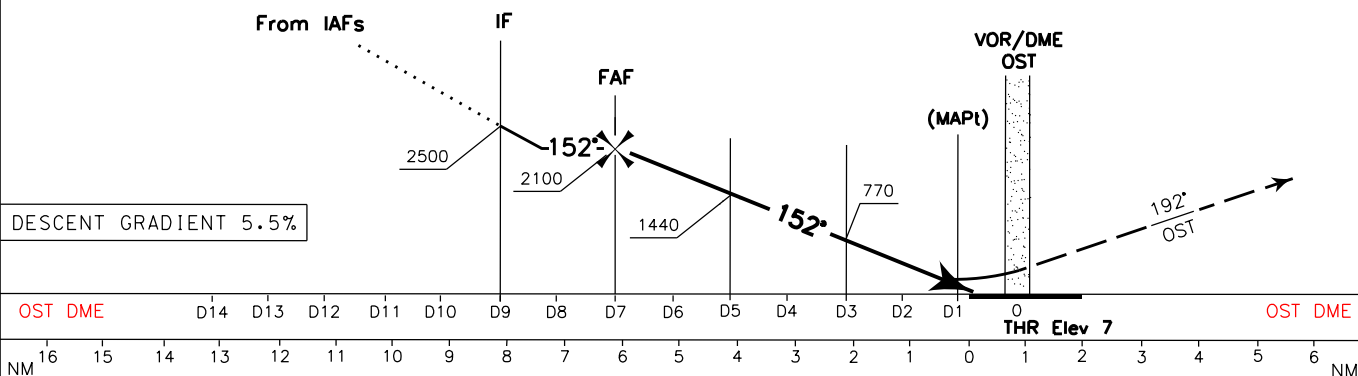

OCA(OCH)		A	B	C	D		FT per MIN	GS	FAF-MAP	DIST	ALT (HGT)	MNM SECT ALT OST VOR 
STRAIGHT IN APPROACH	VOR	400 (386)					445	80	4 : 30	6 DME	1766(1759)	
							555	100	3 : 36	5 DME	1432(1425)	
							670	120	3 : 00	4 DME	1098(1091)	
							780	140	2 : 34	3 DME	764 (757)	
CIRCLING	800 (786)			900 (886)			890	160	2 : 15	2 DME	430 (423)	