

INSTRUMENT APPROACH CHART-ICAO


VAR7°W

AERODROME ELEV 1.8
THR RWY34R ELEV 1.4

ATIS 126.4
TWR 118.875(118.425)
TWR 118.2(130.0)

ZBTJ TIANJIN/Binhai

RNAV ILS/DME RWY34R

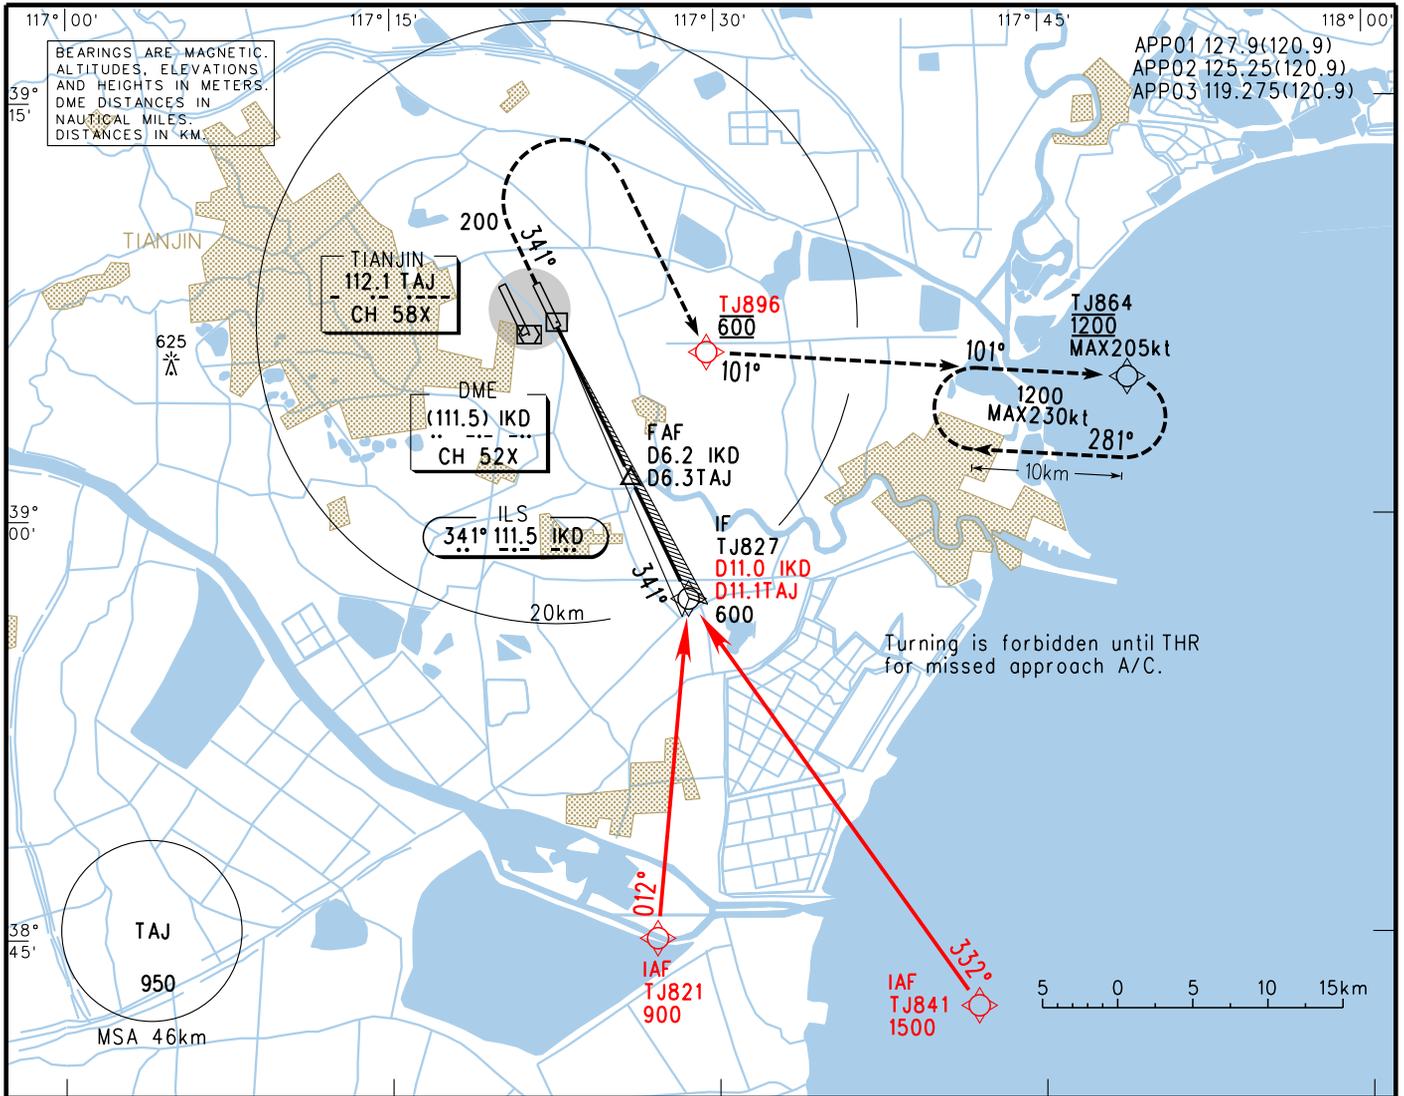

GP INOP	DME (IKD) (NM)	1	2	3	4	5	6	7
	ALT (m)		195	292	389	487	584	

MISSED APPROACH
Climb straight ahead to 200, turn RIGHT to TJ896. Strictly maintain 600, then turn LEFT to TJ864 maintain 1200, join in holding pattern; or by ATC.

TL 3600
TA 3000
3300(QNH ≥ 1031hPa)
2700(QNH ≤ 979hPa)

ILS/DME	DA(H) RVR/VIS	A	B	C	D	FAF - MAPt(GP INOP) 10.1km						
						GS in kt	100	120	140	160	180	
			62(60) 550/800			80	100	120	140	160	180	
						150	185	220	260	295	335	
						4:05	3:16	2:44	2:20	2:03	1:49	
						2.2	2.7	3.2	3.8	4.3	4.9	

Changes: Procedure, chart symbols.