


MAIQUETIA
INTL Simon Bolivar

DALSI VOR/DME CBC
104733N 0662038W 103424.8N 0660300.2W

SID RWY 09-10

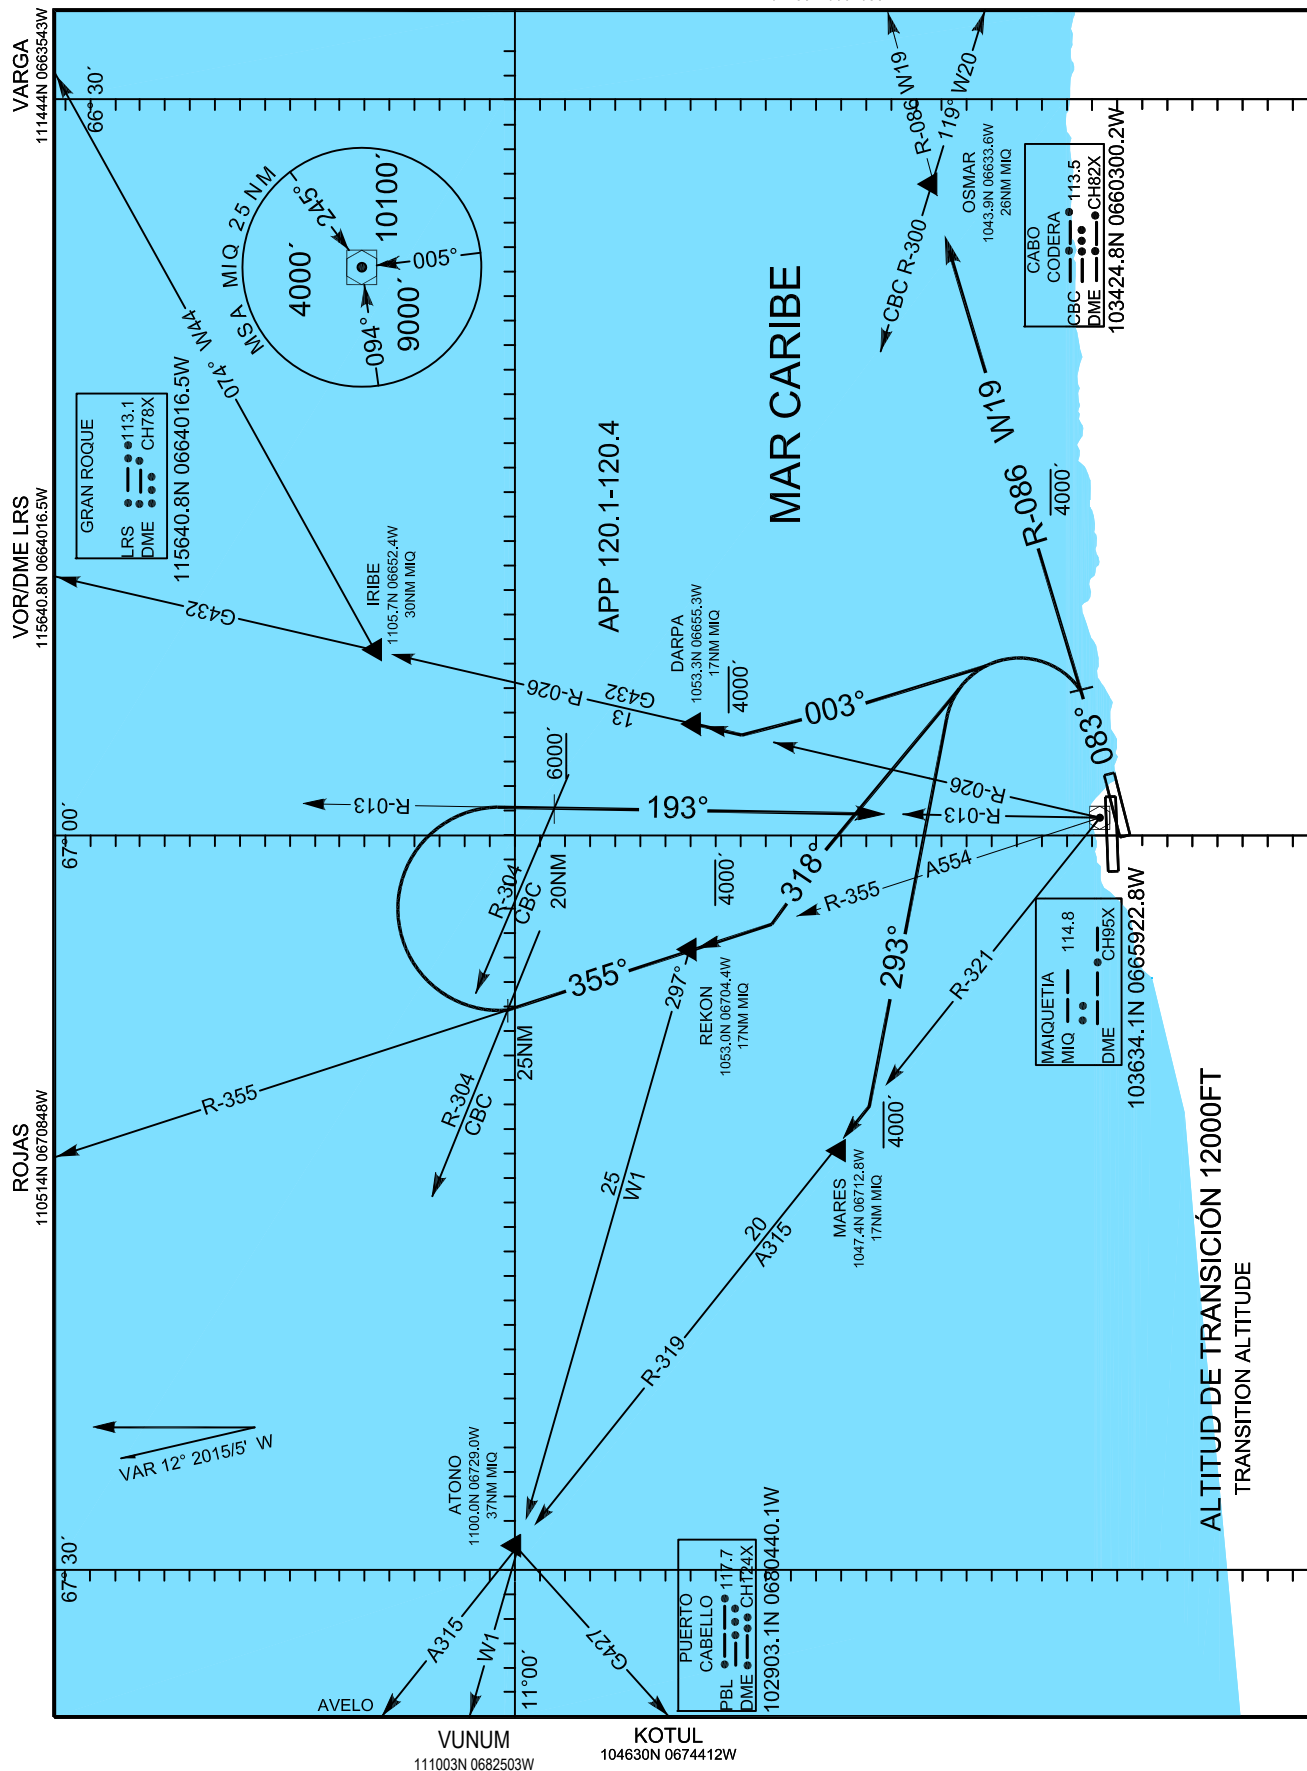

1 MARES: Con HDG 083° MAG ascienda hasta 750FT, vire a la izquierda HDG 293° MAG continue ascenso a 4000FT intercepte y siga RDL-321 MIQ a MARES, continuar ascenso según instrucciones del ATC.

3 REKON: Con HDG 083° MAG ascienda hasta 750FT, vire a la izquierda HDG 317° MAG y continue ascenso a 4000FT, intercepte y siga RDL-354 MIQ a REKON, continuar ascenso según instrucciones del ATC.

2 DARPA: Con HDG 083° MAG ascienda 750FT, vire a la izquierda HDG 003° MAG y continue ascenso a 4000FT intercepte y siga RDL-026MIQ a DARPA, continuar ascenso según instrucciones del ATC.

2 OSMAR: Con HDG 083° MAG ascienda hasta 750FT, vire a la izquierda e intercepte y siga RDL-086 MIQ continue ascenso a 4000FT a OSMAR, continuar ascenso según instrucciones del ATC.

2 MAIQUETIA: Con HDG 083° MAG ascienda hasta 750FT, vire a la izquierda HDG 317° MAG para interceptar y seguir RDL -355 MIQ en ascenso hasta 4000FT, pasado REKON continue hasta 25NM MIQ RDL-304 CBC vire a la derecha intercepte y siga RDL -013 MIQ hacia VOR/DME MIQ a 11000FT o superior , continuar ascenso según instrucciones del ATC.

1 MARES : With HDG 083° MAG climb to 750FT, turn left HDG 293° MAG continue climbing to 4000FT intercept and follow RDL-321 MIQ to MARES, continue climbing, according to ATC instructions.

3 REKON: With HDG 083° MAG climb to 750FT, turn left HDG 318° MAG and continue climb to 4000FT, intercept and follow RDL-355 MIQ to REKON, continue climbing according to ATC instructions.

2 DARPA: With HDG 083° MAG climb to 750FT, turn left HDG 003° MAG and continue climb to 4000FT, intercept and follow RDL - 026 MIQ to DARPA, continue climbing according to ATC instructions.

2 OSMAR: With HDG 083° MAG climb to 750FT, turn left intercept and follow R-086 MIQ continue climbing 4000FT to OSMAR, continue climbing according to ATC instructions.

2 MAIQUETIA: With HDG 083° MAG climb to 750FT, turn left HDG 318° MAG intercept and follow RDL -355 MIQ continue climbing 4000FT, past REKON continue until 25 NM MIQ R-304 CBC, turn right intercept and follow R-013 MIQ toward VOR/DME MIQ pass 20NM MIQ with 6000FT or above , VOR MIQ to 11000FT or above , continue climbing according to ATC instructions.