



AIRCRAFT PARKING / DOCKING CHART - ICAO

APRON EAST / ACL ELEV 345 FT

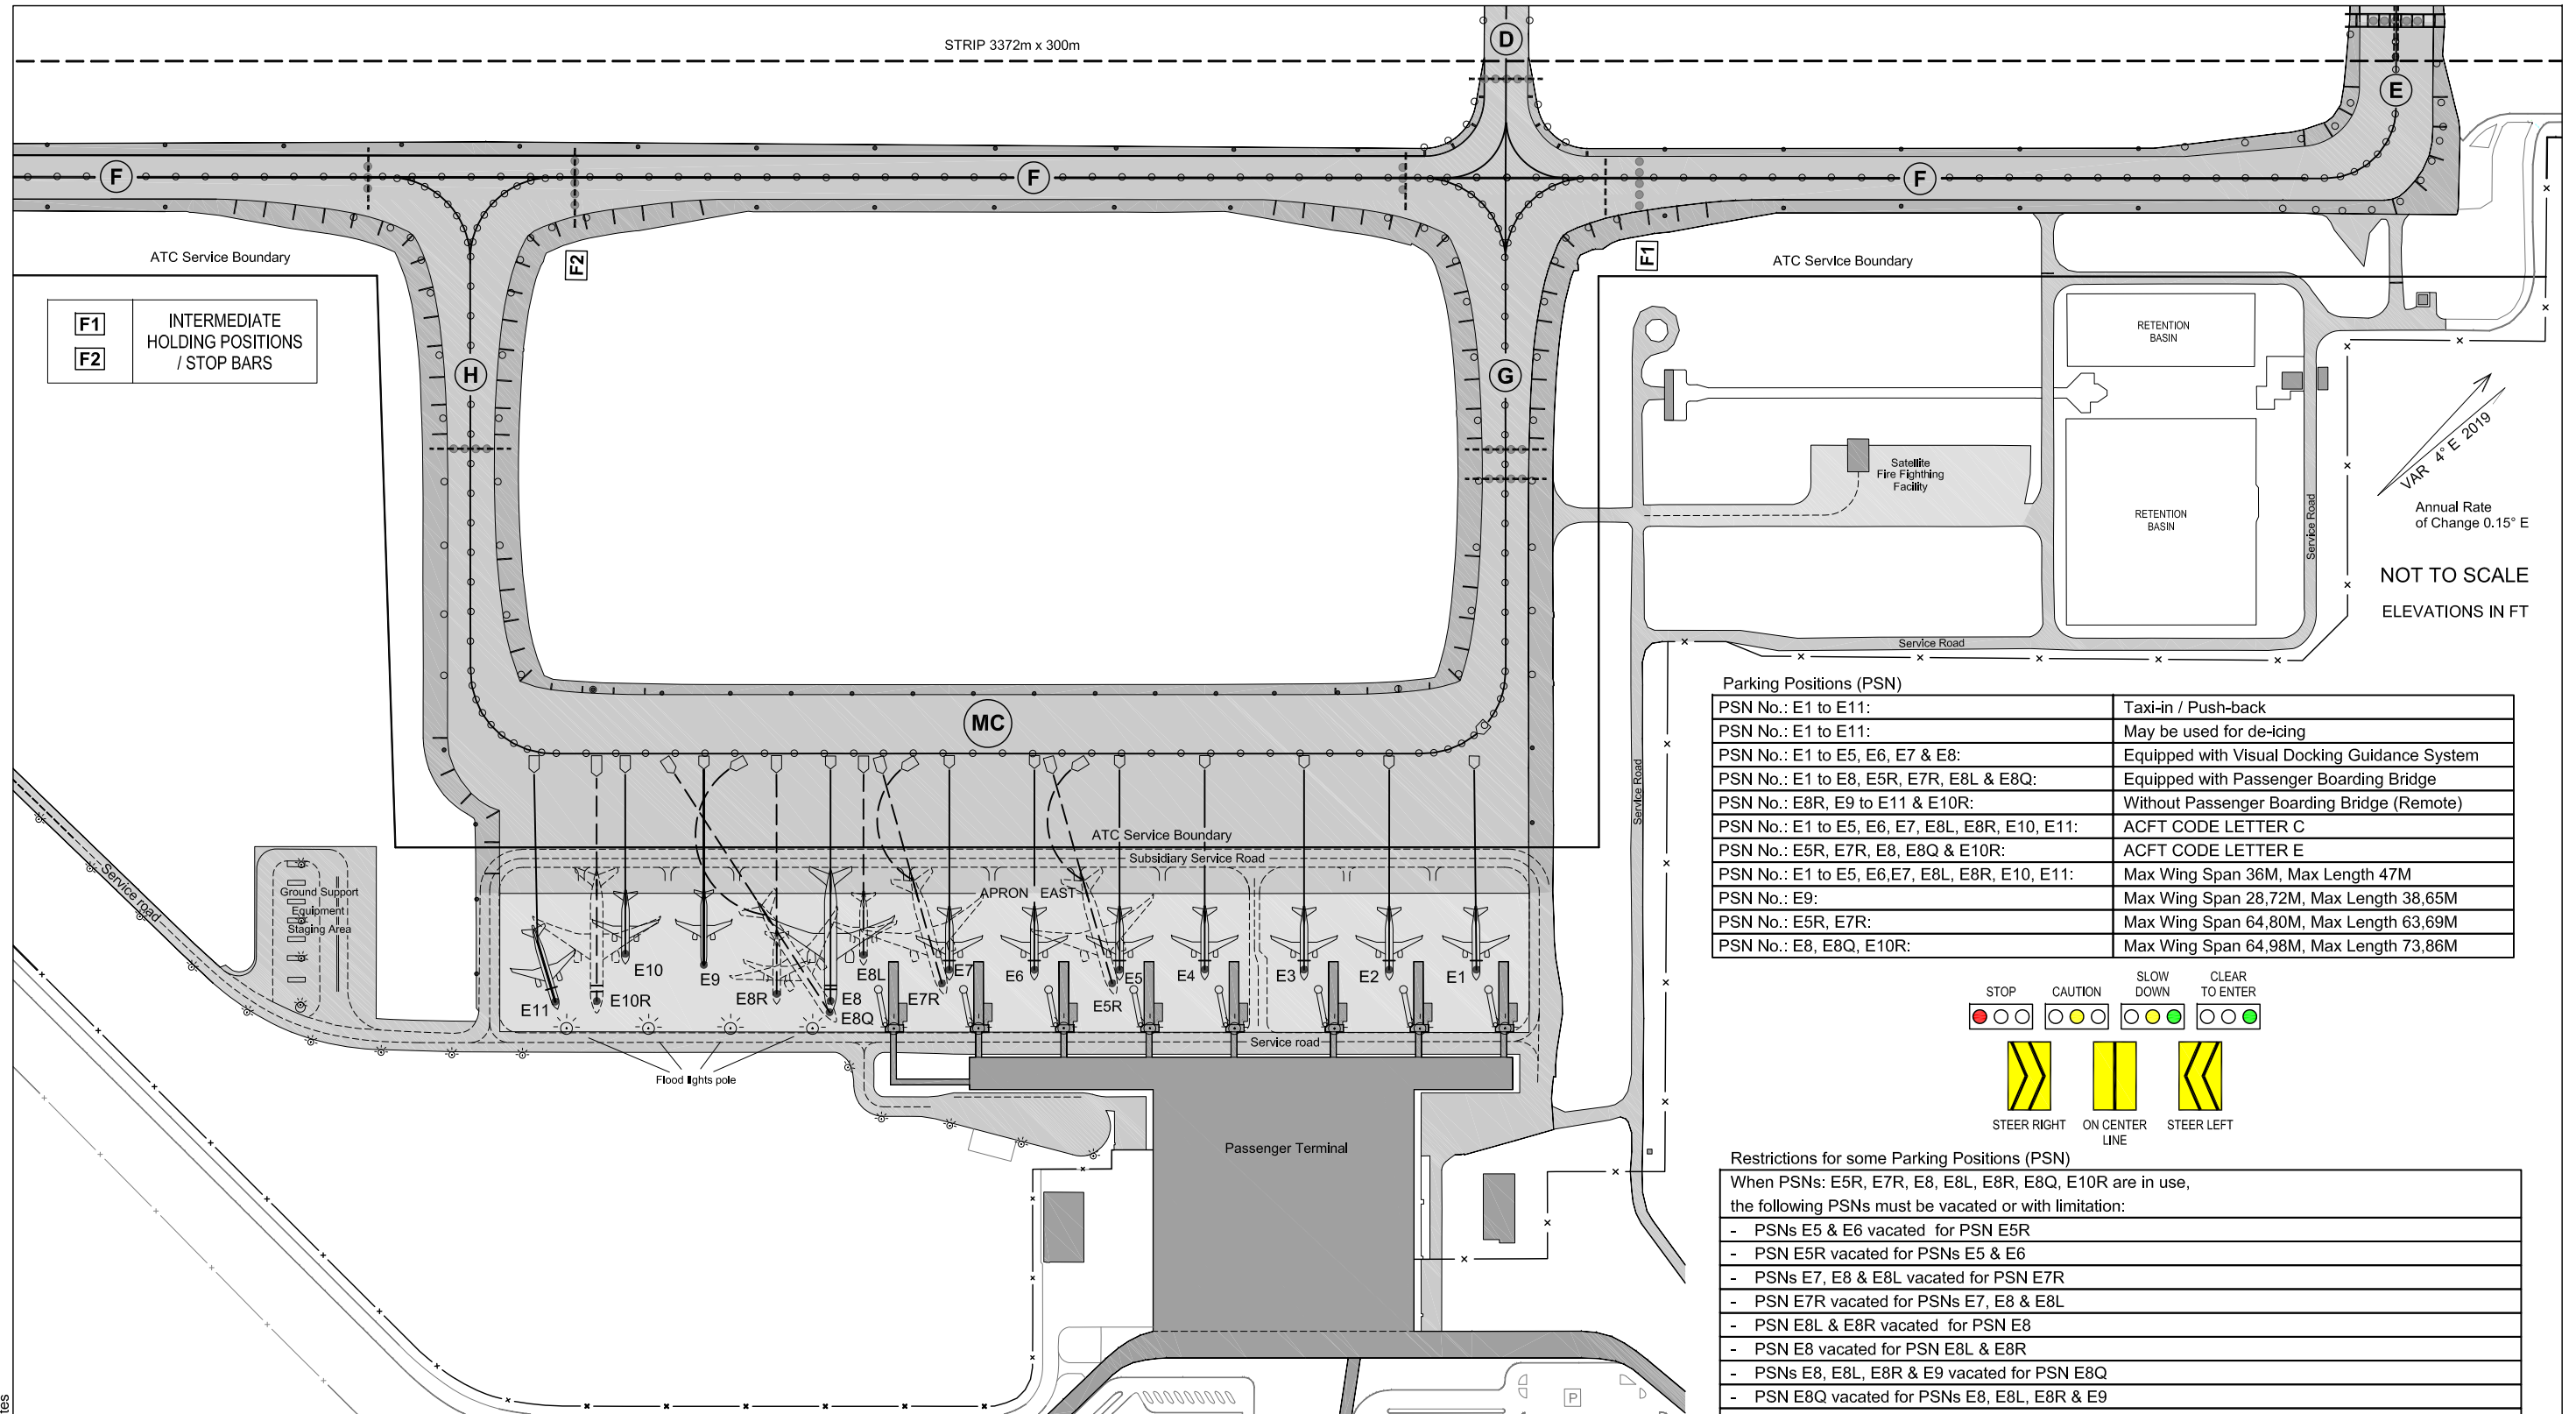

Parking Positions (PSN)

PSN No.: E1 to E11:	Taxi-in / Push-back
PSN No.: E1 to E11:	May be used for de-icing
PSN No.: E1 to E5, E6, E7 & E8:	Equipped with Visual Docking Guidance System
PSN No.: E1 to E8, E5R, E7R, E8L & E8Q:	Equipped with Passenger Boarding Bridge
PSN No.: E8R, E9 to E11 & E10R:	Without Passenger Boarding Bridge (Remote)
PSN No.: E1 to E5, E6, E7, E8L, E8R, E10, E11:	ACFT CODE LETTER C
PSN No.: E5R, E7R, E8, E8Q & E10R:	ACFT CODE LETTER E
PSN No.: E1 to E5, E6, E7, E8L, E8R, E10, E11:	Max Wing Span 36M, Max Length 47M
PSN No.: E9:	Max Wing Span 28,72M, Max Length 38,65M
PSN No.: E5R, E7R:	Max Wing Span 64,80M, Max Length 63,69M
PSN No.: E8, E8Q, E10R:	Max Wing Span 64,98M, Max Length 73,86M

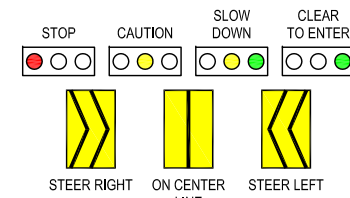

Restrictions for some Parking Positions (PSN)

When PSNs: E5R, E7R, E8, E8L, E8R, E8Q, E10R are in use, the following PSNs must be vacated or with limitation:

- PSNs E5 & E6 vacated for PSN E5R
- PSN E5R vacated for PSNs E5 & E6
- PSNs E7, E8 & E8L vacated for PSN E7R
- PSN E7R vacated for PSNs E7, E8 & E8L
- PSN E8L & E8R vacated for PSN E8
- PSN E8 vacated for PSN E8L & E8R
- PSNs E8, E8L, E8R & E9 vacated for PSN E8Q
- PSN E8Q vacated for PSNs E8, E8L, E8R & E9
- PSN E10 & E11 vacated for PSN E10R
- PSN E10R vacated for PSN E10 & E11
- Western part of service road must be vacated at the entrance/exit of ACFT to/from E11

PARKING POSITIONS AND INS / REFERENCE POINTS
PASSENGER TERMINAL APRON EAST

PSN NR	INS COORDINATES	PSN NR	INS COORDINATES
E1	454434.23N 0160448.45E	E8L	454427.51N 0160437.74E
E2	454433.25N 0160446.96E	E8	454426.59N 0160437.91E
E3	454432.29N 0160445.51E	E8R	454426.07N 0160436.88E
E4	454431.18N 0160443.81E	E8Q	454426.44N 0160438.08E
E5	454430.22N 0160442.36E	E9	454425.60N 0160435.17E
E5R	454429.97N 0160442.45E	E10	454424.85N 0160433.65E
E6	454429.26N 0160440.90E	E10R	454423.96N 0160433.92E
E7	454428.30N 0160439.44E	E11	454423.48N 0160433.21E
E7R	454428.05N 0160439.54E		

TAXIING AND PARKING RESTRICTIONS AND NOTES:
APRON EAST (E) IN FRONT OF NEW PASSENGER
TERMINAL

Enter/Exit to/from Apron
1. Via TWY G or H (as instructed by ATC)

Apron TWY
1. Apron TWY is MC.

Taxiing on Apron

- Parking position number for inbound traffic is provided by ATC.
- Adhere strictly to the yellow taxi guide line, Visual Docking Guidance System or manual parking / docking. For other restrictions adhere strictly to Zagreb Tower instructions and Follow me guidance.
- ACFT is not allowed to enter the parking position if Visual Docking Guidance System status is not "CLEAR TO ENTER" and / or marshaller is not present.

- Simultaneous entry / exit of ACFT to / from every second parking position is allowed for basic parking position for all ACFT code C and D, and for every second alternative parking position for ACFT code E is provided for inbound and outbound traffic.
- Mandatory notification of parking position number to ATC with start up / push-back request.

CHANGE: Taxiing and parking restrictions and notes

OVA STRANICA JE NAMJERNO OSTAVLJENA PRAZNA
THIS PAGE INTENTIONALLY LEFT BLANK