

STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

OSTAFYEVO, RUSSIA
OSTAFYEVO
RNAV Rwy 07/25

OSTAFYEVO TOWER	119.200
DOMODEDOVO RADAR	125.300 134.675 127.700
	132.050 129.800
MOSCOW APPROACH	127.200 128.000 134.000 131.200

PZ - 90.11 coordinates
② PZ - 90.02 coordinates

ESOLO 3Y, ROMTA 3Y, URAGO 3Y



RNAV 1

DME/DME or GNSS is required

HGT is given relative to RWY 07
THR ELEV 541 / 166m.

MSAAT/MSHAT is computed for surface air
temperature at the aerodrome -42.2°C.

TRANSITION
LEVEL: By ATC ①

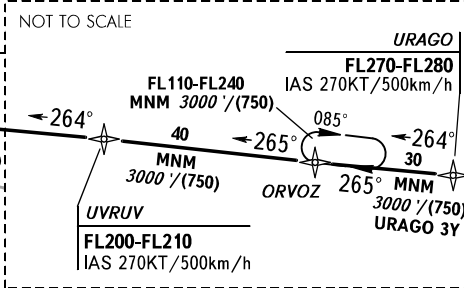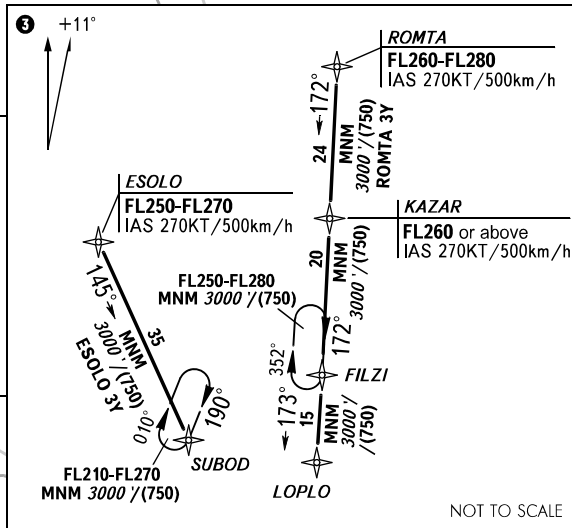

- ① TRANSITION LEVEL:
- FL110 when QNH is 1013 hPa (760mm mercury column) or above;
 - FL120 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
 - FL130 when QNH is less than 977 hPa (733mm mercury column).

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES IN FEET
HEIGHTS IN METRES
ELEVATIONS IN FEET AND METRES
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);
-hPa(mm on req).

