

**INSTRUMENT APPROACH
CHART (IAC)**

BOA VISTA / Atlas Brasil Cantanhede, INTL (SBBV)



ILS T ou / or LOC T RWY 08

AD ELEV: 276'

D-ATIS NIL	APP BOA VISTA 120.10 121.50		TWR BOA VISTA 118.10 121.50	GNDC NIL
LOC IBV 109.30 MHz	FINAL CRS 079°	FAF 1910'	CAT I DA / (OCH): REFER TO MNM	LOC only MDA / (OCH): 700' / (440')

APCH Perdida: Subir para **3000'**. Manter rumo **079°** até cruzar **1500'**. Então, curvar à ESQUERDA direto VOR BVI para espera.

Missed APCH: Climb to **3000'**. Maintain course **079°** until passing **1500'**. Then, turn LEFT direct to BVI VOR for holding.

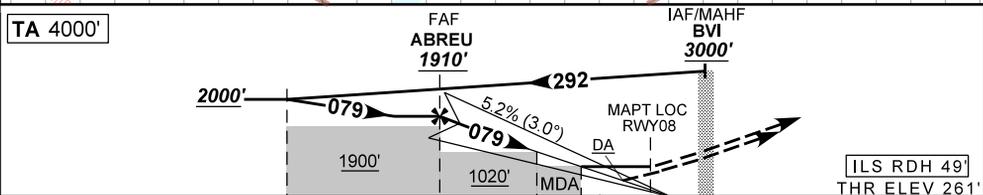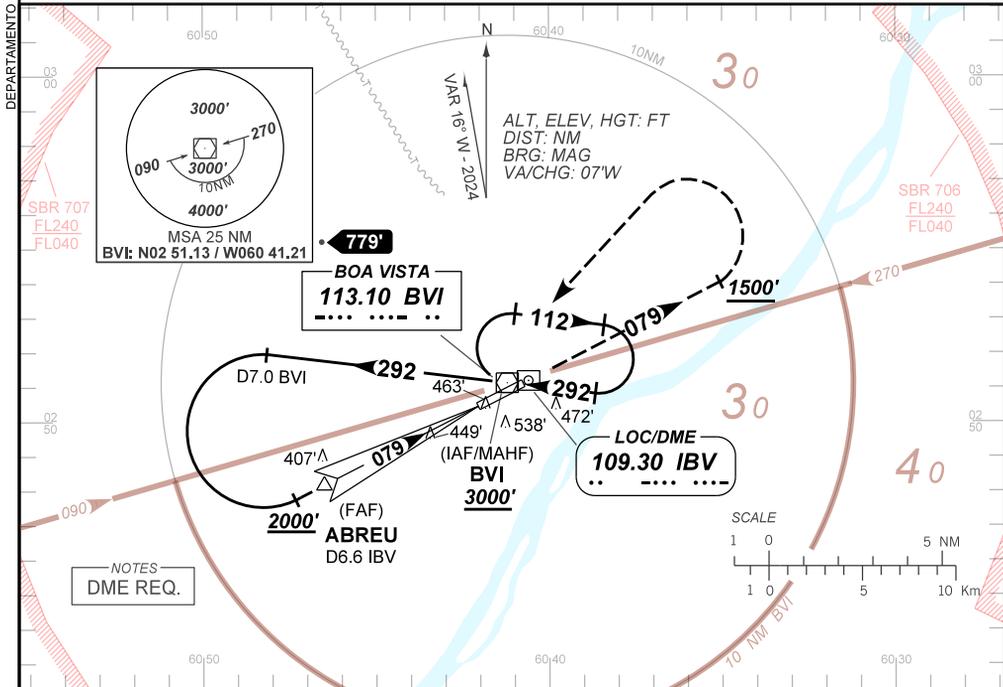

TO THR 08 (NM)	5.0	2.2	1.2	0.5	0.0
TO IBV (DME)	6.6	3.8	2.8	2.1	1.6

	ABREU	4.0	3.0	2.2	1.2	RWY08	KT	090	110	130	150	170	190
	1910	1584	1265	1020	700	ALT	FPM	500	600	700	800	900	1000
	1649	1323	1004	759	440	(HGT)	FAF-MAPT	NA					

STRAIGHT-IN	CAT	A	B	C	D	E
	DA / (OCH)	461' / (200')				512' / (251')
CAT I	ALS/NO ALS/ RVR ALS (m)	800 / 1200 / 550				800 / 1300 / 550
	MDA / (OCH)	700' / (440')				
LOC	ALS/NO ALS/RVR ALS (m)	800 / 1600 / 700			1300 / 2000 / 1100	
	MDA / (OCH)					
CIRCLING	MDA / (OCH)					
	VIS (m)	NA				

AIRAC AMDT 2408A1 08 AUG 24

SBBV_IAC_00Y 1/1

ILS T ou / or LOC T RWY 08

CHANGES: VAR. LAYOUT.

DEPARTAMENTO DE CONTROLE DO ESPAÇO AEREO