



**INSTRUMENT
APPROACH
CHART - ICAO**

**SYKTYVKAR, RUSSIA
SYKTYVKAR
RNP RWY 18**

SIVKAR RADAR 124.600

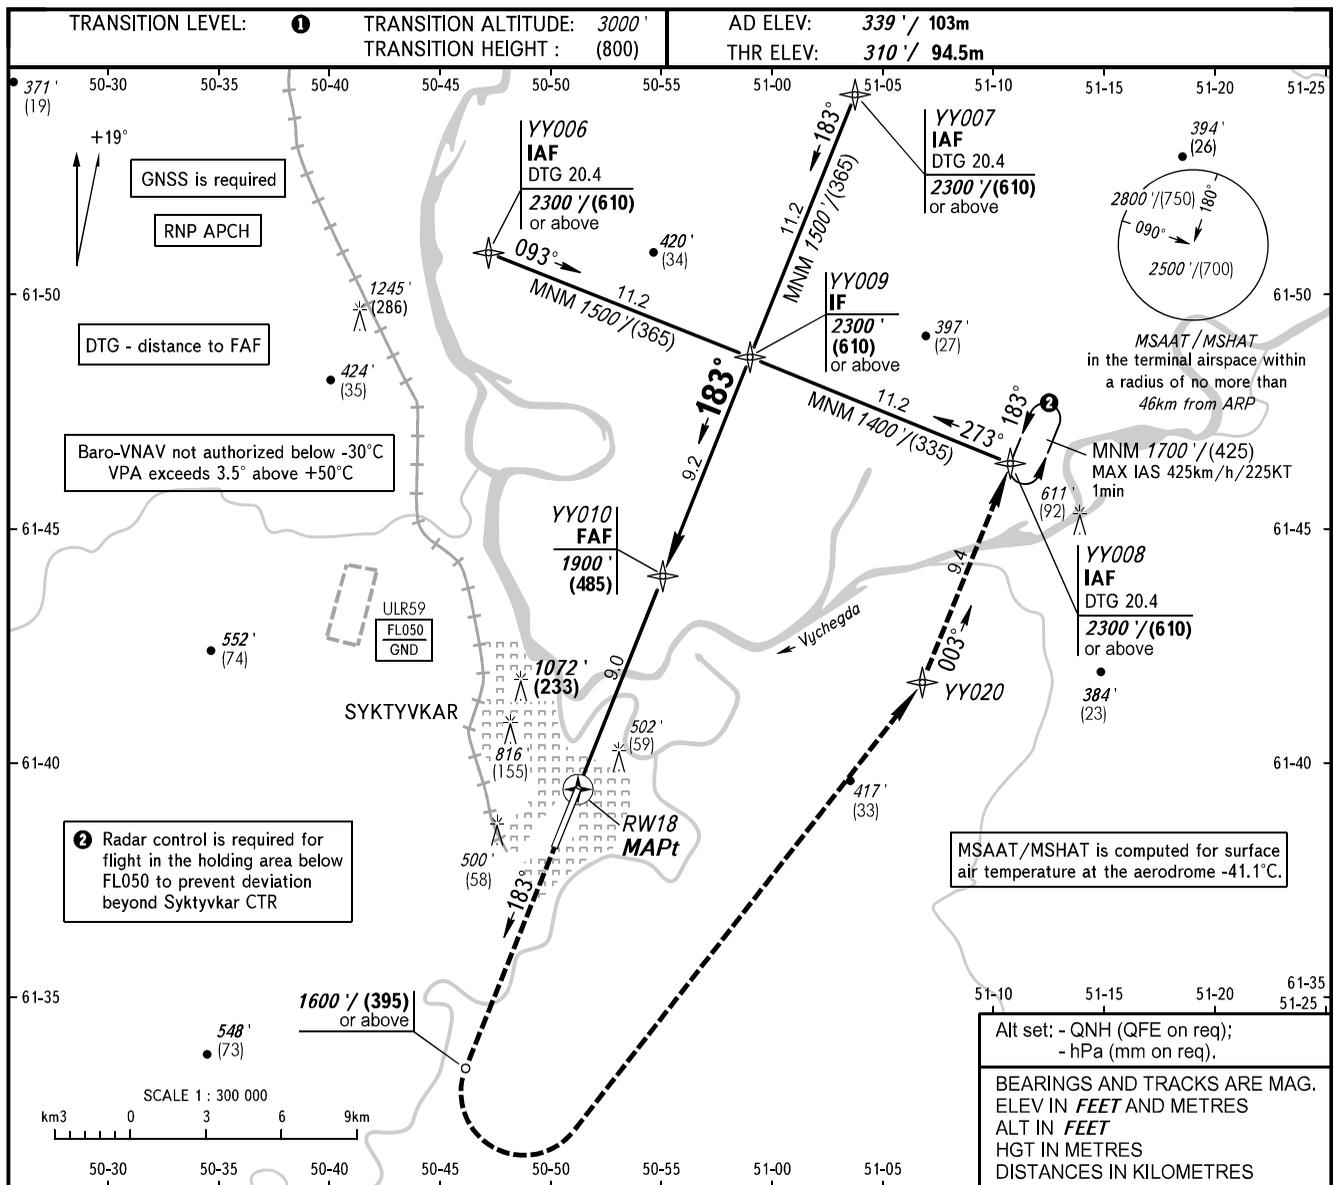

MISSED APPROACH			
Climb on track 183° to 1600' / (395) or above, turn LEFT to YY020, then to YY008 climbing to 2300' / (610) or above.	DIST to RW18	4.0	6.0
	ALTITUDE/HEIGHT	1050' / (225)	1740' / (435)

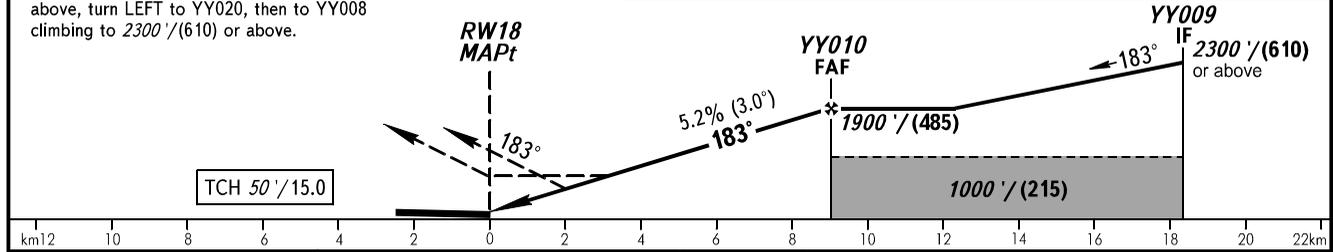

OCA(H)		A	B	C	D				
Straight-in	LNAV	810' (500') (155)	810' (500') (155)	810' (500') (155)	810' (500') (155)				
	LNAV/VNAV	693' (383') (117)	704' (394') (121)	711' (401') (123)	722' (412') (126)				
Circling		790' (450') (140)	840' (510') (155)	940' (600') (185)	1030' (700') (215)				
GROUND SPEED	km/h	150	180	210	240	270	300	330	360
	kt	81	97	113	130	146	162	178	194
RATE OF DESCENT	m/s	2.2	2.6	3.0	3.5	3.9	4.3	4.8	5.2
	ft/min	427	512	597	682	768	853	938	1024

① TRANSITION LEVEL:
- FL040 when QNH is 1013 hPa (760mm mercury column) or above;
- FL050 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL060 when QNH is less than 977 hPa (733mm mercury column).

WARNING
Visual manoeuvring west of the aerodrome is PROHIBITED.