# STANDARD DEPARTURE CHART INSTRUMENT (SID) - ICAO

TRANSITION ALT: **4000 '**
TRANSITION HGT: **(1185)**

# KRASNODAR, RUSSIA
PASHKOVSKIY
RNAV RWY 05R

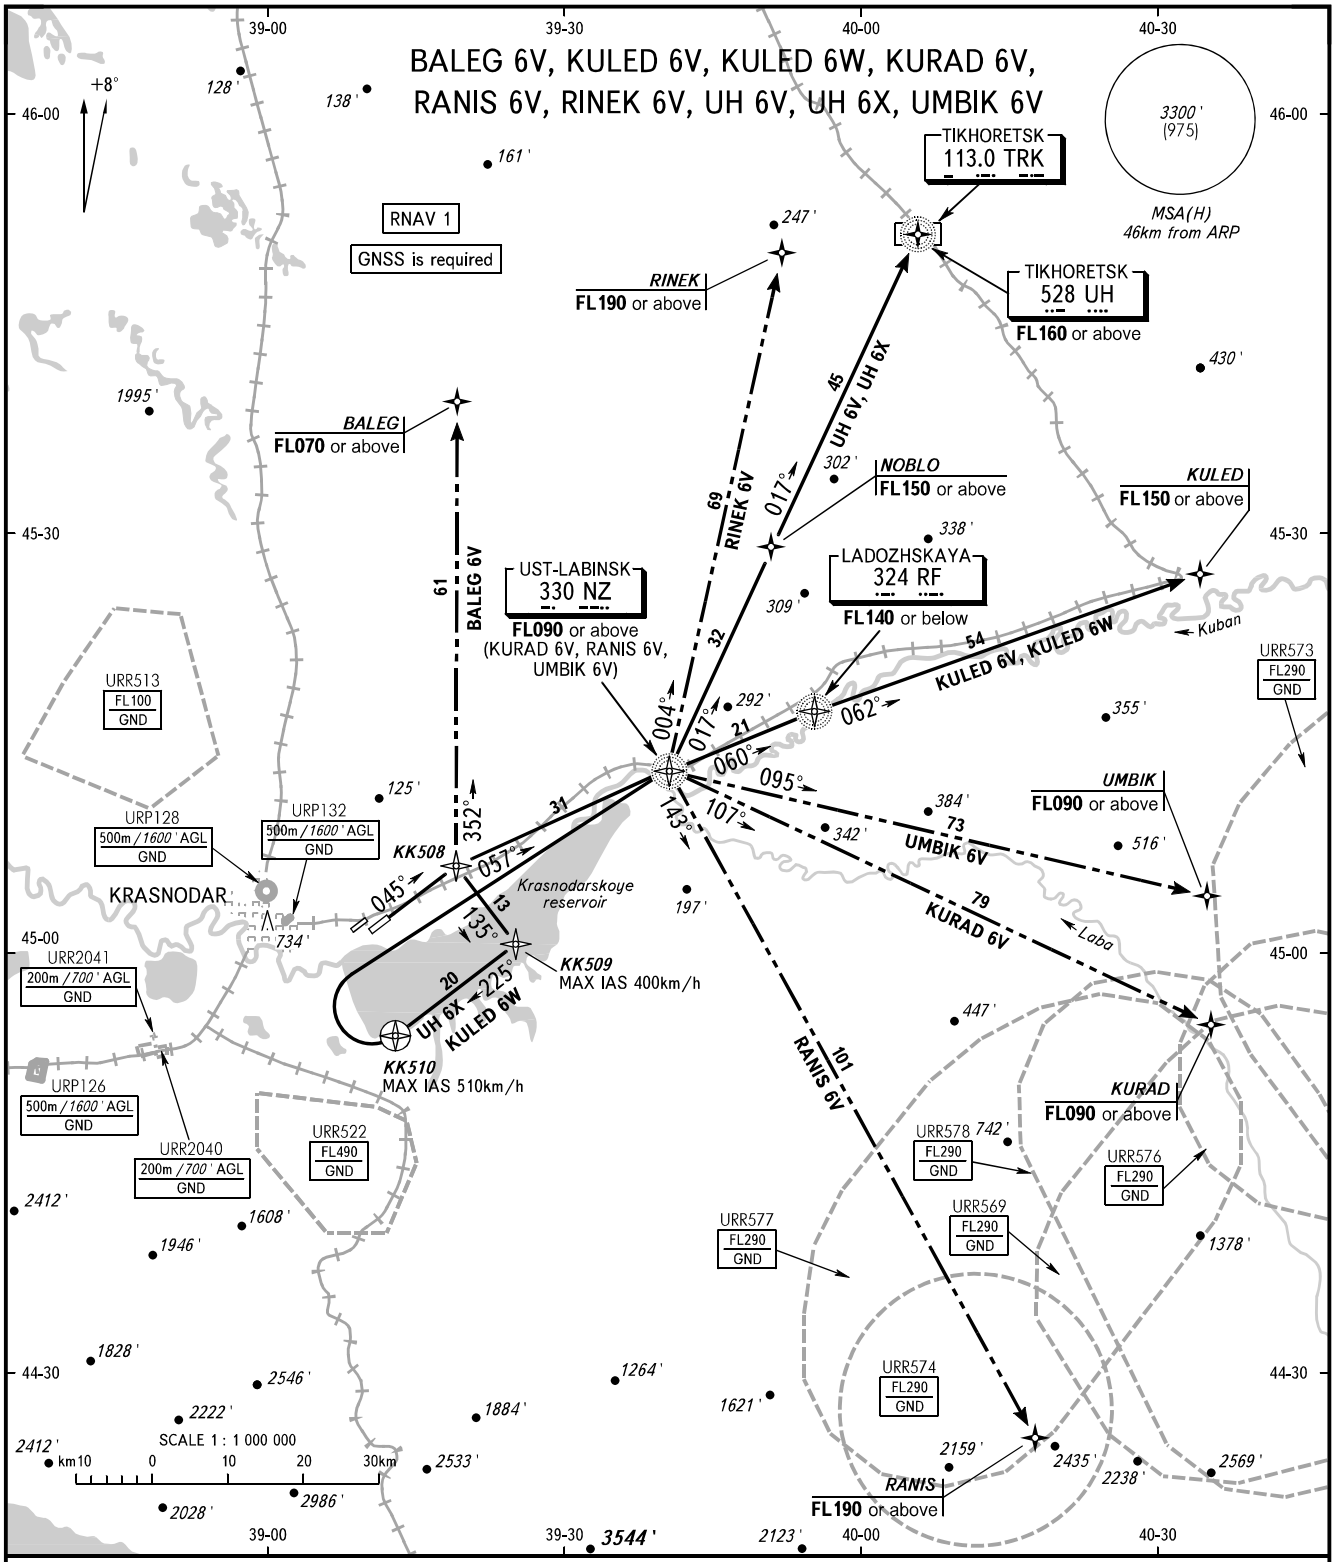


| | | |
|---|---|---|
| TOWER | | **118.200** |
| RADAR | | **121.300** |
| APPROACH | Sector WEST | **127.700** |
| | Sector EAST | **129.600** |

**WARNING**
The minimum climb gradients (required due to the airspace structure only) are as follows:
- 4.8% up to FL190 for SID RANIS 6V;
- 6.2% up to FL150 for SID UH 6V;
- 5.2% up to FL190 for SID RINEK 6V;
- 6.5% up to FL090 for SID KURAD 6V, RANIS 6V, UMBIK 6V;
- 6.8% up to FL140 for SID KULED 6V.

**NOTE:**
1. When URR574, URR577, URR569 are active, SID RANIS 6V is not AVBL.
2. When URR577, URR578, URR569, URR576, URR573 are active, SID KURAD 6V is not AVBL.
3. When URR573 is active, SID UMBIK 6V is not AVBL.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES AND ELEVATIONS IN *FEET*
HEIGHTS IN METRES
DISTANCES IN KILOMETRES

Alt set: -QNH(QFE on req);
-hPa(mm on req).

**CHANGE:** Warning, KULED 6W