INSTRUMENT APPROACH CHART - ICAO

VNUKOVO TOWER	**118.300**		
VNUKOVO RADAR	**123.400**	**126.000**	**135.900**

MOSCOW, RUSSIA
VNUKOVO
ILS CAT I/II RWY 06

TRANSITION LEVEL: ❶ TRANSITION ALT: *10000'* TRANSITION HGT: (2900)

AD ELEV: ***685'/209m*** THR ELEV: ***629'/191.5m***

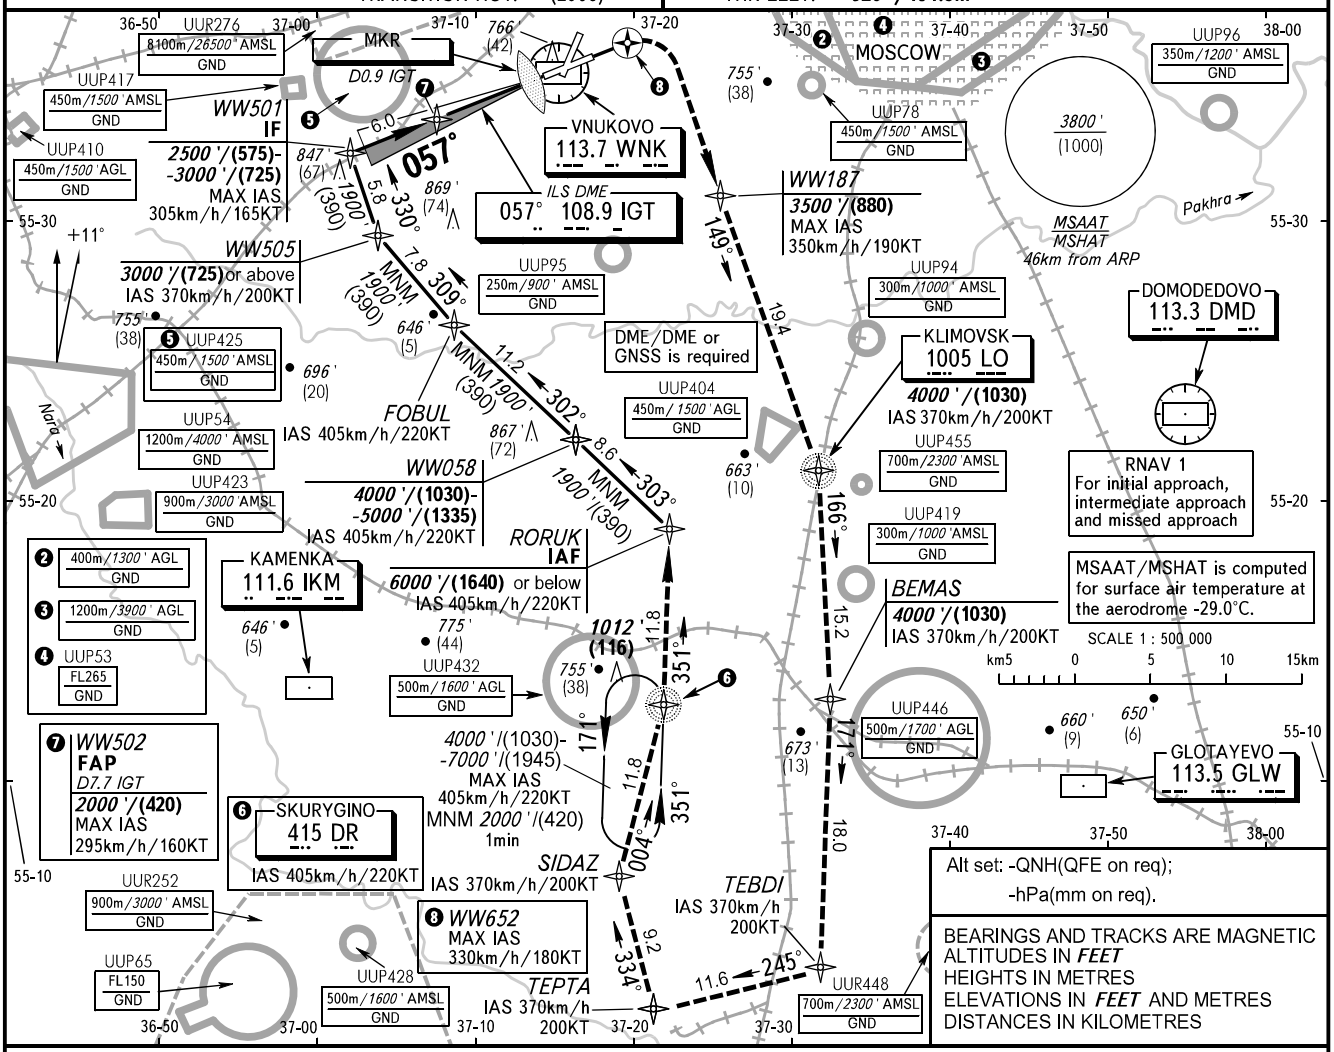

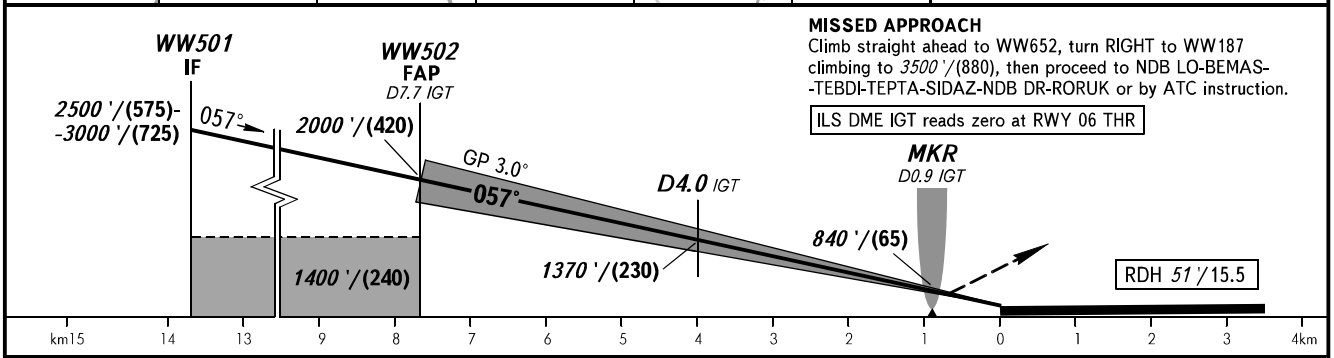

MISSED APPROACH
Climb straight ahead to WW652, turn RIGHT to WW187 climbing to *3500'*/(880), then proceed to NDB LO-BEMAS--TEBDI-TEPTA-SIDAZ-NDB DR-RORUK or by ATC instruction.

ILS DME IGT reads zero at RWY 06 THR

OCA(H)		A	B	C	D
Straight-in Approach	CAT I	*829'(200')*/(60)	*829'(200')*/(60)	*829'(200')*/(60)	*829'(200')*/(60)
	CAT II	*(100')*/(30)	*(100')*/(30)	*(100')*/(30)	*(100')*/(30)
Circling					

❶ TRANSITION LEVEL:
- FL110 when QNH is 1013 hPa (760mm mercury column) or above;
- FL120 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL130 when QNH is less than 977 hPa (733mm mercury column).

GROUND SPEED	km/h	*150*	*180*	*210*	*240*	*270*	*300*	*330*	*360*	*390*	*420*	*450*
RATE OF DESCENT	m/s	*2.2*	*2.6*	*3.0*	*3.5*	*3.9*	*4.3*	*4.8*	*5.2*	*5.6*	*6.1*	*6.5*
	ft/min	*427*	*512*	*597*	*682*	*768*	*853*	*938*	*1024*	*1109*	*1194*	*1280*

CHANGE: UUP