INSTRUMENT APPROACH CHART - ICAO

ANAPA RADAR	**118.700**
ANAPA TOWER	**119.800**

ANAPA, RUSSIA
VITYAZEVO
RNP RWY 03

TRANSITION LEVEL: ❶ | TRANSITION ALT: *4000 '* | TRANSITION HGT: (1180) | AD ELEV: ***176 '/54m*** | THR ELEV: ***139 '/42.5m***

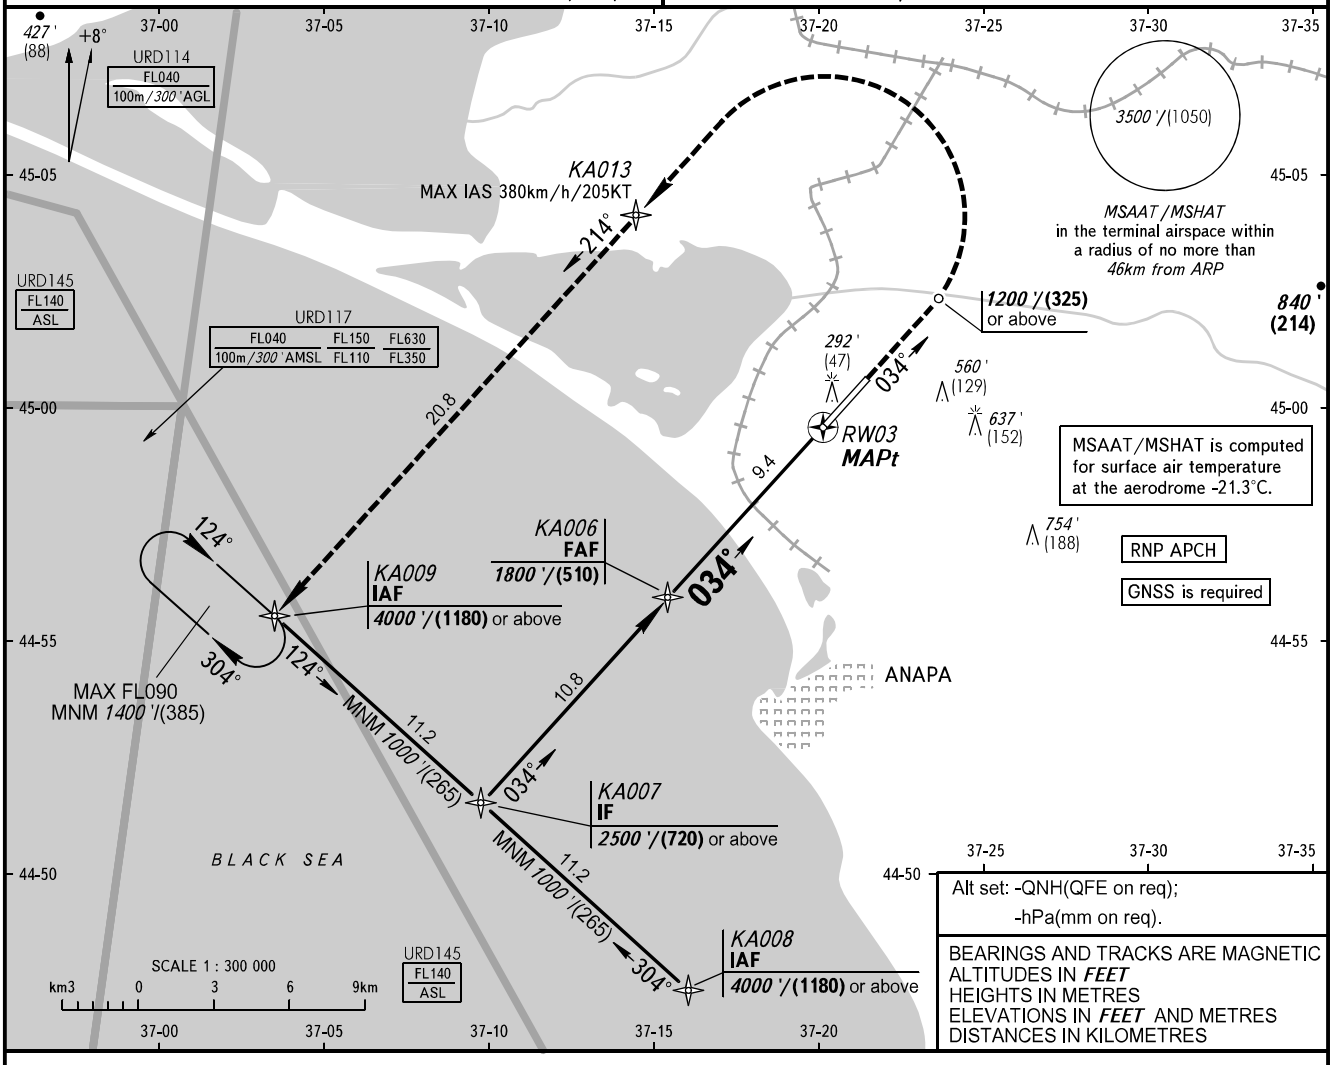

Alt set: -QNH(QFE on req);
-hPa(mm on req).

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES IN ***FEET***
HEIGHTS IN METRES
ELEVATIONS IN ***FEET*** AND METRES
DISTANCES IN KILOMETRES

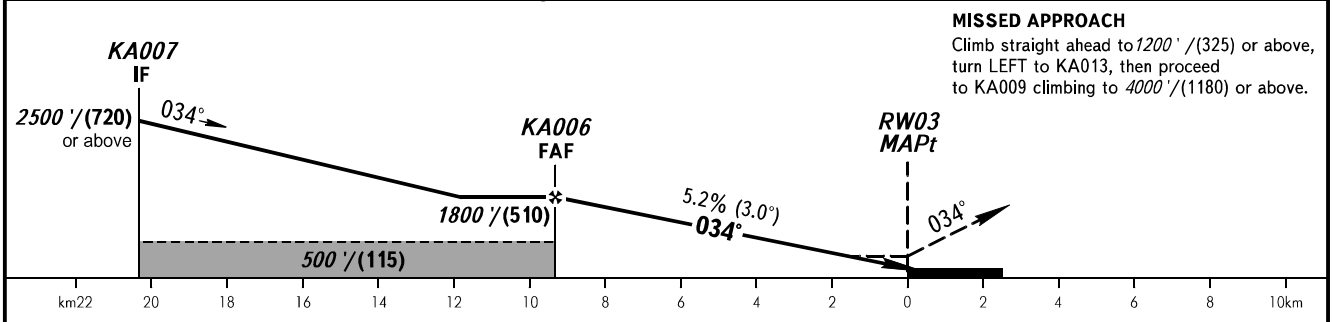

MISSED APPROACH
Climb straight ahead to *1200 '* /(325) or above, turn LEFT to KA013, then proceed to KA009 climbing to *4000 '*/(1180) or above.

OCA(H)		A	B	C	D
Straight-in Approach	**LNAV**	*510 '(380 ')* (115)	*510 '(380 ')* (115)	*510 '(380 ')* (115)	*510 '(380 ')* (115)
Circling		*860 '(680 ')* (210)	*940 '(760 ')* (235)	*1040 '(860 ')* (265)	*1150 '(980 ')* (300)

❶ TRANSITION LEVEL:
- FL050 when QNH is 1013 hPa (760mm mercury column) or above;
- FL060 when QNH is 977 hPa (733mm mercury column) or above, but less than 1013 hPa (760mm mercury column);
- FL070 when QNH is less than 977 hPa (733mm mercury column).

WARNING
MAPt at RW03.
Timing not authorized for defining MAPt.

GROUND SPEED	km/h	*150*	*180*	*210*	*240*	*270*	*300*	*330*	*360*	*390*
	kt	*81*	*97*	*113*	*130*	*146*	*162*	*178*	*194*	*211*
RATE OF DESCENT	m/s	*2.2*	*2.6*	*3.0*	*3.5*	*3.9*	*4.3*	*4.8*	*5.2*	*5.6*
	ft/min	*427*	*512*	*597*	*682*	*768*	*853*	*938*	*1024*	*1109*

CHANGE: URD145